




CITY SPORT - ONE

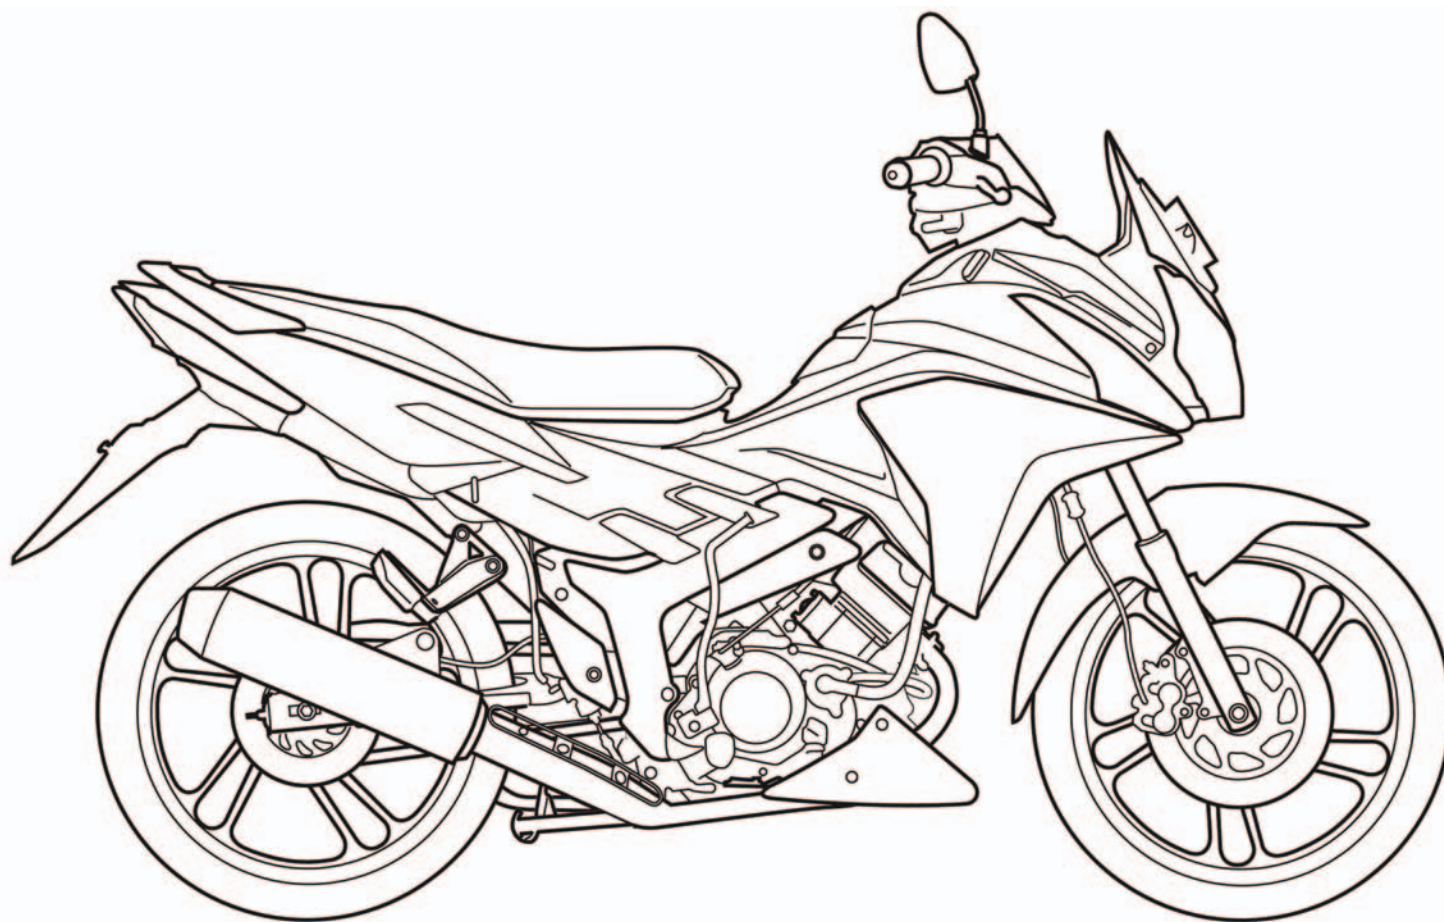

13 KWC | 1 AHJ

PARTS CATALOG
EDISI 1

DAFTAR ISI

PETUNJUK PEMAKAIAN

1

KELOMPOK MESIN

2

KELOMPOK RANGKA

3

INDEKS PART NUMBER

4

INDEKS DESCRIPTION

5

PETUNJUK PEMAKAIAAN PARTS CATALOG

Parts catalog ini digunakan untuk memesan/mencari parts pengganti; di dalamnya terdapat semua parts dan waktu kerja standard (F.R.T.) untuk tipe sepeda motor HONDA CITY SPORT - ONE (KWCA)

I. CARA MEMESAN PARTS

1. Informasi yang diperlukan

Pemesan parts pengganti sebaiknya mencantumkan Part Number dan Nomor seri seperti diterangkan dibawah. Hal ini diperlukan oleh karena setiap perubahan dan modifikasi pada parts telah didaftarkan di HONDA berikut nomor part dan Nomor seri yang bersangkutan.

Nomor-nomor yang dibutuhkan :

- (a) Parts mesin : Part Number dan Nomor seri mesin
- (b) Parts rangka : Part Number dan Nomor seri rangka
- (c) Parts karburator : Part Number dan Nomor identifikasi karburator


2. Perubahan-perubahan

Perubahan-perubahan pada parts catalog ini akan dimuat dalam Parts Bulletin yang diterbitkan sebagai pelengkap dari pada parts catalog ini. Bila jumlah perubahan-perubahan cukup banyak, pada suatu waktu dapat diterbitkan edisi baru yang disesuaikan daripada parts catalog ini, dan masing-masing edisi akan diberikan nomor urut pada sampulnya. Kami menganjurkan agar Sdr. selalu menyimpan parts bulletin bersama parts catalog ini, agar informasi parts Sdr. selalu lengkap dan up-to-date.


II. CARA MEMBACA PARTS CATALOG

1. Susunan nomor part

(contoh) Parts umum (General parts)

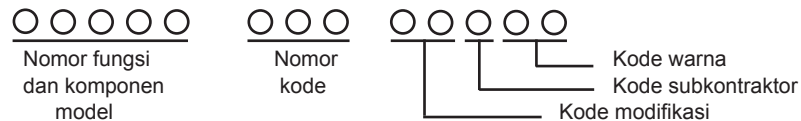

(contoh) Baut-baut, mur-mur dan standar parts lain.

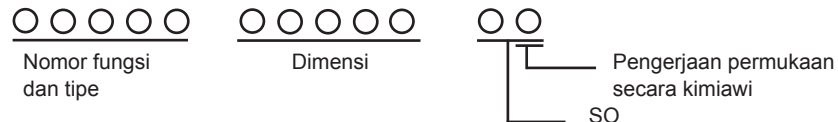

2. Kode warna

Kode warna pada bagian belakang nomor part menunjukkan warna part tersebut. Kode-kode ZA, ZB, ZC dan seterusnya tidak secara langsung menunjukkan warna part, melainkan warna dapat dilihat dari kode HONDA pada kolom "Part Number" di sebelahnya nomor part yang bersangkutan.

Kode warna pabrik seperti DSM, CSR, AFB dsbnya secara langsung menunjukkan warna part seperti ditunjukkan pada tabel berikut :

Kode Warna		Warna
Kode pabrik	Kode HONDA	
DSM	NHA30M	Digital Silver Metallic
CSR	R333C	Candy Scarlet Red
AFB	NHB12M	Affinity Black Metallic
DGM	YR293M	Diablo Gold Metallic

3. Singkatan-singkatan

Dibawah ini adalah daftar singkatan-singkatan yang digunakan di dalam parts catalog, sebagai berikut :

ASSY.....	Assembly	L.E.D	Light emitting diode
COMP	Complete.	MPH	Miles per hour
R.....	Right	L (100L).....	Link(100 Links)
L.....	Left	A.C	Alternating current
STD	Standard	D.C	Direct current
MM	Milimeter	IN	Inlet
G	Gram	EX.	Exhaust
T(22).....	Tooth (22Teeth)	FR	Front
A.....	Ampere	RR.....	Rear
V.....	Volt	Hex.....	Hexagonal
W.....	Watt	A.M.....	Attaching mark
WL.....	With labelling	T.M	Transcript mark
WOL.....	Without labelling	C.D.I	Capacitive
KPH.....	Kilometers per hour		Discharge Ignition

4. Dimensi-dimensi

Semua ukuran diberikan dalam satuan milimeter (mm) kecuali untuk peluru baja (steel balls), ban luar (tires) dan ban dalam (tire tubes).

Part	Contoh	Pengertian
Bolt (Screw)	6x12	diameter 6mm, panjang 12mm
Pin	8x14	diameter 8mm, panjang 14mm
O-Ring	9.5x1.6	diameter 9,5mm, tebal 1,6mm
Oil seal	14x24x5	diameter dalam 14 mm, diameter luar 24 mm, tebal 5mm
Tube	5x130	diameter dalam 5mm, panjang 130mm

5. Parts yang digantikan oleh part lain

Nomor part yang diletakkan dibawah nama part pada kolom "Description" menunjukkan bahwa nomor part disebelahnya telah diganti dengan nomor part tersebut. Pergantian parts sedemikian (supersedence) dapat dilakukan oleh HONDA tanpa pemberitahuan apapun.

6. Part yang dipersatukan (Assemblies)

Part pada gambar yang dikelilingi dengan garis terputus-putus tersedia sebagai parts yang dipersatukan. Masing-masing komponen daripada susunan parts itu dapat juga diperoleh secara terpisah.

7. Jumlah yang diperlukan

Angka didalam kolom "Q'ty" menunjukkan jumlah part tersebut yang dipakai di dalam bagian yang bersangkutan.

8. Ilustrasi

Gambar-gambar parts yang dimuat di dalam part catalog ini disediakan untuk mempermudah pengenalan part dan mungkin berbeda daripada bentuk part sebenarnya.

9. Nama part

Nama part tidak diterjemahkan kedalam bahasa Indonesia, melainkan tetap menggunakan istilah resminya didalam bahasa Inggris, agar seragam dengan istilah internasional yang dipakai di seluruh dunia oleh Honda Motor Co.,Ltd.

10. Model dan nomor seri yang berlaku


Model-model, kode daerah pemasaran dan nomor seri yang berlaku didalam parts catalog ini dapat diidentifikasi sebagai berikut dibawah ini.

Model	Kode daerah pemasaran	Tipe	No. Seri Mesin yang berlaku mulai	No. Seri Rangka yang berlaku mulai	No. Identifikasi Karburator yang berlaku
CS125MC9	IN	Indonesia	JBA1E*****	MH1JBA****K*****	AVK5AD A

* Dari nomor identifikasi karburator, hanya dipakai bagian yang digaris bawahi didalam contoh dibawah

AVK5AD A KC 7

11. Lokasi nomor seri pada sepeda motor

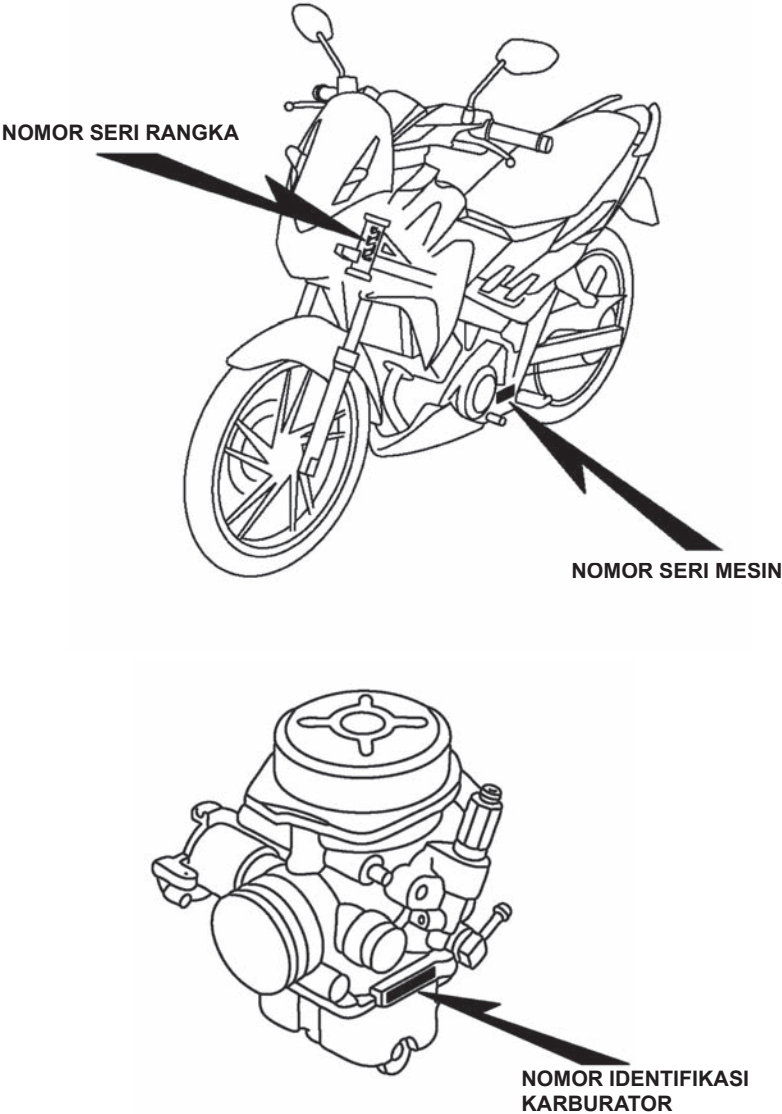

III. CARA MEMAKAI FLAT RATE TIME (F.R.T.)

F.R.T. (Flate Rate Time) yang terletak di halaman paling akhir buku ini dipakai untuk menentukan waktu kerja standard yang diperbolehkan untuk penggantian parts.

F.R.T untuk parts yang tidak tercantum didalam buku ini harus ditentukan dari jenis pekerjaan yang erat hubungannya dengan penggantian parts tersebut.

1. F.R.T. didasarkan atas kondisi servis sebagai berikut :
- a. Disamping waktu servis yang sebenarnya ditambahkan lagi waktu ekstra.
 - b. Waktu standard yang ditentukan didasarkan atas persyaratan bahwa alat-alat servis yang diperlukan seperti terdaftar didalam buku pedoman reparasi sudah siap tersedia, dan pekerjaan dilakukan oleh seorang mekanik dengan ketrampilan normal.
 - c Waktu yang dibutuhkan untuk pemeriksaan dan percobaan pemakaian setelah diservis, dimasukkan juga kedalam F.R.T.

2. Metode perhitungan

Waktu pekerjaan ditulis dalam sepersepuluh jam untuk mempermudah perhitungan.
(contoh) 0.3 = 18 menit
5.6 = 5 jam dan 36 menit

DAFTAR KONVERSI			
Jam	Menit	Jam	Menit
0.1	6	0.6	36
0.2	12	0.7	42
0.3	18	0.8	48
0.4	24	0.9	54
0.5	30	1.0	60

3. Menghitung F.R.T.

Jika beberapa pekerjaan dilakukan sekaligus, hitunglah sebagai berikut :

- a. Pekerjaan yang tidak berhubungan
F.R.T. untuk pekerjaan diperoleh dengan menjumlahkan F.R.T. untuk setiap part yang diganti
(contoh) Penggantian cylinder dan clutch spring

Service item/Bagian yang diservis	F.R.T.
Cylinder	1.4
Clutch spring	0.7

F.R.T. untuk pekerjaan ini adalah : 1.4 + 0.7 = 2.1

b. Pekerjaan yang terulang

Ambillah F.R.T. untuk part terakhir yang akan diganti.
(contoh) Penggantian piston dan cylinder head gasket.

Service item/Bagian yang diservis	F.R.T.	
Cylinder head gasket	1.0	
Piston	1.5	

F.R.T. untuk pekerjaan ini adalah : 1.5

c. Pekerjaan yang sebagian berhubungan

Jumlahkan F.R.T. untuk semua parts yang diganti dan kurangi dengan F.R.T untuk pekerjaan yang terulang.
(contoh) Penggantian gear shift drum dan crankshaft assembly.

Service item/Bagian yang diservis	F.R.T.	
Gearshift drum	* 3.9	
Crankshaft	* 4.1	
Pembongkaran crankcase	* 3.7	

F.R.T. untuk pekerjaan ini adalah : $(3.9 + 4.1) - 3.7 = 4.3$

Pekerjaan yang terulang adalah pembongkaran crankcase.

* F.R.T. dengan tanda (*) termasuk menurunkan dan memasang kembali mesin.

4. Pengerjaan lain disamping penggantian parts

a. Penurunan dan pemasangan

No.	Service item/Bagian yang diservis	F.R.T.
1.	Mesin	1.5
2.	Kepala silinder	1.1
3.	Karburator	0.4

No.	Service item/Bagian yang diservis	F.R.T.
1.	Pemeriksaan waktu pengapian	0.2
2.	Penyetelan dan pembersihan busi	0.1
3.	Penyetelan tappet	0.3
4.	Penyetelan stasioner karburator	0.1
5.	Pemeriksaan oli mesin (tidak termasuk penggantian oli mesin)	0.1
6.	Penyetelan kopling	0.1
7.	Pembersihan elemen saringan udara	0.3
8.	Pengukuran tekanan kompresi	0.1
9.	Pemeriksaan cairan batere dan berat jenisnya	0.2
10.	Pengukuran tinggi pelampung karburator	0.6
11.	Pembersihan saringan oli mesin	0.6
12.	Penyetelan gas tangan	0.1

Rangka


No.	Service item/Bagian yang diservis	F.R.T.
1.	Penyetelan rem depan	0.1
2.	Penyetelan rem belakang	0.1
3.	Pemeriksaan cara kerja rem	0.1
4.	Penyetelan arah lampu depan	0.1
5.	Rantai roda (termasuk penyetelan tegangan rantai tetapi tidak termasuk penggantian sprocket)	0.1

c. Pembongkaran


No.	Service item/Bagian yang diservis	F.R.T.
1.	Karburator	0.7

ENGINE GROUP


E-1 CYLINDER HEAD COVER

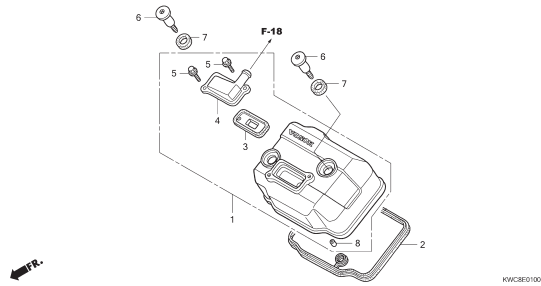


E-2 CYLINDER HEAD

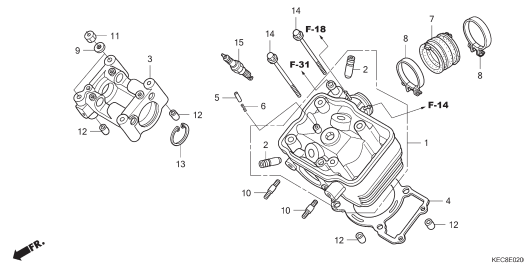


E-3 CAMSHAFT/VALVE

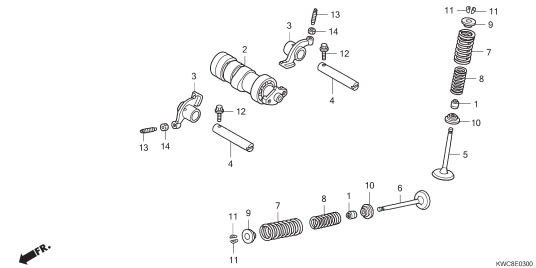


E-4 CAM CHAIN

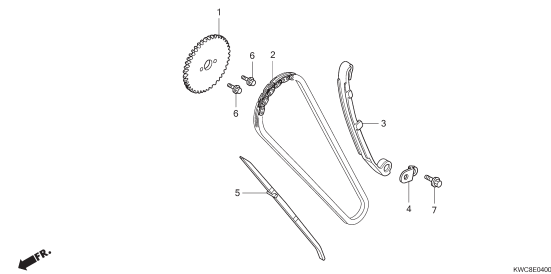


E-5 CYLINDER/TENSIONER

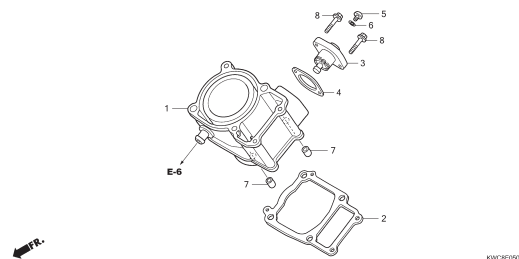


E-6 RIGHT CRANKCASE COVER

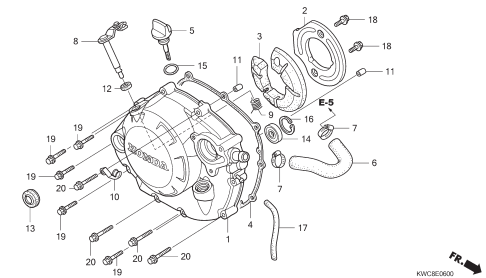


E-7 WATER PUMP

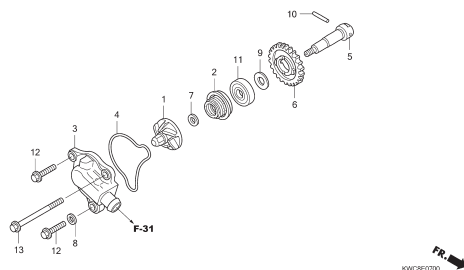

E-8 OIL PUMP

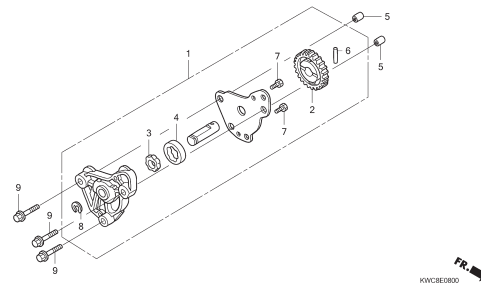


E-9 CLUTCH

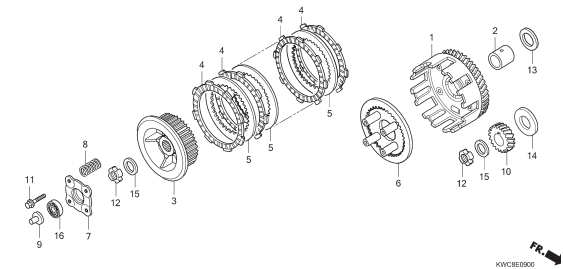


ENGINE GROUP

E-10

STARTING CLUTCH

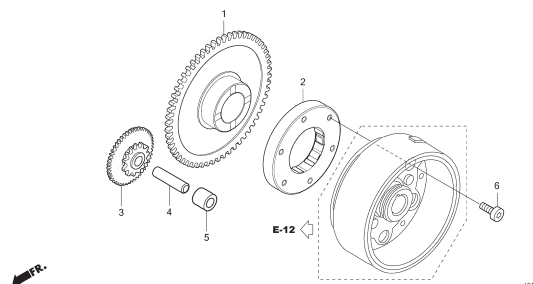


E-11 LEFT CRANKCASE COVER

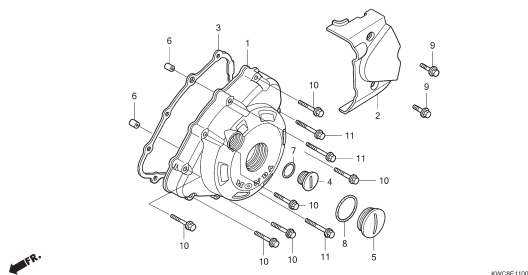


E-12

GENERATOR

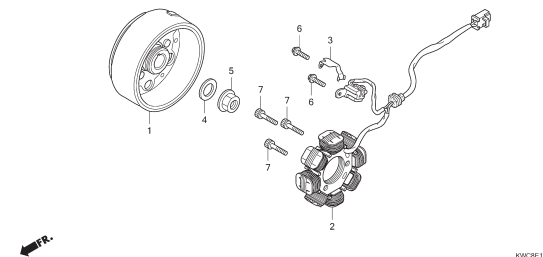


E-13

STARTER MOTOR

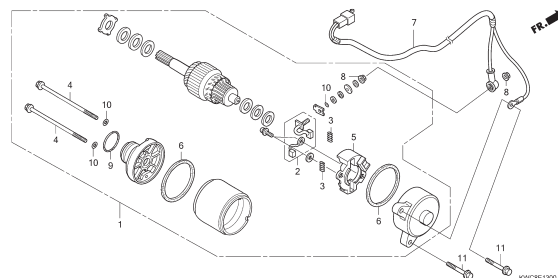


E-14

CRANKSHAFT/PISTON

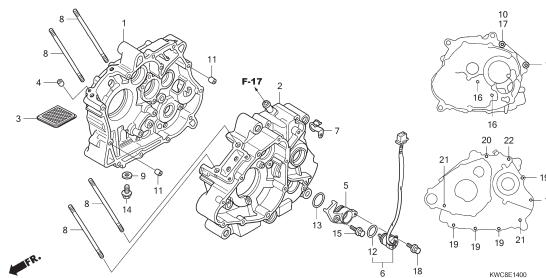


E-15

CRANK SHAFT/PISTON

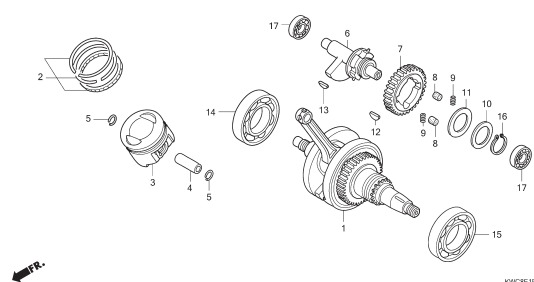


E-16

TRANSMISSION

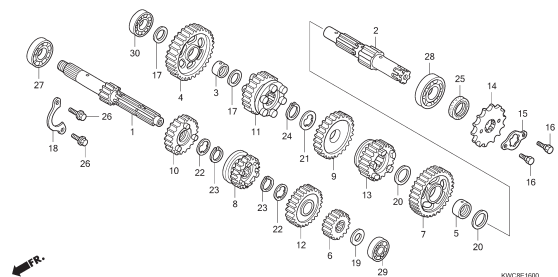


E-17

GEAR SHIFT DRUM

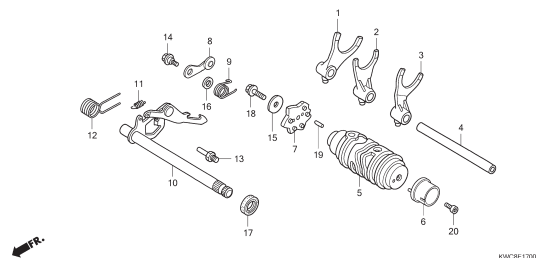


E-18

KICK STARTER SPINDLE

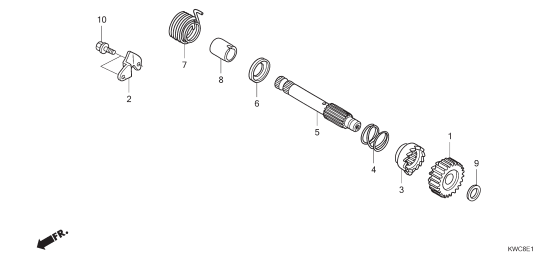

ENGINE GROUP


E-19 CARBURETOR

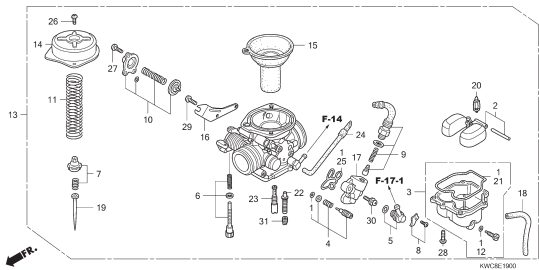

FRAME GROUP

F-1


HEADLIGHT

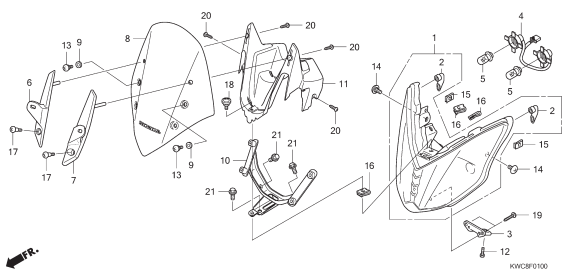

KWCBF0100


F-2

METER

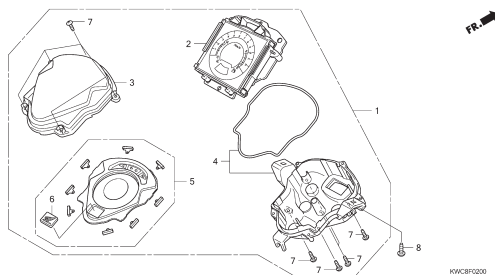


KWCBF0200

F-3 HANDLE LEVER/CABLE/MIRROR

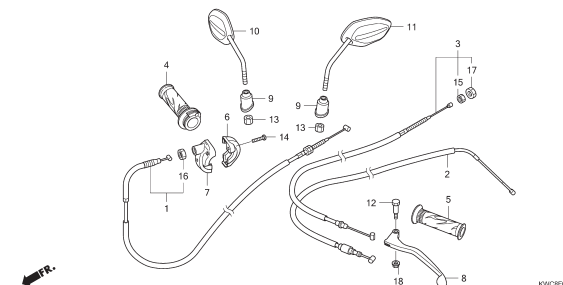

KWCBF0300


F-4 FRONT BRAKE MASTER CYLINDER

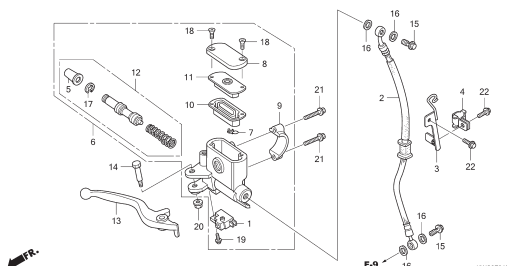

F-9

KWCBF0400


F-5 STEERING HANDLE/HANDLE COVER/ SWITCH

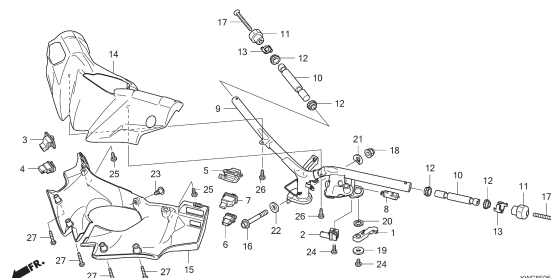

KWCBF0500

F-6


STEERING STEM

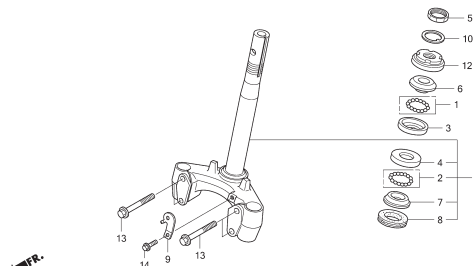

KWCBF0600

F-7


FRONT FENDER

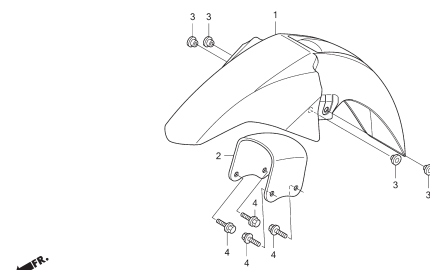

KWCBF0700

F-8


FRONT FORK

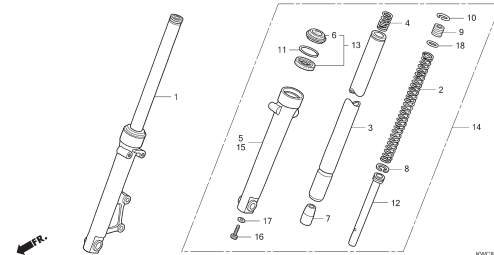

KWCBF0800

F-9


FRONT BRAKE CALIPER

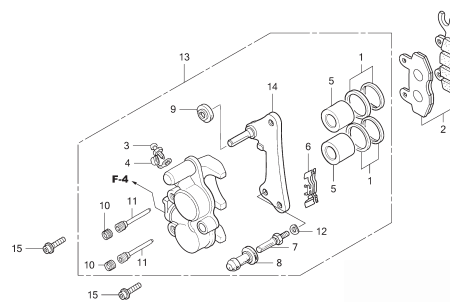


KW

FRAME GROUP


F-10 FRONT WHEEL

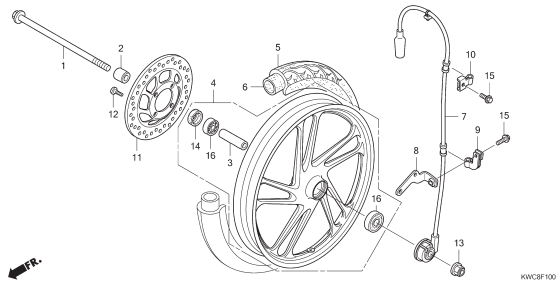


F-11 RR. BRAKE MASTER CYLINDER

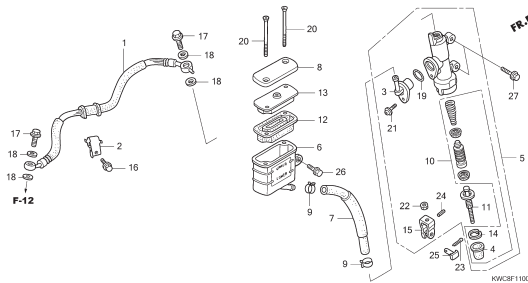


F-12 REAR BRAKE CALIPER

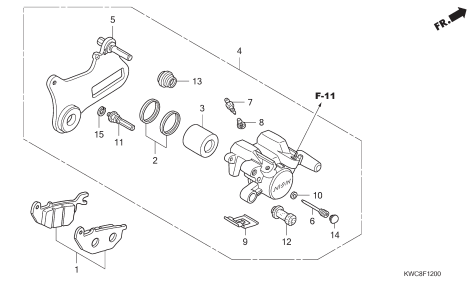


F-13 REAR WHEEL

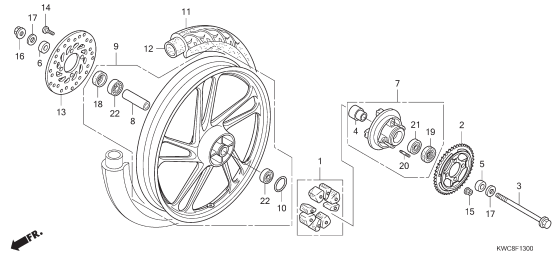


F-14 FUEL TANK

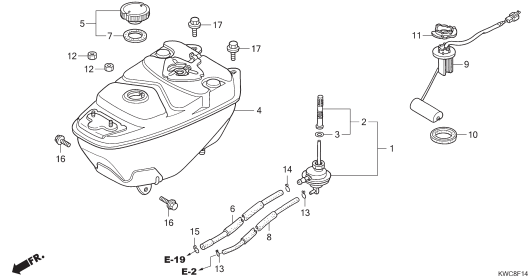


F-15 SEAT/GRAB RAIL

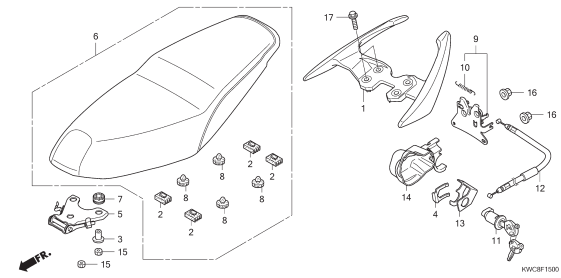


F-16 SIDE COWL

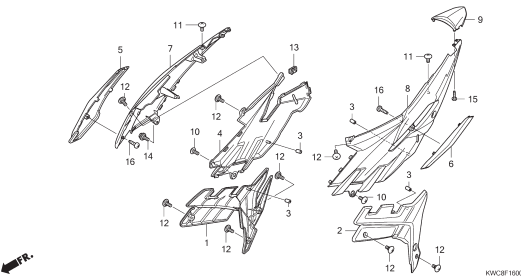

F-17 AIR CLEANER

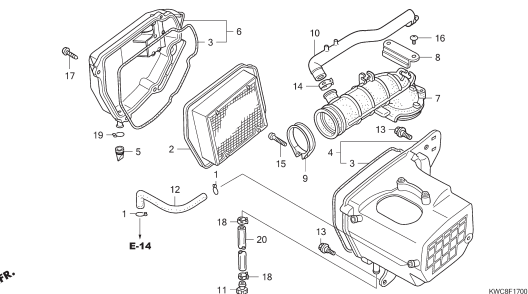


F-17-1 SUB AIR CLEANER

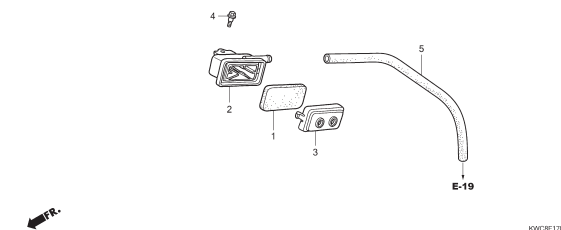


FRAME GROUP

F-18 AIR INJECTION CONTROL VALVE

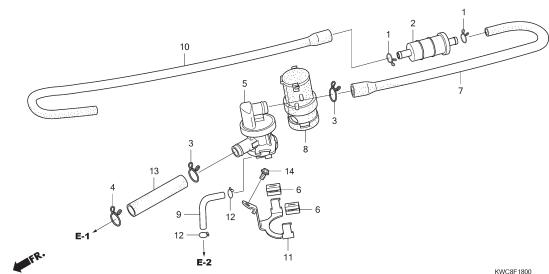


KWCBF1800

F-19 EXHAUST MUFFLER

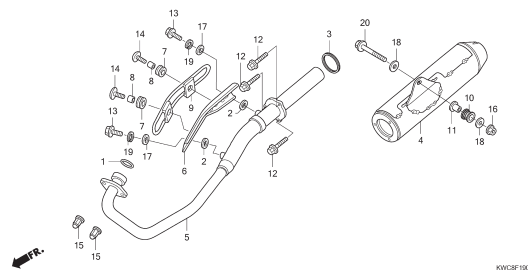


KWCBF1900

F-20 PEDAL/KICK STARTER ARM

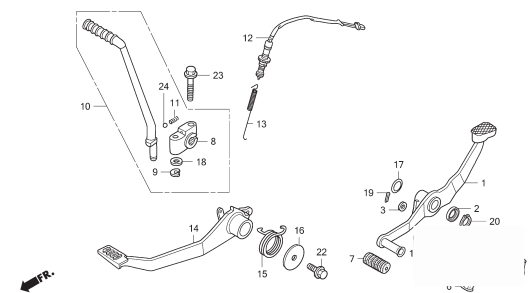


KWCBF2000

F-21 STEP

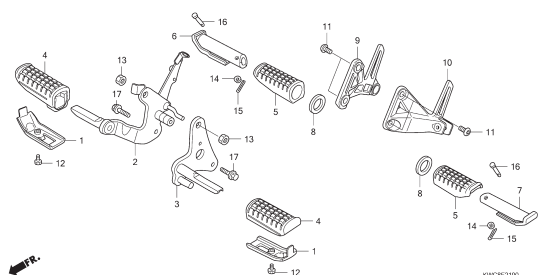


KWCBF2100

F-22 STAND

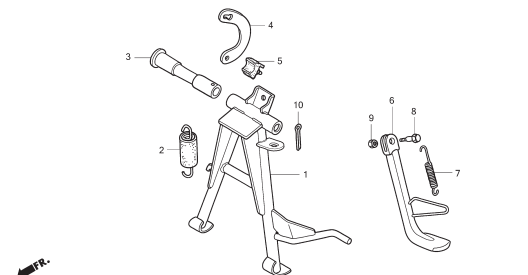


KWCBF2200

F-23 SWINGARM

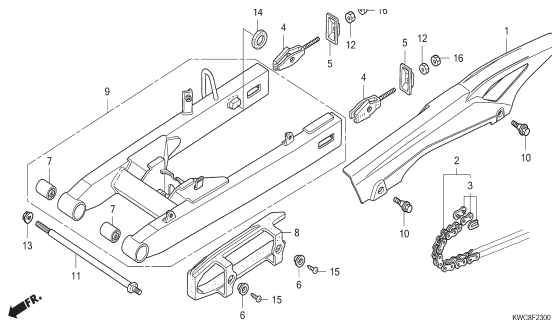


KWCBF2300

F-24 REAR CUSHION

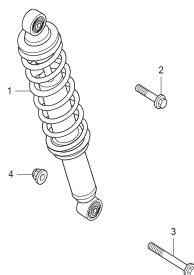


KWCBF2400

F-25 REAR FENDER

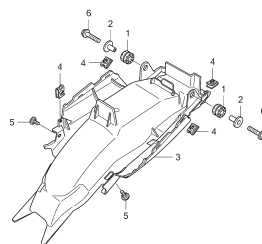

KWCBF2500


F-26 FRONT WINKER

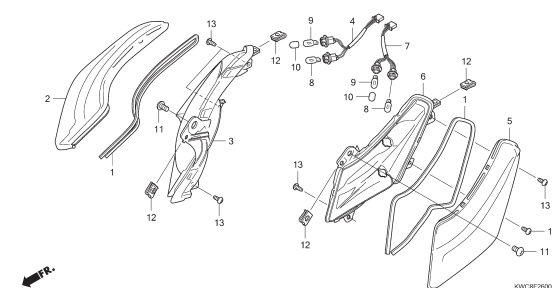


KWCBF2600

FRAME GROUP


F-27 REAR COMBINATION LIGHT

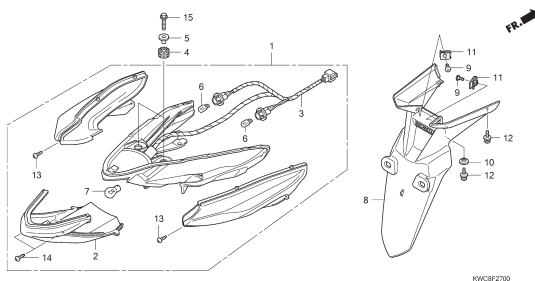


F-28 BATTERY

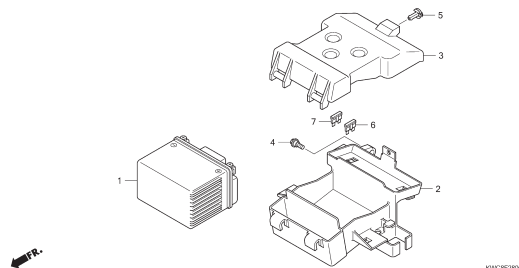


F-29 WIRE HARNESS

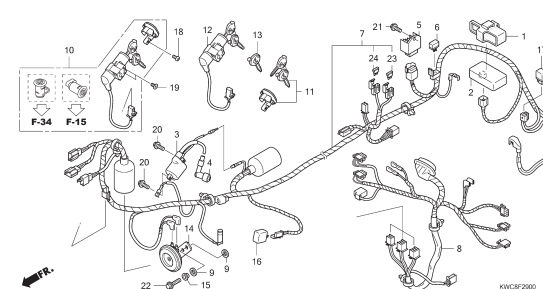


F-30 FRAME BODY

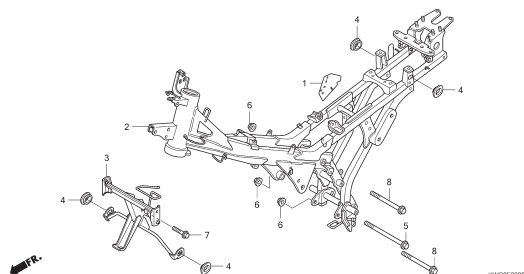


F-31 RADIATOR

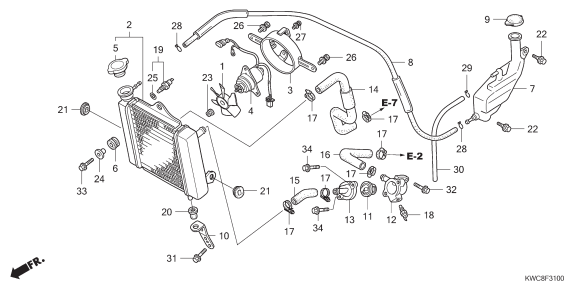


F-32 TOOLS

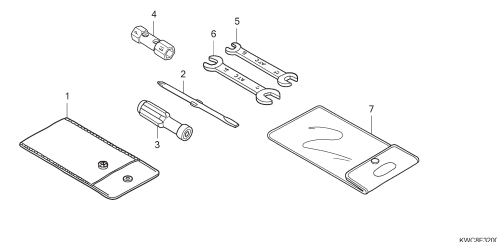


F-33 FRONT COWL

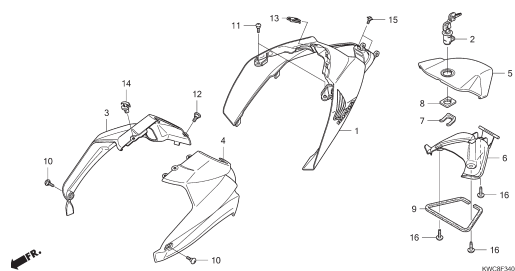

F-34 BODY COVER

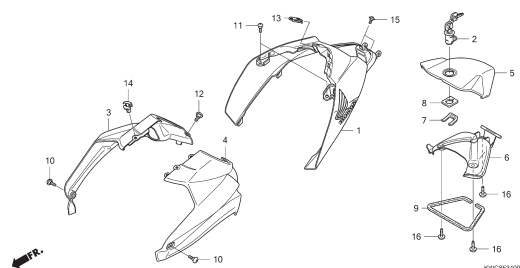


F-35 UTILITY BOX

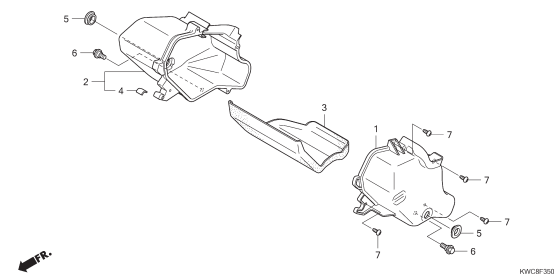


FRAME GROUP

F-36 CAUTION LABEL

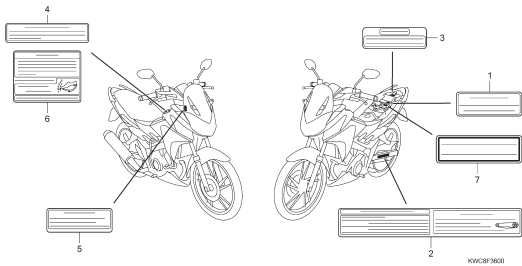


F-37 MARK/STRIPE

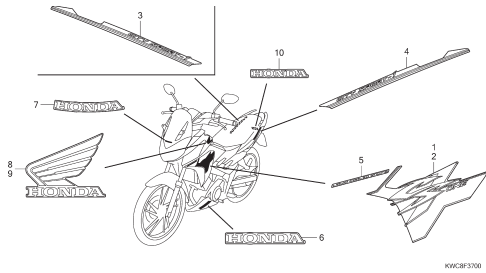

E - 1 Cylinder Head Cover


FR.

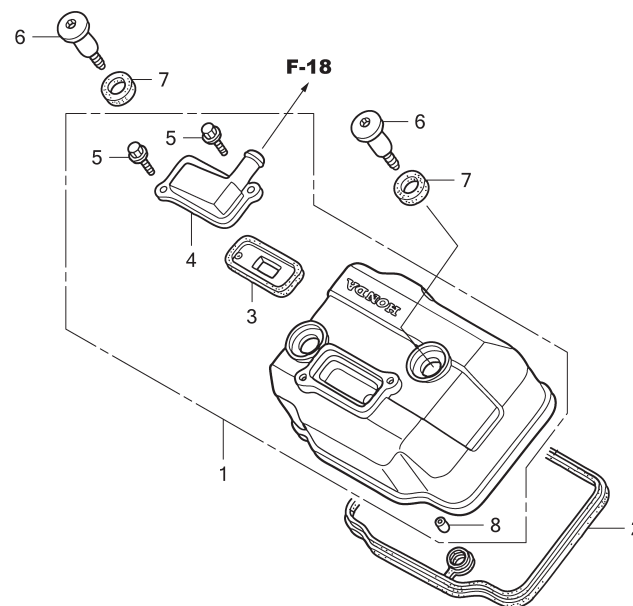

KWC8E0100

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 COVER, CYLINDER HEAD	0.6	1	12310-KGH-901	COVER ASSY., CYLINDER HEAD	1	
2 GASKET, CYLINDER HEAD COVER....	0.6	2	12391-KWC-900	GASKET, HEAD COVER	1	
3 VALVE, PAIR CHECK	0.5	3	18601-KGB-612	VALVE COMP., REED	1	
		4	18612-KGH-901	COVER, REED VALVE	1	
		5	90002-KGH-900	BOLT, FLANGE, 5X14	2	
		6	90017-KGH-901	BOLT, HEAD COVER	2	
		7	90543-MV9-671	RUBBER, MOUNTING	2	
		8	94301-10120	DOWEL PIN, 10X12	1	

E - 2 Cylinder Head

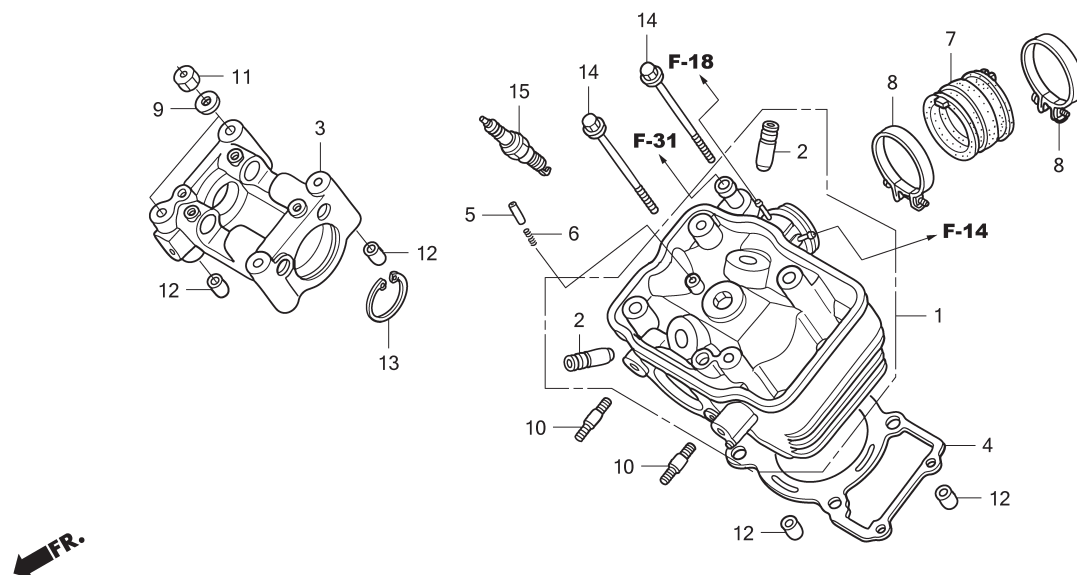


KEC8E0200

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 HEAD, CYLINDER	3.1	1	12200-KWC-900	HEAD COMP., CYLINDER	1	
.INCLUDES: Engine removal and installation		2	12204-KGH-305	GUIDE, EX. VALVE (O.S.)	2	
.INCLUDES: Valve adjust and reface		3	12210-KGH-901	HOLDER COMP., CAMSHAFT	1	
2 GUIDE, INTAKE VALVE(ONE)	3.2	4	12251-KTY-D31	GASKET, CYLINDER HEAD	1	
GUIDE, EXHAUST VALVE(ONE)	3.2	5	14125-KGH-900	PLUNGER, CAM SETTING	1	
GUIDE, VALVE :FOR 1 VEHICLE	3.5	6	14126-KGH-901	SPRING, PLUNGER	1	
.INCLUDES: Engine removal and installation		7	16211-KGH-902	INSULATOR, CARBURETOR	1	
.INCLUDES: Reaming		8	16219-KW6-841	BAND, INSULATOR	2	
.INCLUDES: Valve adjust and reface		9	90483-028-000	WASHER, 8MM	4	
3 HOLDER, CAMSHAFT	2.1	10	92900-08032-0E	BOLT, STUD, 8X32	2	
.INCLUDES: Engine removal and installation		11	94030-08280	NUT, HEX., 8MM	4	
4 GASKET, CYLINDER HEAD	2.4	12	94301-10120	DOWEL PIN, 10X12	4	
.INCLUDES: Engine removal and installation		13	94520-35000	CIRCLIP, INTERNAL, 35MM	1	
7 INSULATOR, THROTTLE BODY/ CARBURETOR.....	0.7	14	95701-06105-00	BOLT, FLANGE, 6X105	2	
15 PLUG, SPARK.....	0.1	15	98059-58816	PLUG, SPARK (CR8E)	1	
			98059-58826	PLUG, SPARK (U24ESR-N)	1	
PC KWCA 03-08						

E - 3

Camshaft / Valve

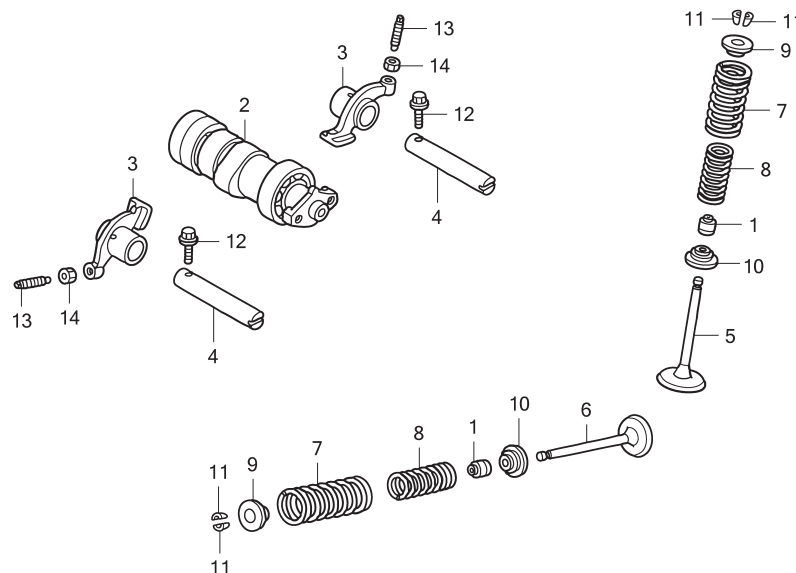


FR.

KWC8E0300

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
2 CAMSHAFT.....	2.2	1	12209-KGH-902	SEAL, VALVE STEM	2	
.INCLUDES: Engine removal and installation		2	14100-KGH-901	CAMSHAFT COMP.	1	
.INCLUDES: Valve adjustment		3	14431-KGH-901	ARM, VALVE ROCKER	2	
3 ARM, INTAKE VALVE ROCKER(ONE).....	2.2	4	14451-KGH-901	SHAFT, ROCKER ARM	2	
ARM, EXHAUST VALVE ROCKER(ONE).....	2.2	5	14711-KGH-901	VALVE, IN.	1	
ARM, VALVE ROCKER :FOR 1 VEHICLE.	2.3					
.INCLUDES: Engine removal and installation		6	14721-KWC-900	VALVE, EX.	1	
.INCLUDES: Valve adjustment		7	14751-KWC-900	SPRING, VALVE OUTER	2	
5 VALVE, INTAKE(ONE).....	2.7	8	14761-KWC-900	SPRING, VALVE INNER	2	
VALVE :FOR 1 VEHICLE	2.9	9	14771-KM3-001	RETAINER, VALVE SPRING	2	
INCLUDES: Engine removal and installation		10	14777-KGH-901	SEAT, VALVE SPRING	2	
.INCLUDES: Refacing		11	14781-MA6-000	COTTER, VALVE	4	
6 VALVE, EXHAUST(ONE)	2.7	12	90005-ZM3-000	BOLT, FLANGE, 5X18	2	
VALVE :FOR 1 VEHICLE	2.9	13	90012-KGF-910	SCREW, TAPPET ADJUSTING	2	
.INCLUDES: Engine removal and installation		14	90206-001-001	NUT, TAPPET ADJUSTING	2	
.INCLUDES: Refacing						
7 SPRING AND/OR STEM SEAL, INTAKE VALVE(ONE).....	2.5					
SPRING AND/OR STEM SEAL, EXHAUST VALVE(ONE)	2.5					
SPRING AND/OR STEM SEAL, VALVE :FOR 1 VEHICLE	2.6					
.INCLUDES: Engine removal and installation						

E - 4


Cam Chain

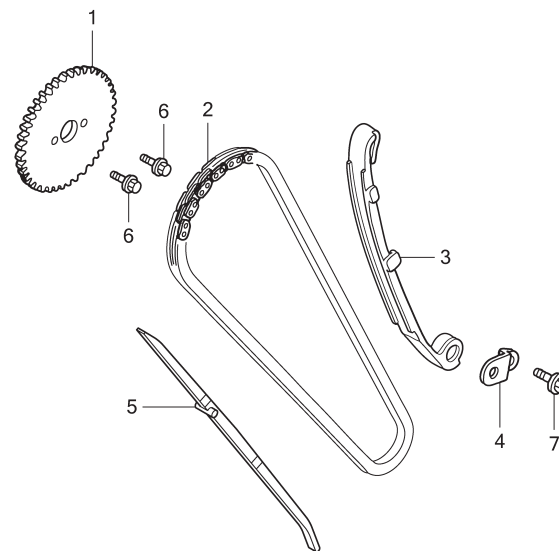

KWC8E0400

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 SPROCKET, CAM.....	2.0	1	14321-KGH-901	SPROCKET, CAM (34T)	1	
.INCLUDES: Engine removal and installation		2	14401-KVB-901	CHAIN, CAM (90L)	1	
2 CHAIN, CAM.....	2.2	3	14510-KGH-900	TENSIONER, CAM CHAIN	1	
.INCLUDES: Engine removal and installation		4	14515-KGH-900	PLATE, TENSIONER SETTING	1	
3 TENSIONER, CAM CHAIN.....	2.2	5	14610-KGH-901	GUIDE, CAM CHAIN	1	
.INCLUDES: Engine removal and installation		6	90083-GB6-911	BOLT, KNOCK, 5MM	2	
5 GUIDE, CAM CHAIN.....	2.4	7	96001-06014-00	BOLT, FLANGE, 6X14	1	
.INCLUDES: Engine removal and installation						

E- 5
Cylinder / Tensioner

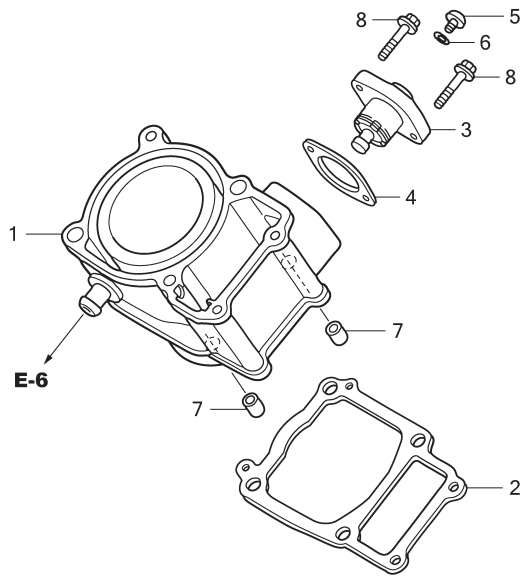


KWC8E0500

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 CYLINDER 2.7 .INCLUDES: Engine removal and installation		1	12100-KGH-901	CYLINDER COMP.	1	
		2	12191-KGH-901	GASKET, CYLINDER	1	
		3	14520-KSS-901	LIFTER ASSY., TENSIONER	1	
2 GASKET, CYLINDER 2.6 .INCLUDES: Engine removal and installation		4	14560-KGH-900	GASKET, TENSIONER LIFTER	1	
		5	90005-KGH-900	SCREW, PAN, 6X6	1	
3 (4) LIFTER, TENSIONER..... 1.9 .INCLUDES: Engine removal and installation		6	91306-MG3-001	O-RING, 1.5X9.5	1	
		7	94301-10120	DOWEL PIN, 10X12	2	
		8	96001-06022-00	BOLT, FLANGE, 6X22	2	

E - 6

Right Crankcase Cover

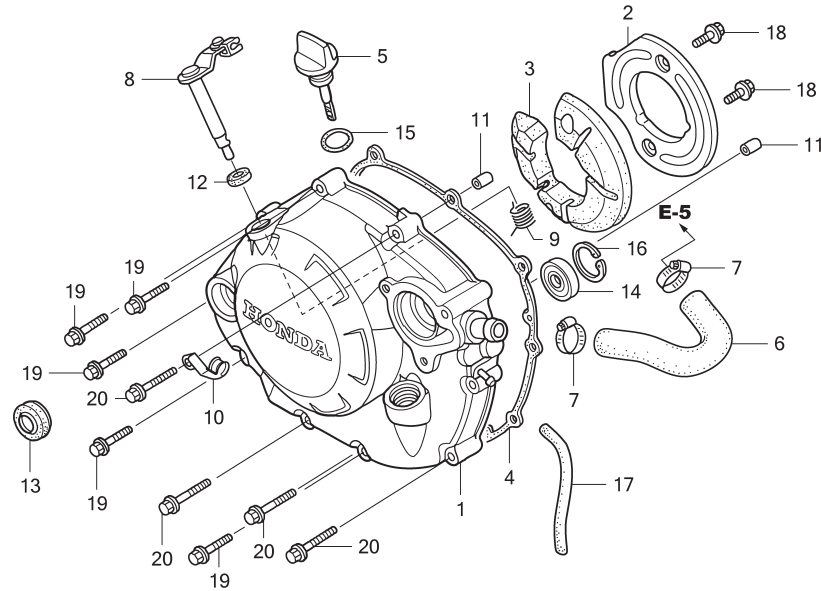


FR. 
KWC8E0600

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 COVER, CRANKCASE :RIGHT	1.0	1	11330-KWC-900	COVER COMP., R. CRANKCASE	1	
4 GASKET, CRANKCASE COVER :RIGHT	0.8	2	11333-KGH-901	PLATE, R. COVER	1	
		3	11334-KGH-901	RUBBER, R. COVER	1	
6 HOSE, MAIN WATER.....	0.4	4	11393-KGH-901	GASKET, R. COVER	1	
8 9) LEVER, CLUTCH.....	0.9	5	15651-KGH-901	GAUGE, OIL LEVEL	1	
13 OIL SEAL, KICK STARTER SPINDLE ..	0.9	6	19502-KGH-901	HOSE, WATER	1	
		7	19506-KGH-900	CLAMP, WATER HOSE	2	
		8	22810-KGH-901	LEVER COMP., CLUTCH	1	
		9	22815-KW7-931	SPRING, CLUTCH LEVER	1	
		10	32112-KGH-911	CLAMPER, WIRE	1	
		11	90702-KWC-900	DOWEL PIN, 8X16	2	
		12	91203-750-004	OIL SEAL, 12X18X4	1	
		13	91204-MC7-003	OIL SEAL, 16X28X7	1	
		14	91205-KF0-003	OIL SEAL, 12X20X5	1	
		15	91307-035-000	O-RING, 18X3	1	
		16	94520-22000	CIRCLIP, INTERNAL, 22MM	1	
		17	95005-50150-30	TUBE, 5X150	1	
		18	95701-06014-00	BOLT, FLANGE, 6X14	2	
		19	96001-06030-00	BOLT, FLANGE, 6X30	5	
		20	96001-06040-00	BOLT, FLANGE, 6X40	4	

E - 7

Water Pump

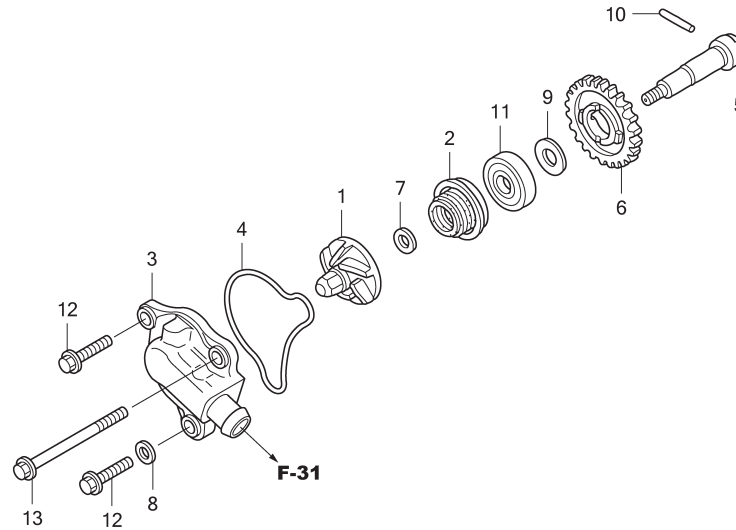


FR. 
KWC8E0700

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 IMPELLER, WATER PUMP.....	0.9	1	19215-KGH-901	IMPELLER, WATER PUMP	1	
2 MECHANICAL SEAL, WATER PUMP....	1.0	2	19217-P72-014	SEAL, MECHANICAL	1	
3 (4) COVER, WATER PUMP	0.4	3	19221-KWC-900	COVER, WATER PUMP	1	
5 SHAFT, WATER PUMP	0.9	4	19226-KGH-901	GASKET, WATER PUMP COVER	1	
6 SPROCKET OR GEAR, WATER PUMP		5	19241-KGH-901	SHAFT, WATER PUMP	1	
DRIVEN	0.9	6	19242-KGH-901	GEAR, WATER PUMP DRIVEN (23T)	1	
11 OIL SEAL, IMPELLER SHAFT	1.0	7	90423-KW6-900	WASHER, 7X13X1.2	1	
		8	90478-700-001	WASHER A, 6MM	1	
		9	90608-072-001	WASHER, 12MM	1	
		10	91105-KTM-970	ROLLER, 4X23.8	1	
		11	91205-KF0-004	OIL SEAL, 12X20X5	1	
		12	96001-06022-00	BOLT, FLANGE, 6X22	2	
		13	96001-06065-00	BOLT, FLANGE, 6X65	1	

E - 8


Oil Pump

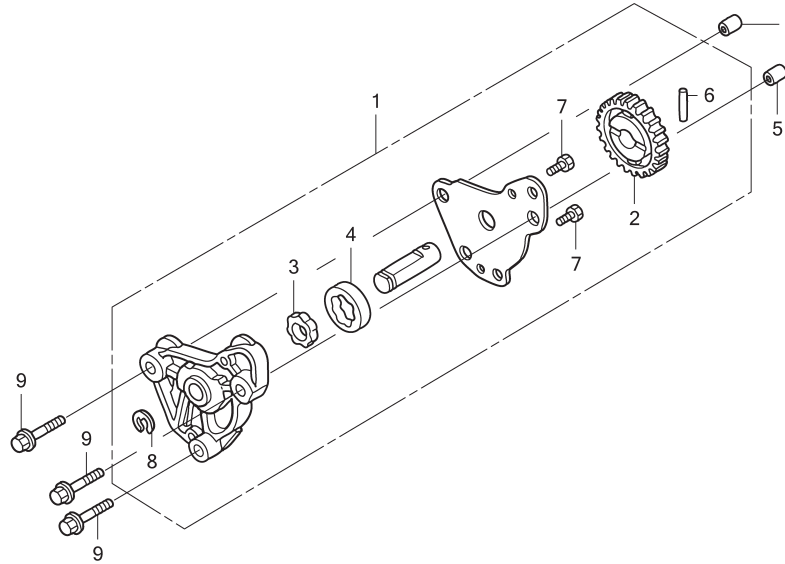

FR. 
KWC8E0800

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 PUMP ASSY., OIL.....	0.9	1	15100-KWC-900	PUMP ASSY., OIL	1	
4 (3) ROTOR, OIL PUMP	0.9	2	15133-KGH-901	GEAR, OIL PUMP DRIVEN (23T)	1	
		3	15331-436-001	ROTOR, OIL PUMP INNER	1	
		4	15332-436-001	ROTOR, OIL PUMP OUTER	1	
		5	90702-KFM-900	DOWEL PIN, 8X12	2	
		6	91105-KTM-970	ROLLER, 4X23.8	1	
		7	93301-05012-0J	BOLT, HEX., 5X12	2	
		8	94540-06019	E-RING, 6MM	1	
		9	95701-06035-00	BOLT, FLANGE, 6X35	3	


E - 9 Clutch

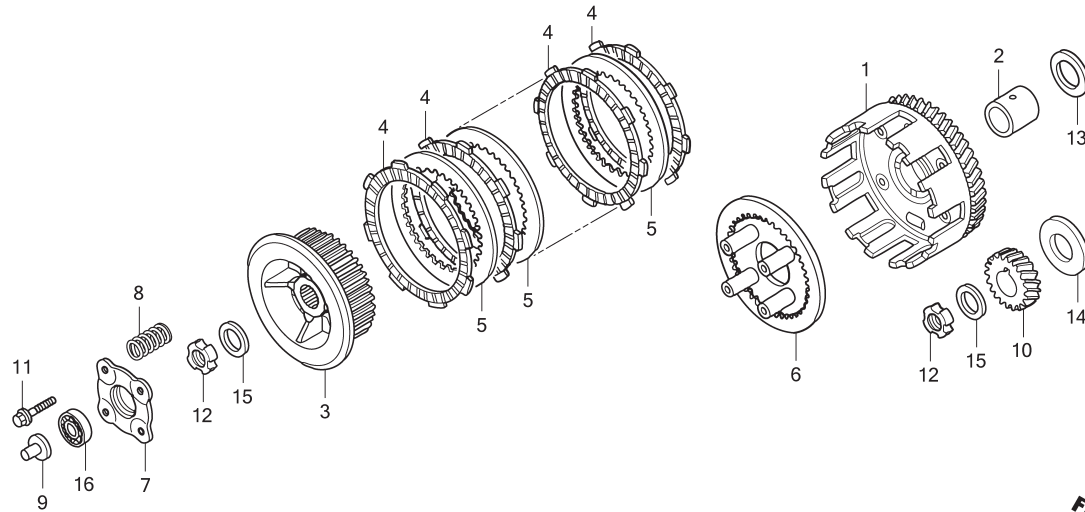

FR. →
KWC8E0900

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 OUTER, CLUTCH	1.1	1	22100-KTY-D30	OUTER COMP., CLUTCH	1	
3 CENTER, CLUTCH	1.1	2	22105-KWC-900	GUIDE, CLUTCH OUTER	1	
4 (5) DISC, CLUTCH FRICTION.....	1.1	3	22120-KGH-600	CENTER COMP., CLUTCH	1	
.NOTE: Same time for two units or more		4	22201-KGH-600	DISK, CLUTCH FRICTION	5	
		5	22321-KGH-600	PLATE, CLUTCH	4	
6 PLATE, CLUTCH PRESSURE.....	1.1	6	22355-KGH-600	PLATE, CLUTCH PRESSURE	1	
7 (16) PLATE, CLUTCH LIFTER.....	0.9	7	22361-KGH-600	PLATE, CLUTCH LIFTER	1	
8 SPRING, CLUTCH	0.9	8	22401-KW7-931	SPRING, CLUTCH	4	
.NOTE: Same time for two units or more		9	22849-KGH-900	ROD, CLUTCH LIFTER	1	
9 ROD, CLUTCH LIFTER.....	0.8	10	23121-KGH-900	GEAR A, PRIMARY DRIVE (20T) (WHITE)	1	
10 GEAR, PRIMARY DRIVE	1.1		23122-KGH-900	GEAR B, PRIMARY DRIVE (20T) (BLUE)	1	
			23123-KGH-900	GEAR C, PRIMARY DRIVE (20T) (YELLOW)	1	
		11	90008-KT7-001	BOLT, FLANGE, 6X25	4	
		12	90231-KM7-702	NUT, LOCK, 14MM	2	
		13	90401-KY4-902	WASHER, PLAIN, 17MM	1	
		14	90434-KGH-901	WASHER, 20MM	1	
		15	90501-GBL-730	WASHER, 14MM	2	
		16	91007-KE1-003	BEARING, RADIAL BALL, 6903	1	

E - 10 Starting Clutch

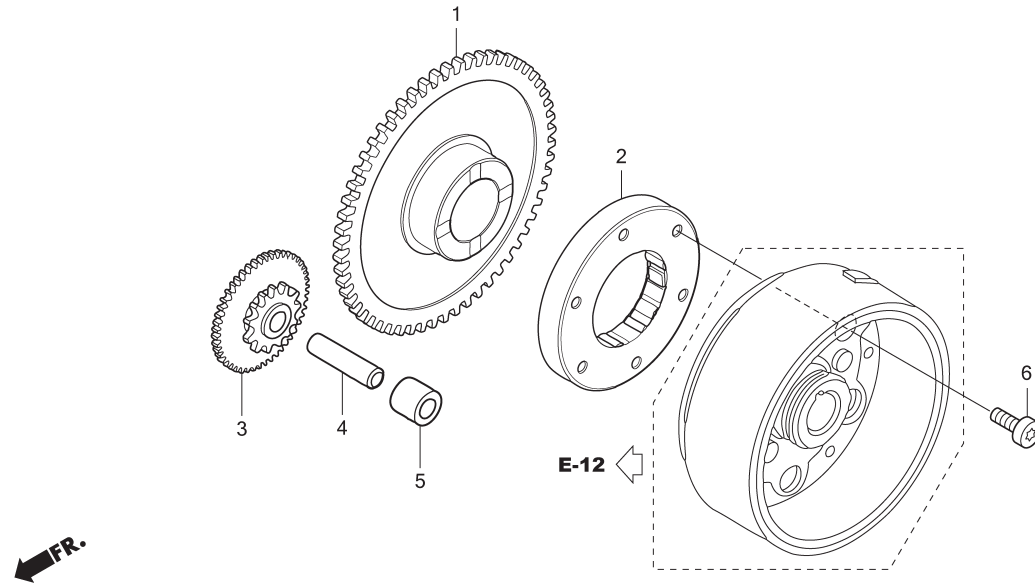


KWC8E1000

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 GEAR, STARTER DRIVEN	0.9	1	28110-KWC-900	GEAR COMP., STARTING DRIVEN (53T)	1	
2 OUTER, STARTING CLUTCH	1.0	2	28120-KRM-851	OUTER COMP., STARTING CLUTCH	1	
3 GEAR, STARTER REDUCTION	0.8	3	28131-KPP-900	GEAR, STARTER REDUCTION (13T/5)	1	
		4	28132-KGH-911	SHAFT, REDUCTION GEAR	1	
		5	28133-KGH-911	COLLAR, STARTER REDUCTION	1	
		6	90085-KWC-740	BOLT, SOCKET, 6X14	6	

E - 11


Left Crankcase Cover

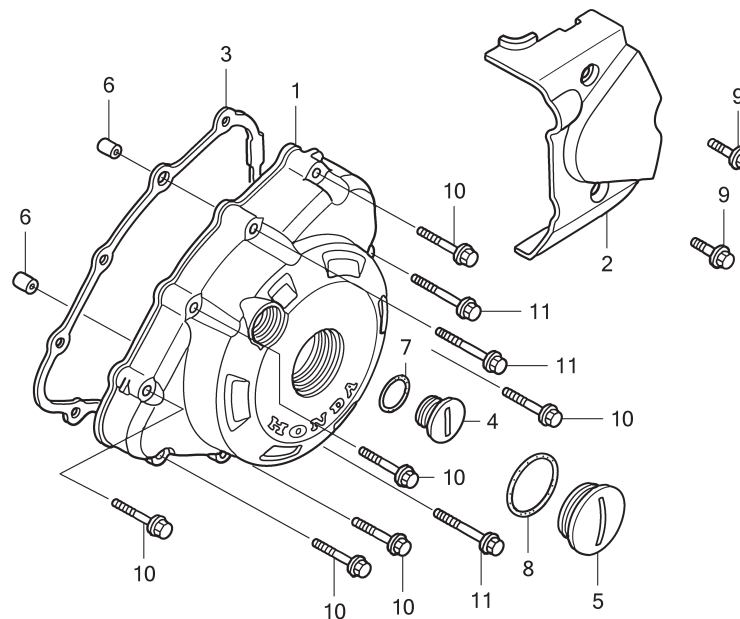

KWC8E1100

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 COVER, CRANKCASE :LEFT.....	0.9	1	11341-KWC-900	COVER, L. CRANKCASE	1	
2 COVER, CRANKCASE :LEFT REAR.....	0.2	2	11360-KWC-900	COVER, COMP L REAR	1	
3 GASKET, CRANKCASE COVER :LEFT ..	0.8	3	11395-KGH-901	GASKET, L. COVER	1	
		4	90084-428-000	CAP, A.C. GENERATOR	1	
		5	90087-KGH-900	CAP, 30MM	1	
		6	90702-KFM-901	DOWEL PIN, 8X12	2	
		7	91303-377-000	O-RING, 13.8X2.5	1	
		8	91356-KGH-901	O-RING, 30MM	1	
		9	96001-06022-00	BOLT, FLANGE, 6X22	2	
		10	96001-06030-00	BOLT, FLANGE, 6X30	6	
		11	96001-06040-00	BOLT, FLANGE, 6X40	3	

E - 12
Generator

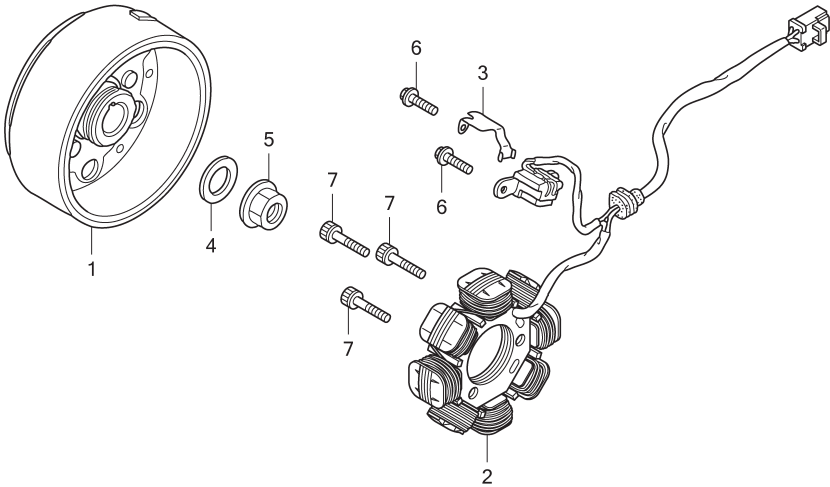


KWC8E1200

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 ROTOR OR FLYWHEEL	1.0	1	31110-KWC-901	FLYWHEEL COMP.	1	
2 STATOR.....	1.1	2	31120-KWC-901	STATOR COMP.	1	
		3	32111-KWC-900	CLAMPER, A.C. GENERATOR CORD	1	
		4	90439-SB2-010	WASHER, SPECIAL, 24X12X2.3	1	
		5	94050-12001	NUT, FLANGE, 12MM	1	
		6	96001-06016-00	BOLT, FLANGE, 6X16	2	
		7	96600-06020-01	BOLT, SOCKET, 6X20	3	

E - 13

Starter Motor

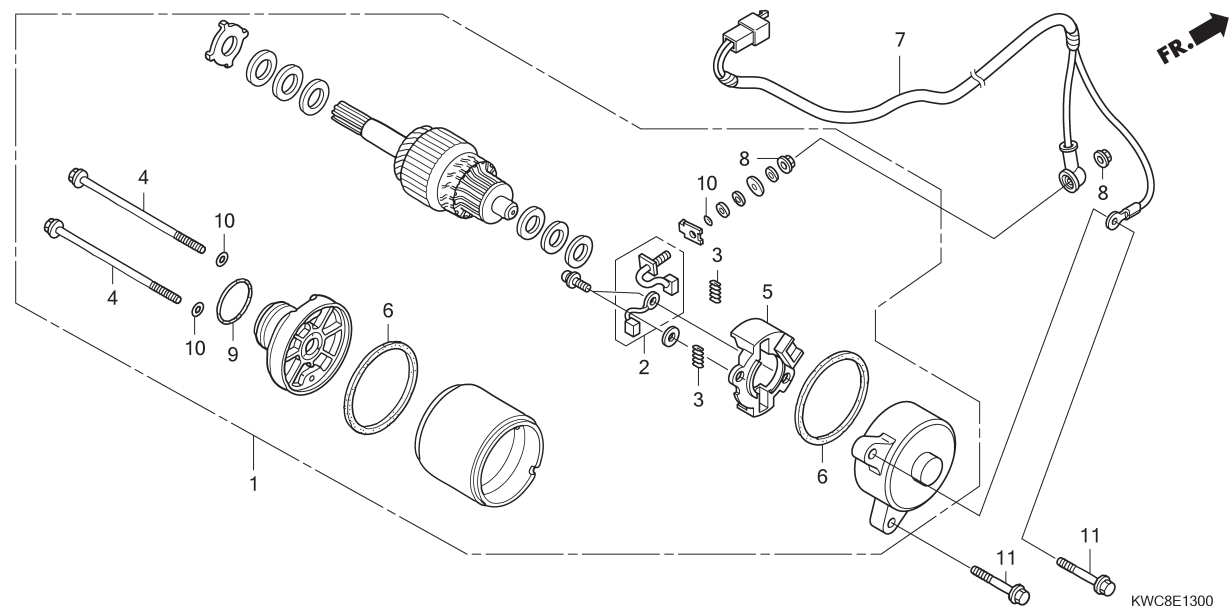


2

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 MOTOR, STARTING	0.4	1	3120A-KWC-900	MOTOR ASSY., STARTING	1	
2 TERMINAL, BRUSH(STARTER).....	0.6	2	31201-KPW-901	TERMINAL SET, BRUSH	1	
5 HOLDER, BRUSH(STARTER).....	0.6	3	31204-KG8-004	SPRING, CARBON BRUSH	2	
7 CABLE, STARTER MOTOR.....	0.5	4	31205-KPW-901	BOLT, SETTING	2	
		5	31206-KPW-901	HOLDER SET, BRUSH	1	
		6	31207-MBE-009	RING	2	
		7	32410-KWC-900	CABLE, STARTER MOTOR	1	
		8	90071-MB0-001	NUT-WASHER, 6MM	2	
		9	91309-425-004	O-RING, 24.4X3.1	1	
		10	91320-MB0-008	O-RING	3	
		11	95701-06025-00	BOLT, FLANGE, 6X25	2	

E - 14

Crankshaft / Piston

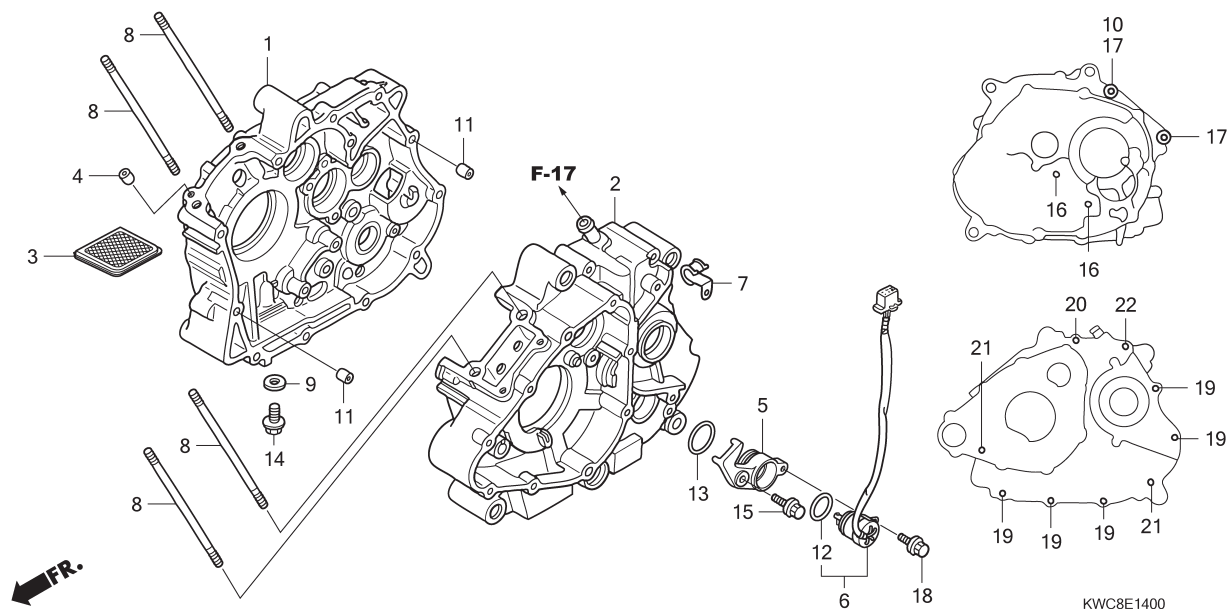


Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 CRANKCASE :RIGHT	5.2	1	11100-KWC-900	CRANKCASE COMP., R.	1	
.INCLUDES: Engine removal and installation		2	11200-KWC-900	CRANKCASE COMP., L.	1	
CRANKCASE :BOTH	6.3	3	15421-035-010	SCREEN, OIL FILTER	1	
.INCLUDES: Engine removal and installation		4	15517-KGH-901	ORIFICE, 1.8	1	
		5	24322-KWC-900	COLLAR, CHANGE SWITCH	1	
2 CRANKCASE :LEFT	5.8	6	35759-KWC-901	CONTACT ASSY., CHANGE SWITCH	1	
.INCLUDES: Engine removal and installation		7	35761-KGH-901	CLIP, SWITCH CORD	1	
CRANKCASE :BOTH	6.3	8	90031-KGH-901	BOLT, CYLINDER STUD	4	
.INCLUDES: Engine removal and installation		9	90407-259-000	PACKING, DRAIN COCK, 12.5X20	1	
3 SCREEN, OIL FILTER.....	0.8	10	90488-425-000	WASHER, SEALING, 6MM	1	
		11	90702-KFM-900	DOWEL PIN, 8X12	2	
6 SWITCH, GEAR CHANGE.....	0.7	12	91305-KK4-003	O-RING, 16.5X2.5	1	
		13	91310-KE8-003	O-RING, 21.5X2	1	
		14	92800-12000	BOLT, DRAIN PLUG, 12MM	1	
		15	95701-06025-00	BOLT, FLANGE, 6X25	1	
		16	95701-06035-00	BOLT, FLANGE, 6X35	2	
		17	95701-06065-00	BOLT, FLANGE, 6X65	2	
		18	96001-06014-00	BOLT, FLANGE, 6X14	1	
		19	96001-06040-00	BOLT, FLANGE, 6X40	5	
		20	96001-06055-00	BOLT, FLANGE, 6X55	1	
		21	96001-06065-00	BOLT, FLANGE, 6X65	2	
		22	96001-06075-01	BOLT, FLANGE, 6X75	1	

PC KWCA 03-08

E - 15

Crank Shaft


/Piston

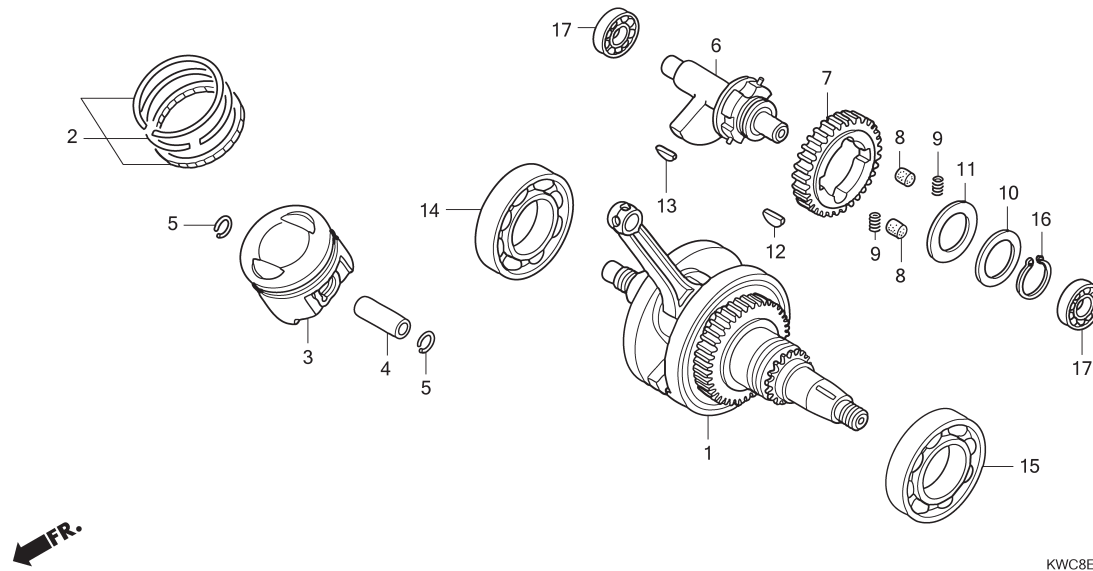

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 MAINSHAFT, TRANSMISSION.....	4.1	1	13000-KGH-901	CRANKSHAFT COMP.	1	
2 COUNTERSHAFT, TRANSMISSION....	4.1	2	13011-KGH-405	RING SET, PISTON (STD.)	1	
11 SPROCKET, DRIVE	0.2		13012-KGH-405	RING SET, PISTON (0.25)	(1)	
			13013-KGH-405	RING SET, PISTON (0.50)	(1)	
28 BEARING, MAINSHAFT : LEFT.....	4.1		13014-KGH-405	RING SET, PISTON (0.75)	(1)	
BEARING, MAINSHAFT : BOTH.....	4.3		13015-KGH-405	RING SET, PISTON (1.00)	(1)	
BEARING, MAINSHAFT : AND						
COUNTERSHAFT : ALL.....	4.5	3	13101-KWC-900	PISTON	1	
			13102-KWC-305	PISTON (0.25)	(1)	
29 BEARING, COUNTERSHAFT : RIGHT..	5.0		13103-KWC-305	PISTON (0.50)	(1)	
BEARING, COUNTERSHAFT : BOTH....	4.3		13104-KWC-305	PISTON (0.75)	(1)	
BEARING, MAINSHAFT : AND			13105-KWC-305	PISTON (1.00)	(1)	
COUNTERSHAFT : ALL.....	4.5	4	13111-KGH-902	PIN, PISTON	1	
30 BEARING, MAINSHAFT : RIGHT.....	4.1	5	13115-GN5-910	CLIP, PISTON PIN, 13MM	2	
BEARING, MAINSHAFT : BOTH.....	4.3					
BEARING, COUNTERSHAFT :LEFT.....	4.1	6	13420-KPP-860	WEIGHT COMP., BALANCER	1	
		7	13422-KPP-860	GEAR A, B, C, BALANCER DRIVEN (43T)	1	
		8	13425-KGH-900	RUBBER, BALANCER DUMPER	2	
		9	13427-KPP-860	SPRING, BALANCER GEAR	2	
		10	13538-KGH-901	SPRING, THRUST	1	

E - 15

Crank Shaft /Piston

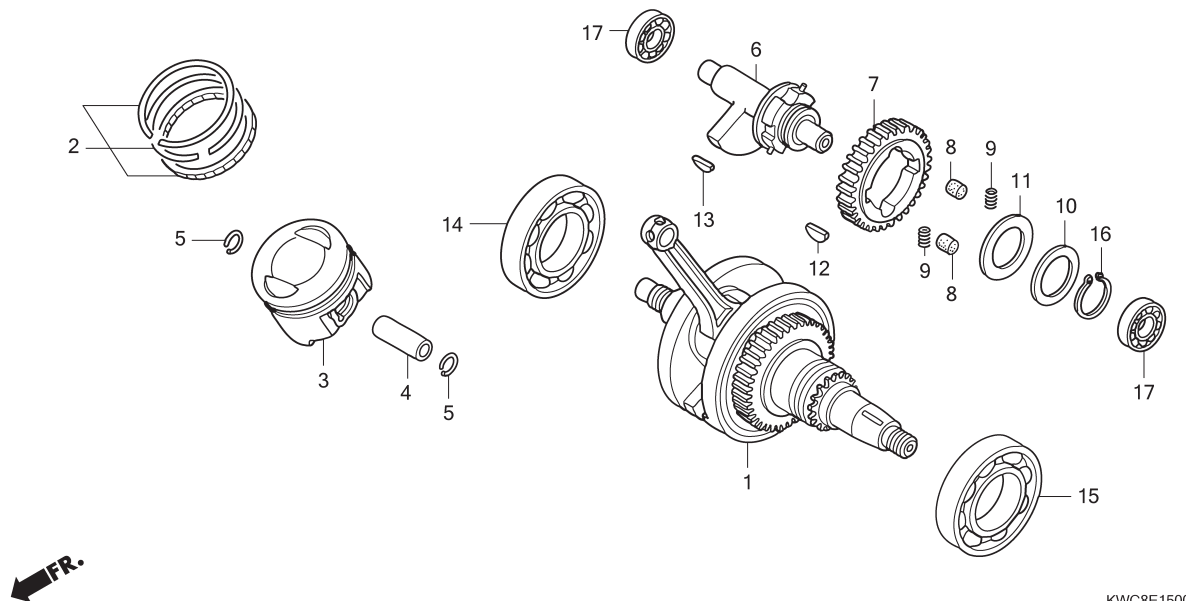


KWC8E1500

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		11	90401-KPP-900	WASHER, 28.2X45X1.0	1	
		12	90741-KFB-001	KEY, WOODRUFF, 4MM	1	
		13	90741-KGH-900	KEY, WOODRUFF, 4MM	1	
		14	91001-KGH-901	BEARING, RADIAL BALL, 6207	1	
		15	91002-KGH-901	BEARING, RADIAL BALL, 6207	1	
		16	94510-28000	CIRCLIP, EXTERNAL, 28MM	1	
		17	96100-63010-00	BEARING, RADIAL BALL, 6301	2	

E - 16


Transmission

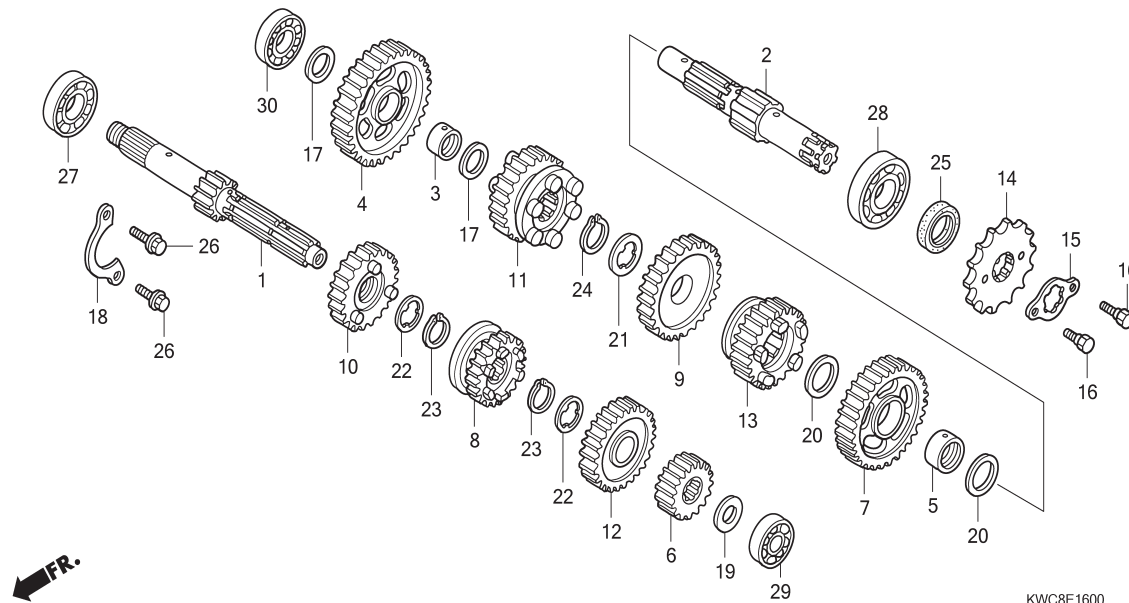

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 (6,8,10,12) MAINSHAFT, TRANSMISSION.....	4.8	1	23211-KGH-901	MAINSHAFT, TRANSMISSION (12T)	1	
.INCLUDES: Engine removal and installation		2	23221-KGH-901	COUNTERSHAFT	1	
.Replace countershaft add	0.2	3	23415-HB3-001	BUSH, 15MM	1	
		4	23421-KGH-901	GEAR, COUNTERSHAFT LOW (37T)	1	
		5	23431-KGH-901	BUSH, 20MM	1	
2 (4,7,9,11,13) COUNTERSHAFT, TRANSMISSION	4.8	6	23441-KGH-901	GEAR, MAINSHAFT SECOND (17T)	1	
.INCLUDES: Engine removal and installation		7	23451-KGH-901	GEAR, COUNTERSHAFT SECOND (32T)	1	
Replace mainshaft add.....	0.2	8	23461-KGH-901	GEAR, MAINSHAFT THIRD (18T)	1	
		9	23471-KGH-901	GEAR, COUNTERSHAFT THIRD (25T)	1	
14 SPROCKET, DRIVE	0.3	10	23481-KGH-901	GEAR, MAINSHAFT FOURTH (21T)	1	
27 BEARING, MAINSHAFT :RIGHT	4.8					
.INCLUDES: Engine removal and installation		11	23491-KGH-901	GEAR, COUNTERSHAFT FOURTH (23T)	1	
28 BEARING, COUNTERSHAFT :LEFT	5.3	12	23501-KGH-901	GEAR, MAINSHAFT FIFTH (26T)	1	
.INCLUDES: Engine removal and installation		13	23511-KGH-900	GEAR, COUNTERSHAFT FIFTH (24T)	1	
		14	23801-KCT-690	SPROCKET, DRIVE (14T)	1	
29 BEARING, MAINSHAFT :LEFT	5.3	15	23811-KPS-900	PLATE A2, FIXING	1	
BEARING, MAINSHAFT :BOTH.....	5.5					
.INCLUDES: Engine removal and installation		16	90084-041-000	BOLT, DRIVE SPROCKET FIXING	2	
30 BEARING, COUNTERSHAFT :RIGHT	4.8	17	90412-187-000	WASHER, THRUST, 15MM	2	
BEARING, COUNTERSHAFT :BOTH.....	5.5	18	90441-KW7-931	PLATE, BEARING HOLDER	1	
BEARING, MAINSHAFT AND		19	90452-KGH-901	WASHER, SPECIAL, 12MM	1	
COUNTERSHAFT :ALL.....	5.7	20	90454-107-001	WASHER, THRUST, 20MM	2	
.INCLUDES: Engine removal and installation						
PC KWCA 03-08						

E - 16


Transmission

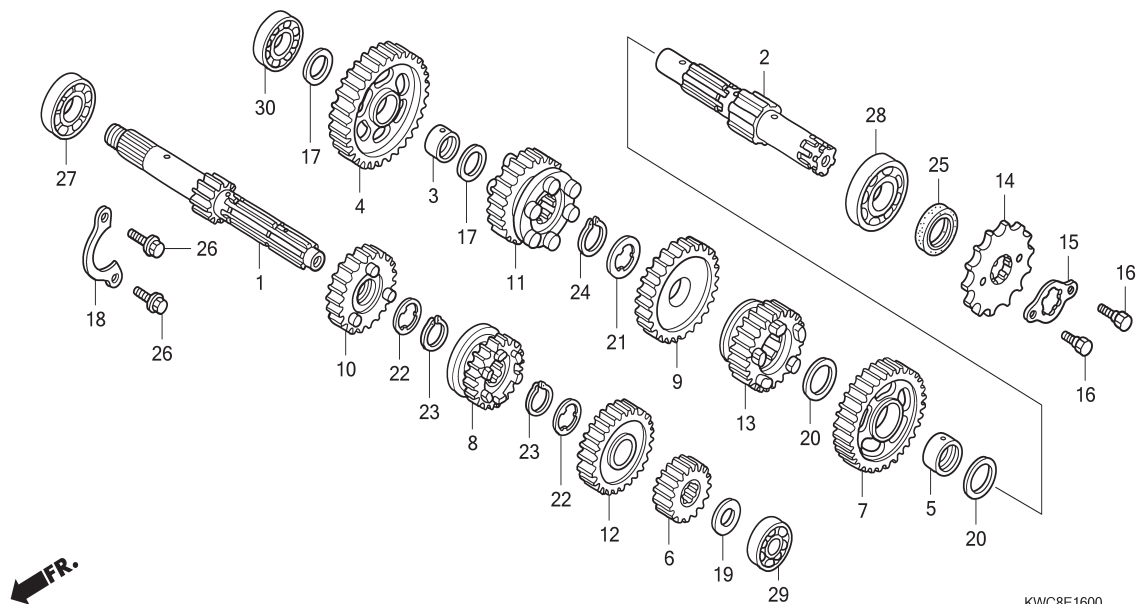

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		21	90455-KR1-761	WASHER, SPLINE, 20MM	1	
		22	90461-115-000	WASHER, SPLINE, 17MM	2	
		23	90601-001-000	CIRCLIP, EXTERNAL, 17MM	2	
		24	90605-200-001	SET RING, 20MM	1	
		25	91216-KGH-902	OIL SEAL, 20X34X7	1	
		26	95701-06014-00	BOLT, FLANGE, 6X14	2	
		27	96100-62030-00	BEARING, RADIAL BALL, 6203	1	
		28	96100-62040-00	BEARING, RADIAL BALL, 6204	1	
		29	96140-62010-00	BEARING, RADIAL BALL, 6201U	1	
		30	96140-62020-00	BEARING, RADIAL BALL, 6202U	1	

E - 17

Gear Shift Drum

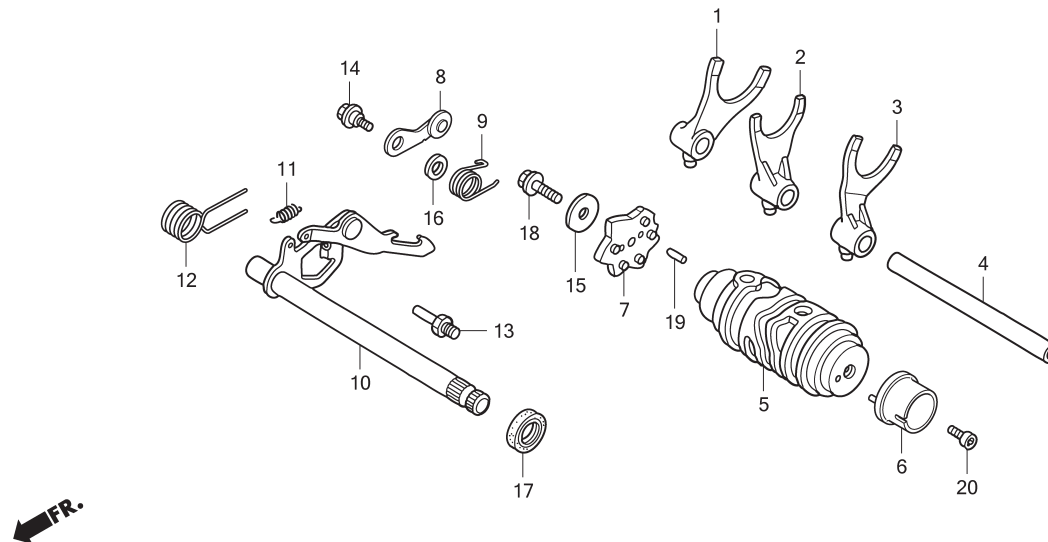


KWC8E1700

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 (2,3,4) FORK, GEARSHIFT.....	4.8	1	24211-KGH-901	FORK, R. GEARSHIFT	1	
.INCLUDES: Engine removal and installation		2	24212-KGH-901	FORK, CENTER GEARSHIFT	1	
.NOTE: Same time for two units or more		3	24213-KGH-901	FORK, L. GEARSHIFT	1	
5 DRUM, GEARSHIFT	4.8	4	24241-KGH-901	SHAFT, GEARSHIFT FORK	1	
.INCLUDES: Engine removal and installation		5	24301-KWC-900	DRUM, GEARSHIFT	1	
7 PLATE, GEARSHIFT DRUM		6	24320-KWC-901	PIECE, CHANGE SWITCH DRIVE	1	
STOPPER	1.0	7	24410-KGH-900	PLATE COMP., GEARSHIFT DRUM STOPPER	1	
8 (9) STOPPER OR SPRING,		8	24430-KGH-901	STOPPER COMP., GEARSHIFT DRUM	1	
SHIFT DRUM	0.9	9	24436-KTY-D30	SPRING, GEARSHIFT DRUM STOPPER	1	
10 (12) SPINDLE, GEARSHIFT	1.1	10	24610-KGH-901	SPINDLE COMP., GEARSHIFT	1	
17 OIL SEAL, GEARSHIFT SPINDLE.....	1.1	11	24641-KBP-901	SPRING, GEARSHIFT ARM	1	
		12	24651-KGH-901	SPRING, GEARSHIFT RETURN	1	
		13	24652-035-000	PIN, SHIFT RETURN SPRING	1	
		14	90022-MG8-000	PIVOT, SHIFT DRUM STOPPER ARM	1	
		15	90402-KW7-901	WASHER, THRUST, 6MM	1	
		16	90435-HB3-000	WASHER, 6.1MM	1	
		17	91209-KWC-901	OIL SEAL, 12X22X7	1	
		18	95701-06016-00	BOLT, FLANGE, 6X16	1	
		19	96220-30085	ROLLER, 3X8.5	2	
		20	96600-06012-00	BOLT, SOCKET, 6X12	1	

E - 18


Kick Starter Spindle

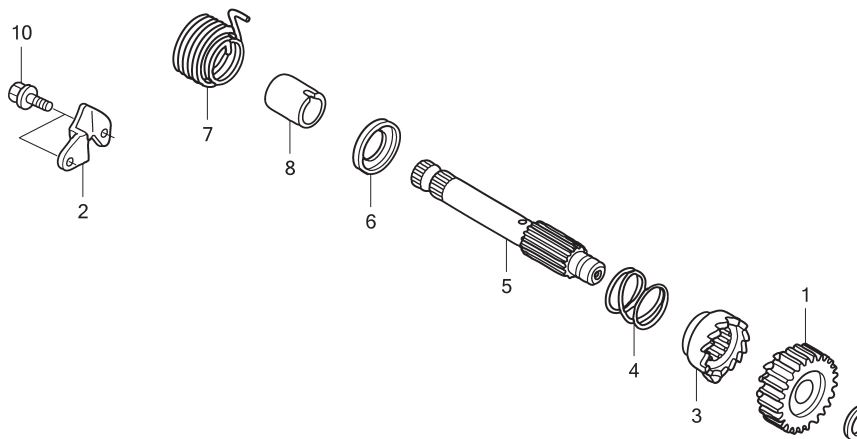

KWC8E1800

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 (1,3,4,6,7,8) SPINDLE, KICK STARTER GEARSHIFT..... 4.8		1	28211-KGH-901	PINION, KICK STARTER (22T)	1	
		2	28215-KGH-901	PLATE, KICK STOPPER	1	
		3	28221-KGH-901	RATCHET, KICK STARTER	1	
		4	28223-KM7-702	SPRING, RATCHET	1	
		5	28251-KGH-901	SPINDLE, KICK STARTER	1	
		6	28254-437-001	SEAT, RATCHET SPRING	1	
		7	28261-KGH-901	SPRING, KICK RETURN	1	
		8	28282-KGH-901	COLLAR, KICK SPRING	1	
		9	90451-KGH-901	WASHER, SPECIAL, 14MM	1	
		10	95701-06016-00	BOLT, FLANGE, 6X16	2	

E - 19 Carburetor

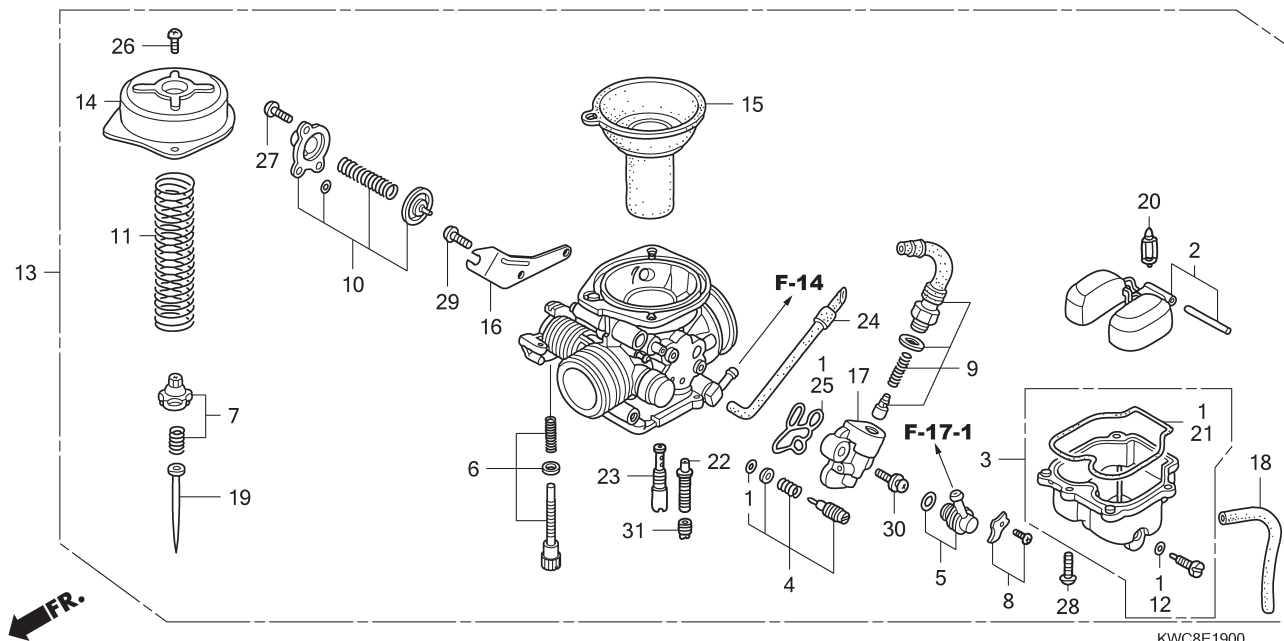


KWC8E1900

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
2 (20) FLOAT OR FLOAT VALVE	0.9	1	16010-KGF-911	GASKET SET	1	
3 CHAMBER, FLOAT	0.8	2	16013-KEH-900	FLOAT SET	1	
		3	16015-KGF-911	CHAMBER SET, FLOAT	1	
9 VALVE, STARTER	0.5	4	16016-KWC-901	SCREW SET A	1	
10 VALVE, AIR CUT	0.8	5	16026-MR1-004	JOINT SET	1	
13 CARBURETOR ASSEMBLY	0.9	6	16028-KPP-901	SCREW SET B	1	
14 TOP SET, CARBURETOR	0.5	7	16037-KPP-861	PLATE SET, VALVE	1	
15 PISTON, VACUUM	0.5	8	16038-HN2-003	PLATE SET, STAY	1	
		9	16046-KGH-901	VALVE SET, STARTER	1	
19 NEEDLE, JET	0.6	10	16048-KGH-901	VALVE SET, AIR CUT	1	
31 (23) JET, MAIN	0.9	11	16050-KGH-601	SPRING, COMPRESSION COIL	1	
		12	16075-GHB-640	O-RING, 1.3X4.3	1	
		13	16100-KWC-901	CARBURETOR ASSY. (AVK5AD A)	1	
		14	16107-KGH-901	TOP	1	
		15	16111-KWC-901	PISTON COMP., VACUUM	1	
		16	16119-KWC-901	STAY, WIRE	1	
		17	16140-KGH-901	BODY COMP., BYSTARTER	1	
		18	16143-KGH-901	TUBE, 4.5X450	1	
		19	16151-KWC-901	NEEDLE COMP., JET	1	
		20	16155-KJ9-751	VALVE COMP., FLOAT	1	

E - 19


Carburetor

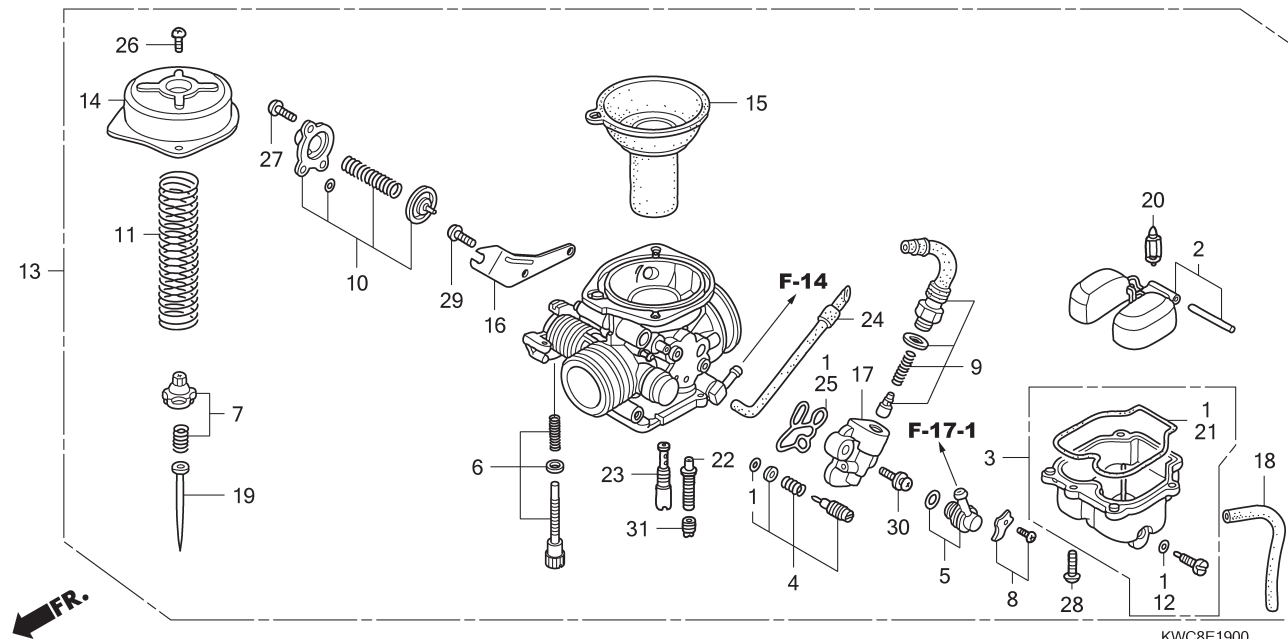

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		21	16163-KGF-911	GASKET, FLOAT CHAMBER	1	
		22	16166-KGH-971	JET, NEEDLE	1	
		23	16180-KGH-971	JET, SLOW, #35	1	
		24	16199-KGH-901	TUBE COMP., AIR VENT	1	
		25	16423-KGH-901	GASKET, BYSTARTER	1	
		26	93500-04008-1H	SCREW, PAN, 4X8	2	
		27	93500-04010-1H	SCREW, PAN, 4X10	2	
		28	93500-04012-0H	SCREW, PAN, 4X12	3	
		29	93500-05012-1H	SCREW, PAN, 5X12	2	
		30	93892-05012-18	SCREW-WASHER, 5X12	2	
		31	99101-ZH7-1080	JET, MAIN, #108	1	

F - 1


Headlight

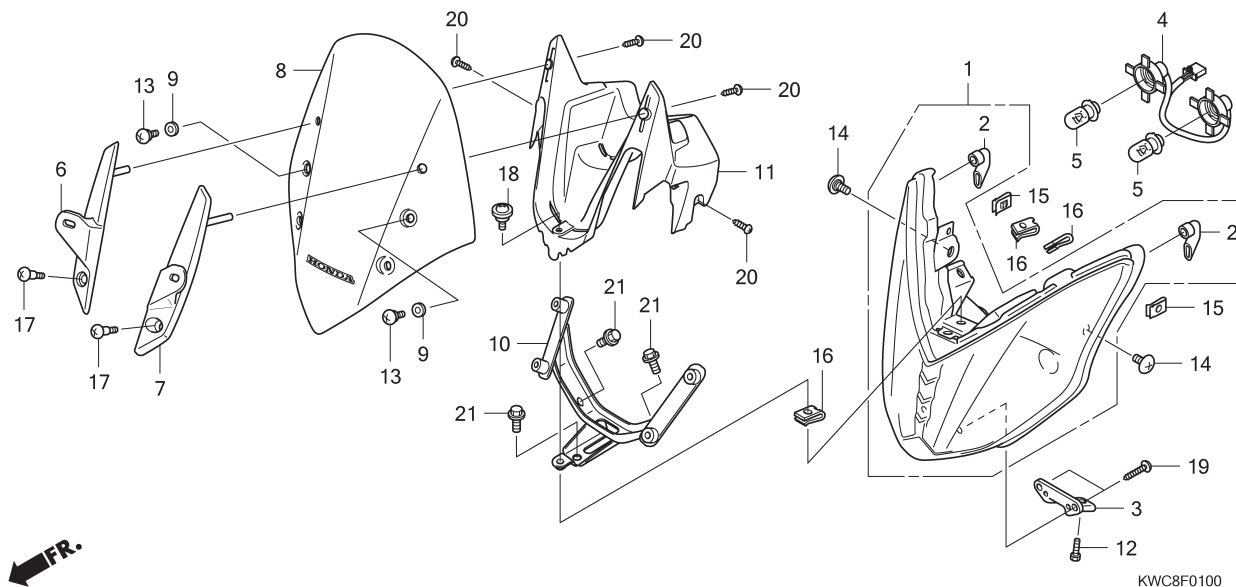

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 HEADLIGHT UNIT.....	0.4	1	33110-KWC-901	HEADLIGHT UNIT	1	
4 SOCKET, HEADLIGHT.....	0.3	2	33113-MAT-611	PIPE, CP	2	
5 BULB, HEADLIGHT.....	0.2	3	33116-KWC-900	ADJUSTER, HEADLIGHT	1	
.Replace 1 headlight bulb add.....	0.1	4	33130-KWC-901	SOCKET COMP., HEADLIGHT	1	
		5	34901-KRS-901	BULB, HEADLIGHT (12V 35/35W)	2	
8 VISOR, METER.....	0.1					
10 STAY, METER VISOR	0.4	6	53207-KWC-900	COVER, R. VISOR	1	
11 COVER, HEADLIGHT	0.2	7	53208-KWC-900	COVER, L. VISOR	1	
		8	5320B-KWC-900	VISOR SET, FR.	1	
		9	61106-KW6-841	RUBBER B, MOUNTING	2	
		10	61315-KWC-900	STAY, VISOR	1	
		11	64470-KWC-900	COVER, HEADLIGHT UPPER	1	
		12	90002-KGH-901	BOLT, FLANGE, 5X14	1	
		13	90103-KWC-900	SCREW, SPECIAL, 5MM	2	
		14	90107-KW7-930	BOLT, COWL SETTING	2	
		15	90302-GW3-980	NUT, SPRING, 4MM	2	
		16	90344-KEV-900	NUT C, CLIP, 6MM	3	
		17	91422-KVB-900	SCREW, SPECIAL PAN, 5MM	2	
		18	91509-GE2-760	SCREW, PAN, 5X11.5	1	
		19	93901-25420	SCREW, TAPPING, 5X20	2	
		20	93903-34380	SCREW, TAPPING, 4X12	4	
PC KWCA 03-08		21	95701-06012-00	BOLT, FLANGE, 6X12	3	

F - 2

Meter

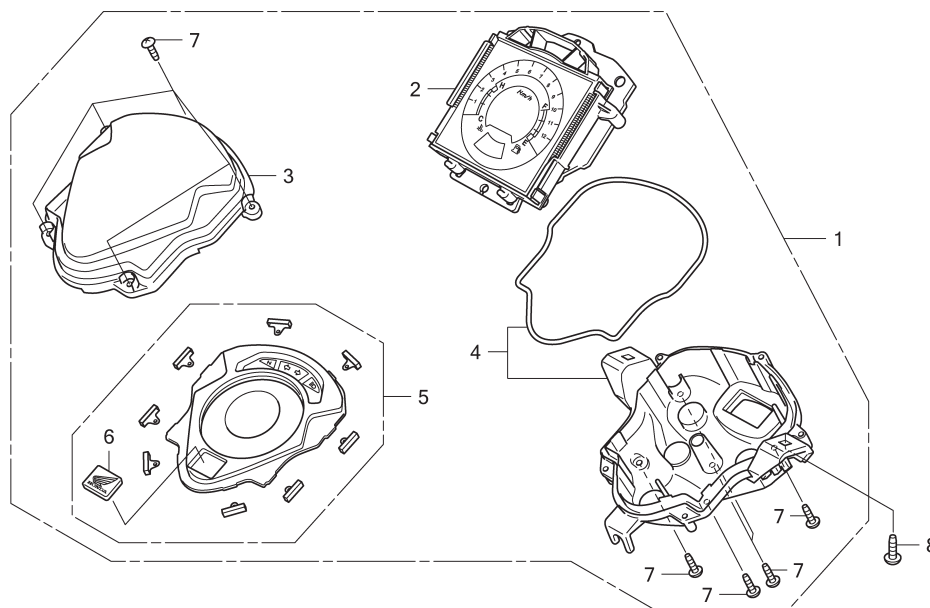


KWC8F0200

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 METER ASSY., COMBINATION	0.7	1	37100-KWC-901	SPEEDOMETER ASSY. (KPH)	1	
2 METER, COMBINATION	0.8	2	37210-KWC-901	METER COMP., COMBINATION	1	
3 LENS, METER	0.6	3	37211-KWC-901	LENS	1	
4 CASE, METER	0.7	4	37212-KWC-901	CASE ASSY., UNDER	1	
5 PLATE, REFLECTING	0.6	5	37213-KWC-901	PLATE ASSY., REFLECTING	1	
		6	86150-KPG-901	EMBLEM, PRODUCT	1	
		7	90101-KY6-008	SCREW, TAPPING, 3X14	10	
		8	93903-25310	SCREW, TAPPING, 5X16	2	

F - 3

Handle Lever / Cable / Mirror

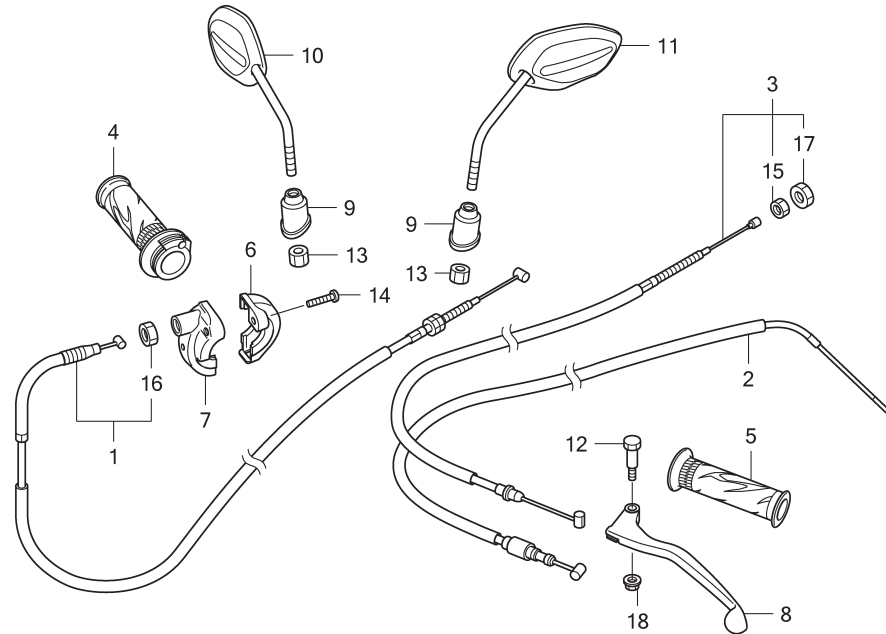


KWC8F0300

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 CABLE, THROTTLE.....	1.0	1	17910-KWC-900	CABLE COMP., THROTTLE	1	
2 CABLE, CHOKE.....	0.7	2	17950-KWC-900	CABLE COMP., CHOKE	1	
3 CABLE, CLUTCH.....	0.8	3	22870-KWC-900	CABLE COMP., CLUTCH	1	
4 GRIP, THROTTLE	0.2	4	53140-KWC-900	GRIP COMP., THROTTLE	1	
5 GRIP, HANDLE :LEFT.....	0.1	5	53166-KWC-900	GRIP, L. HANDLE	1	
7 HOUSING, THROTTLE.....	0.6	6	53167-KFM-900	HOUSING, UPPER THROTTLE	1	
8 LEVER, HANDLE :LEFT	0.6	7	53168-KFM-900	HOUSING, UNDER THROTTLE	1	
LEVER, HANDLE :BOTH	0.7	8	53178-KWC-900	LEVER, L. STEERING HANDLE	1	
		9	88113-KET-900	CAP, LOCK NUT	2	
		10	88110-KWC-900	MIRROR ASSY. R. BACK	1	
		11	88120-KWC-900	MIRROR ASSY. L. BACK	1	
		12	90114-KGH-900	BOLT, HANDLE LEVER PIVOT	1	
		13	90314-KVR-600	NUT, LOCK	2	
		14	93500-05025-0G	SCREW, PAN, 5X25	1	
		15	94002-08000-0S	NUT, HEX., 8MM	1	
		16	94002-10070-0S	NUT, HEX., 10MM	1	
		17	94031-08001	NUT, HEX., 8MM	1	
		18	94050-06001	NUT, FLANGE, 6MM	1	

PC KWCA 03-08

F - 4

Fr. Brake Master Cylinder

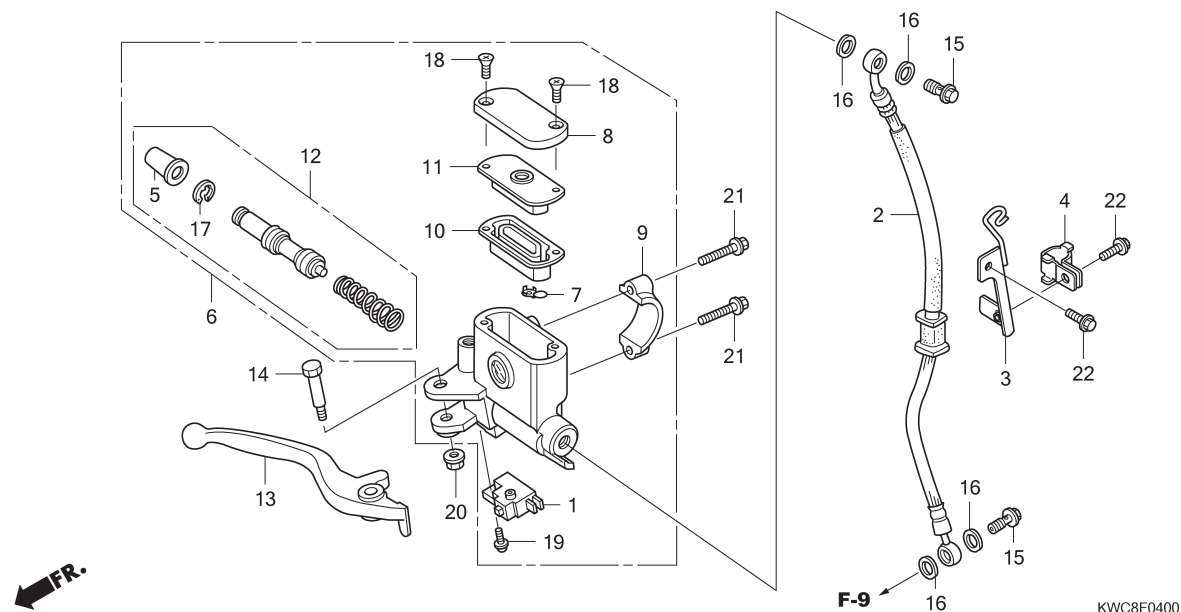


Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 SWITCH, FRONT STOP	0.5	1	35340-MA5-672	SWITCH ASSY., FR. STOP	1	
2 HOSE, FRONT BRAKE.....	0.9	2	45126-KWC-900	HOSE COMP., FR. BRAKE	1	
.INCLUDES: Bleed brakes		3	45156-KWC-900	CLAMPER, BRAKE HOSE	1	
		4	45157-KAN-850	CLAMPER B, BRAKE HOSE	1	
6 CYLINDER, FRONT BRAKE MASTER...	0.8	5	45504-410-004	BOOT COMP.	1	
.INCLUDES: Bleed brakes		6	45500-KPH-880	MASTER CYLINDER ASSY., FR.	1	
10 DIAPHRAGM, FRONT BRAKE MASTER CYLINDER	0.1	7	45512-MA6-007	PROTECTOR	1	
		8	45513-GW0-911	CAP, MASTER CYLINDER	1	
12 PISTON SET, FRONT BRAKE MASTER	0.8	9	45517-GW0-751	HOLDER, MASTER CYLINDER	1	
.INCLUDES: Bleed brakes		10	45520-GW0-911	DIAPHRAGM	1	
13 LEVER, HANDLE :RIGHT	0.1	11	45521-GW0-911	PLATE, DIAPHRAGM	1	
LEVER, HANDLE :BOTH	0.7	12	45530-471-832	CYLINDER SET, MASTER	1	
		13	53175-KET-921	LEVER, R. STEERING HANDLE	1	
		14	90114-KGH-900	BOLT, HANDLE LEVER PIVOT	1	
		15	90145-KM3-751	BOLT, OIL, 10X22	2	
		16	90545-300-000	WASHER, OIL BOLT	4	
		17	90651-MA5-672	CIRCLIP	1	
		18	93600-04012-1G	SCREW, FLAT, 4X12	2	
		19	93893-04012-17	SCREW-WASHER, 4X12	1	
		20	94050-06000	NUT, FLANGE, 6MM	1	
		21	95701-06022-07	BOLT, FLANGE, 6X22	2	
		22	96001-06012-07	BOLT, FLANGE, 6X12	2	

PC KWCA 03-08

F - 5

Steering Handle / Handle Cover / Switch

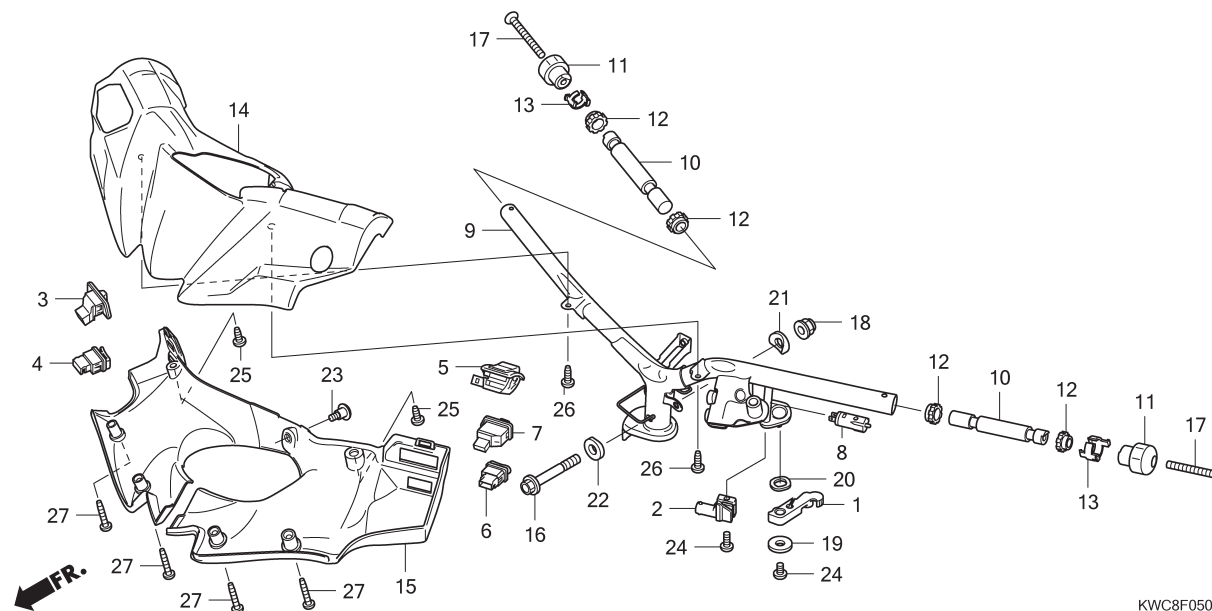


KWC8F0500

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
3 SWITCH, LIGHTING	0.6	1	17961-KGH-600	LEVER, CHOKE	1	
4 SWITCH, STARTER.....	0.5	2	17962-KWC-900	STOPPER, CABLE	1	
5 SWITCH, DIMMER.....	0.5	3	35150-KPH-880	SWITCH UNIT, LIGHTING	1	
		4	35160-KPH-881	SWITCH UNIT, STARTING	1	
		5	35170-KPH-651	SWITCH UNIT, DIMMER	1	
6 SWITCH, HORN.....	0.5	6	35180-KPH-881	SWITCH UNIT, HORN	1	
7 SWITCH, WINKER.....	0.5	7	35200-KVB-900	SWITCH ASSY., WINKER	1	
8 SWITCH, CLUTCH.....	0.7	8	35330-413-003	SWITCH COMP., FR. LEVER	1	
9 PIPE, STEERING HANDLE	1.2	9	53100-KWC-900	PIPE COMP., STEERING HANDLE	1	
10 WEIGHT B, HANDLE :LEFT	0.2	10	53104-KPH-720	WEIGHT B, STEERING HANDLE	2	
WEIGHT B, HANDLE :RIGHT	0.2					
WEIGHT B, HANDLE :BOTH	0.4					
14 COVER, HANDLE :UPPER.....	0.7	11	53105-KTM-N00	WEIGHT A, STEERING HANDLE	2	
COVER, HANDLE :BOTH	0.7	12	53106-KR3-000	RUBBER A, HANDLE WEIGHT	4	
15 COVER, HANDLE :LOWER.....	0.4	13	53108-KR3-770	RING, HANDLE WEIGHT SNAP	2	
COVER, HANDLE :BOTH	0.7	14	53205-KWC-900	COVER, HANDLE UPPER	1	
		15	53206-KWC-900	COVER, HANDLE LOWER	1	
		16	90106-GN5-900	BOLT, FLANGE, 10X50	1	
		17	90191-KPP-900	SCREW, OVAL, 6X50	2	
		18	90304-KGH-901	NUT, U, 10MM	1	
		19	90441-147-000	WASHER, PLAIN	1	
		20	90442-147-000	WASHER, WAVE	1	

PC KWCA 03-08

F - 5

Steering Handle / Handle Cover / Switch

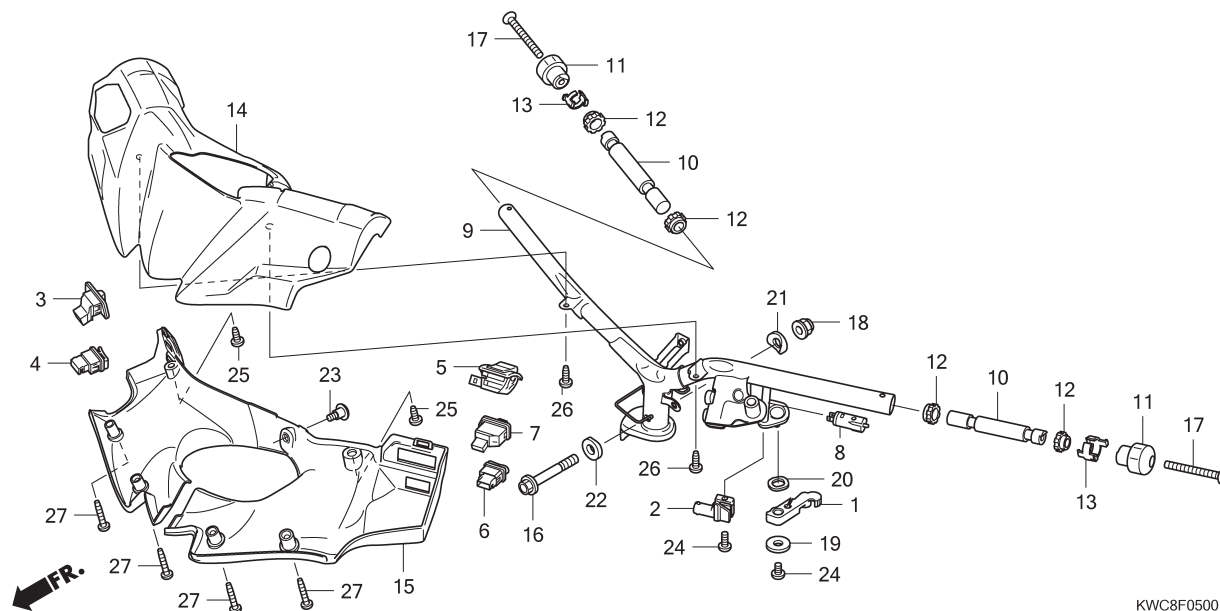


KWC8F0500

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		21	90501-KPH-880	COLLAR A, HANDLE SETTING	1	
		22	90505-KPH-880	COLLAR B, HANDLE SETTING	1	
		23	91422-KVB-900	SCREW, SPECIAL PAN, 5MM	1	
		24	93500-05010-0G	SCREW, PAN, 5X10	2	
		25	93903-34380	SCREW, TAPPING, 4X12	2	
		26	93903-34420	SCREW, TAPPING, 4X16	2	
		27	93903-34680	SCREW, TAPPING, 4X25	4	

F - 6

Steering Stem

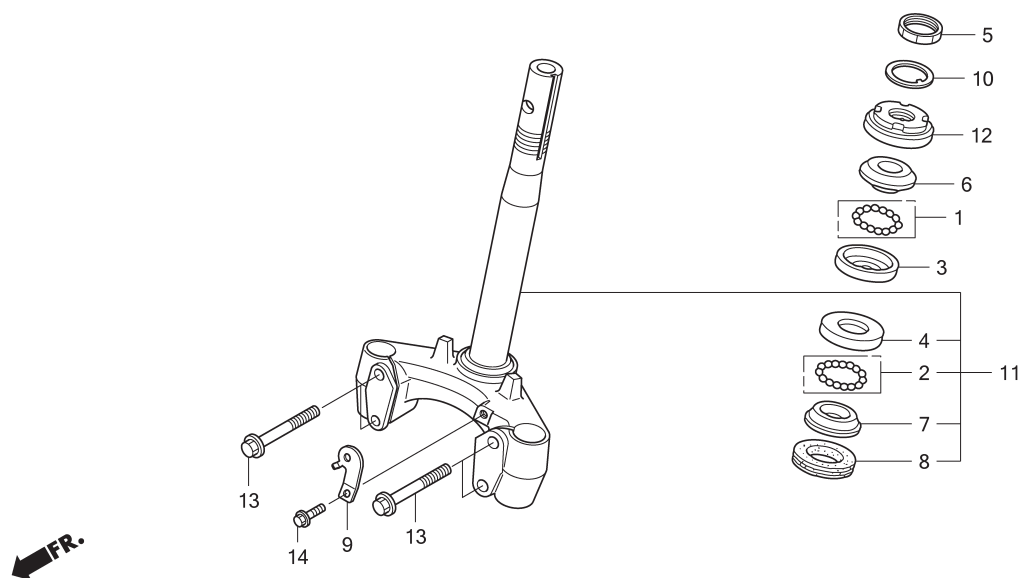


KWC8F0600

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
3 RACE, STEERING BALL :UPPER	1.5	1	96211-06000	BALL, STEEL, #6MM	23	
RACE, STEERING BALL :BOTH	1.5	2	96211-06000	BALL, STEEL, #6MM	29	
4 RACE, STEERING BALL :LOWER	1.5	3	50301-KPH-720	RACE, STEERING TOP BALL	1	
RACE, STEERING BALL :BOTH	1.5	4	50302-KPH-720	RACE, STEERING BOTTOM BALL	1	
		5	50306-GN5-901	NUT, STEERING STEM LOCK	1	
6 RACE, STEERING TOP CONE	0.9	6	53211-KPH-720	RACE, STEERING TOP CONE	1	
7 (8) RACE, STEERING BOTTOM CONE	1.6	7	53212-KPH-720	RACE, STEERING BOTTOM CONE	1	
11 STEM OR SHAFT ASSY., STEERING ...	1.5	8	53214-GN5-900	DUST SEAL, STEERING HEAD	1	
12 THREAD, STEERING HEAD TOP	0.9	9	53215-KWC-900	STAY, HORN	1	
		10	53216-GN5-830	WASHER, STEERING STEM NUT	1	
		11	5320A-KWC-900	STEM SUB ASSY., STEERING	1	
		12	53220-GN5-900	THREAD COMP., STEERING HEAD TOP	1	
		13	95801-10045-07	BOLT, FLANGE, 10X45	4	
		14	96001-06012-07	BOLT, FLANGE, 6X12	1	

PC KWCA 03-08

F - 7

Front Fender

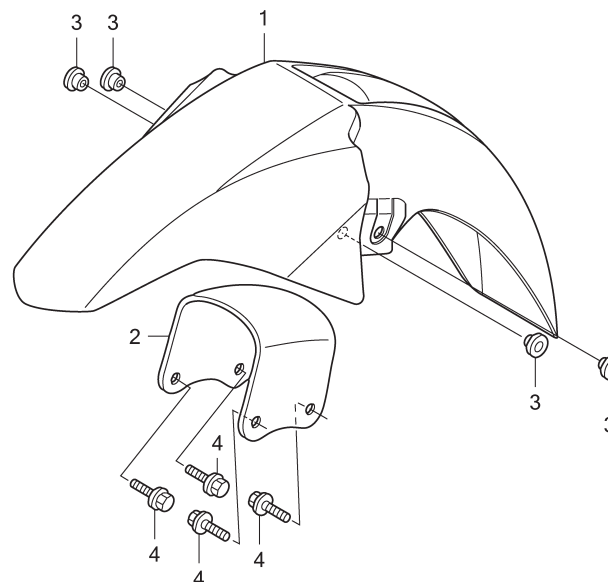


KWC8F0700

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 FENDER, FRONT	0.3	1	61100-KWC-900DSM	FENDER, FR.		
				NHA30M.....	DIGITAL SILVER METALLIC	1
2 STAY, FRONT FENDER	0.3		61100-KWC-900CSR	*R333C*.....	CANDY SCARLET RED	(1)
			61100-KWC-900AFB	*NHB12M*	AFFINITY BLACK METALLIC	(1)
			61100-KWC-900DGM	*YR293M*.....	DIABLO GOLD METALLIC	(1)
		2	61101-KWC-900	STAY, FR. FENDER	1	
		3	81312-KW7-900	COLLAR, FR. FENDER	4	
		4	95701-06020-08	BOLT, FLANGE, 6X20	4	

F - 8

Front Fork

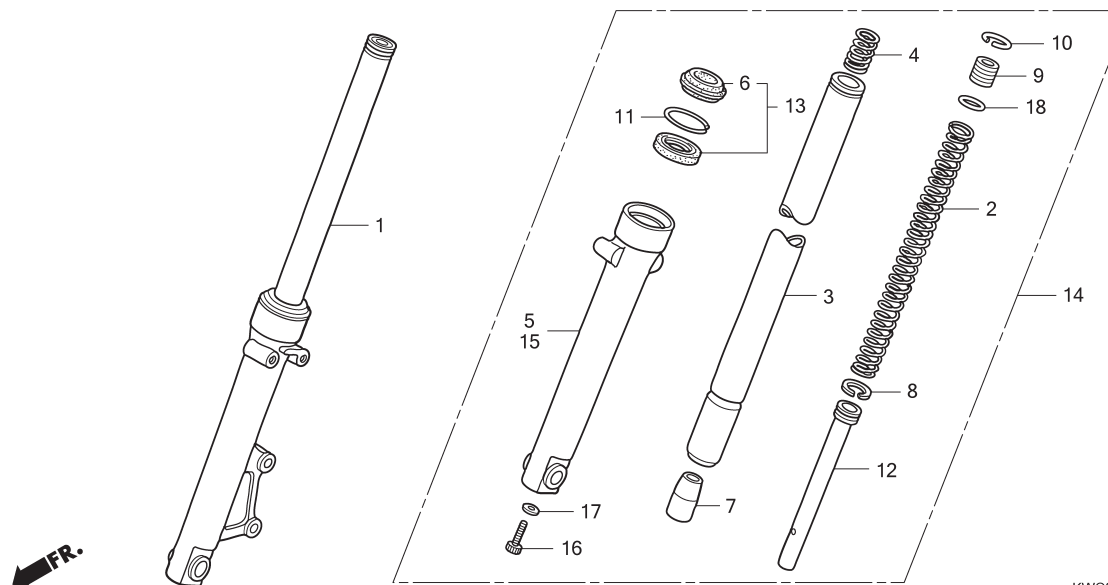


KWC8F0800

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 FORK ASSY., FRONT :RIGHT	0.4	1	51400-KWC-901	FORK ASSY., R. FR.	1	
FORK ASSY., FRONT :BOTH	0.6	2	51401-KWC-901	SPRING, FR. FORK	2	
2 SPRING, FRONT FORK :LEFT	0.2	3	51410-KWC-901	PIPE COMP., FR. FORK	2	
SPRING, FRONT FORK :RIGHT	0.2	4	51412-GN5-901	SPRING, REBOUND	2	
SPRING, FRONT FORK :BOTH	0.4	5	51420-KWC-901	CASE, R. FR. BOTTOM	1	
3 PIPE, FRONT FORK :LEFT	0.8	6	51425-GN5-901	DUST SEAL	2	
PIPE, FRONT FORK :RIGHT	0.8	7	51432-KGH-902	PIECE, OIL LOCK	2	
PIPE, FRONT FORK :BOTH	1.4	8	51437-KGH-902	RING, PISTON	2	
5 CASE, BOTTOM :RIGHT	0.8	9	51454-KEV-881	SEAT B, SPRING	2	
CASE, BOTTOM :BOTH	1.4	10	51456-KPH-901	RING, STOPPER	2	
13 SEAL SET, FRONT FORK :LEFT	0.7	11	51466-065-902	RING, OIL SEAL STOPPER	2	
SEAL SET, FRONT FORK :RIGHT	0.7	12	51470-KWC-901	PIPE, SEAT	2	
SEAL SET, FRONT FORK :BOTH	1.2	13	51490-KGH-902	SEAL SET, FR. FORK	2	
14 FORK ASSY., FRONT :LEFT	0.4	14	51500-KWC-901	FORK ASSY., L. FR.	1	
FORK ASSY., FRONT :BOTH	0.6	15	51520-KWC-901	CASE, L. FR. BOTTOM	1	
15 CASE, BOTTOM :LEFT	0.8	16	90116-KV3-702	BOLT, SOCKET, 8MM	2	
CASE, BOTTOM :BOTH	1.4	17	90544-283-000	WASHER, SPECIAL, 8MM	2	
		18	91356-GM0-003	O-RING	2	
PC KWCA 03-08						

F - 9


Front Brake Caliper

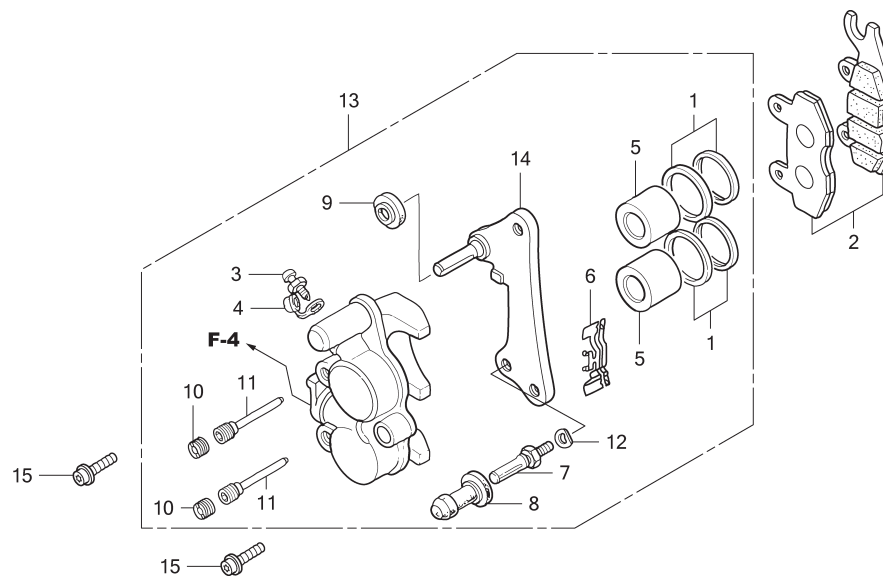

KWC8F0900

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
2 SHOE(PAD) SET, BRAKE :FRONT.....	0.2	1	06451-GE2-406	SEAL SET, PISTON	2	
5 (1) PISTON, FRONT BRAKE CALIPER	0.5	2	06455-KWC-901	PAD SET, FR.	1	
.INCLUDES: Bleed brakes		3	43352-568-003	SCREW, BLEEDER	1	
.NOTE: Same time for two units		4	43353-461-771	CAP, BLEEDER	1	
13 CALIPER, FRONT BRAKE.....	0.4	5	45107-MN5-007	PISTON	2	
.INCLUDES: Bleed brakes		6	45108-ML4-007	SPRING, PAD	1	
14 BRACKET, FRONT CALIPER	0.2	7	45131-GZ0-006	BOLT, PIN	1	
		8	45132-166-016	BOOT, PIN BUSH	1	
		9	45133-MA3-006	BOOT B	1	
		10	45203-MG3-017	PLUG, PIN	2	
		11	45215-KA3-733	PIN, HANGER	2	
		12	45216-166-006	WASHER, WAVE	1	
		13	45250-KWC-901	CALIPER SUB ASSY., R. FR.	1	
		14	45290-KWC-901	BRACKET SUB ASSY., FR.	1	
		15	90131-KPH-880	BOLT, TORX, 8X25	2	


Front Wheel

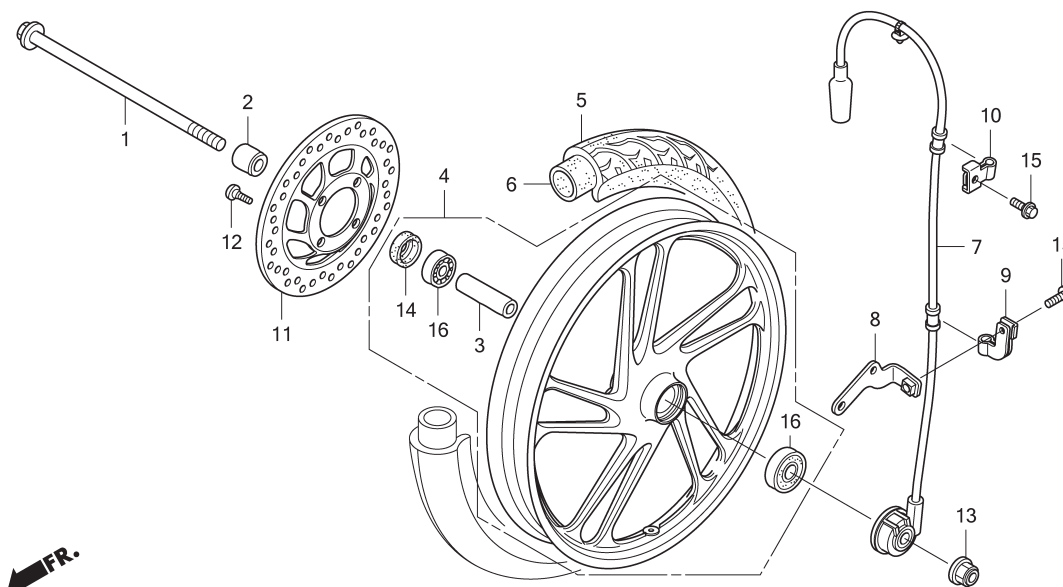

3

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 AXLE, FRONT WHEEL	0.2	1	44301-KAN-T40	AXLE, FR. WHEEL	1	
4 FRONT WHEEL.....	0.8	2	44311-046-000	COLLAR, FR. WHEEL SIDE	1	
5 FRONT TIRE(ONE).....	0.7	3	44620-400-000	COLLAR, FR. AXLE DISTANCE	1	
		4	44601-KWC-901	WHEEL SUB ASSY., FR. *NH303M* MAT AXIS GRAY METALLIC	1	
6 TUBE, FRONT TIRE(ONE)	0.7			TIRE, RR. (70/90 17M/C 38P)	1	
7 GEARBOX ASSY., SPEEDOMETER	0.4	5	44711-KWC-901			
11 DISC, FRONT BRAKE.....	0.3	6	22517-250-170000	TUBE, TIRE (70/90-17)	1	
16 (3) BEARING, FRONT WHEEL(ONE)....	0.4	7	44800-KWC-901	SENSOR ASSY., SPEEDOMETER	1	
Replace 1 bearing add	0.1	8	44815-KWC-900	STAY, SPEEDOMETER CORD	1	
		9	44817-KWC-900	CLAMPER A, SPEEDOMETER CORD	1	
		10	44819-KWC-900	CLAMPER B, SPEEDOMETER CORD	1	
		11	45251-KTM-N01	DISK, FR. BRAKE	1	
		12	90105-KGH-900	BOLT, BRAKE DISK, 8X24	4	
		13	90306-KGH-901	NUT, U, 12MM	1	
		14	91252-KGH-901	DUST SEAL, 23X37X7	1	
			91252-KGH-902	DUST SEAL, 23X37X7	1	
		15	96001-06012-07	BOLT, FLANGE, 6X12	2	
		16	96150-63010-10	BEARING, RADIAL BALL, 6301UU	2	
PC KWCA 03-08						


F - 11

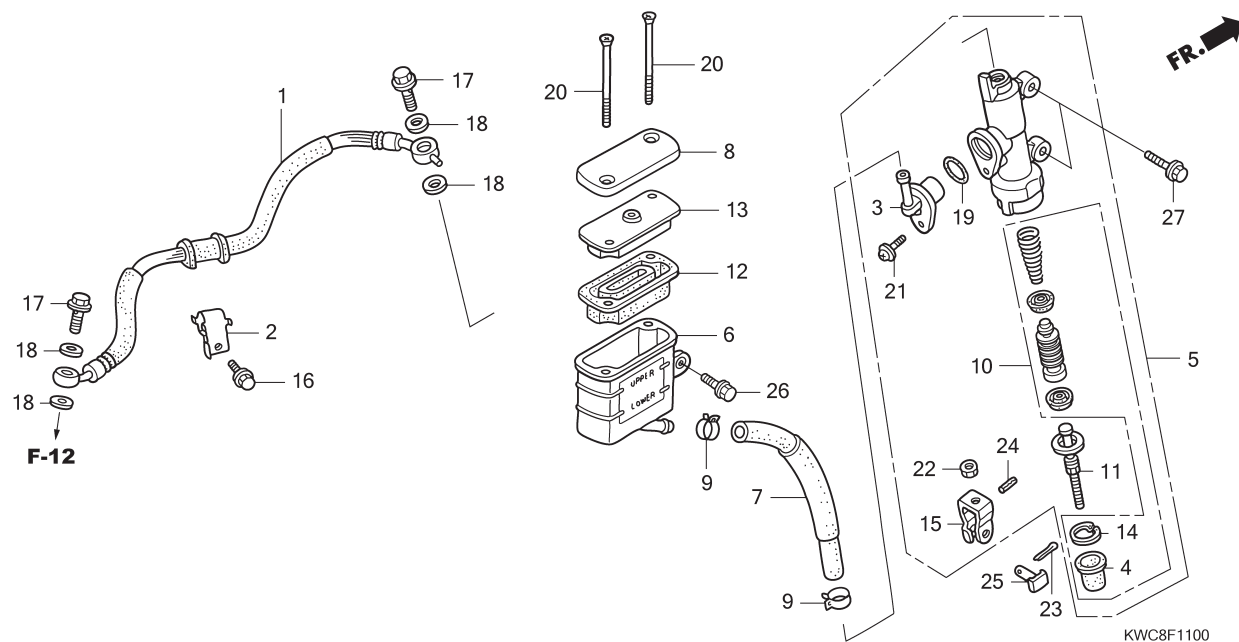RR. Brake Master
Cylinder

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 HOSE, REAR BRAKE	0.4	1	43310-KGH-731	HOSE COMP., RR. BRAKE	1	
.INCLUDES: Bleed brakes		2	43432-KW6-961	CLAMPER, RR. BRAKE HOSE	1	
5 CYLINDER, REAR BRAKE MASTER ..	0.6	3	43503-MR7-007	CONNECTOR	1	
.INCLUDES: Bleed brakes		4	43504-MB2-007	BOOT COMP.	1	
		5	43510-KGH-902	CYLINDER SUB ASSY., RR. BRAKE MASTER	1	
6 CUP, REAR MASTER CYLINDER OIL	0.3	6	43511-KW7-882	CUP COMP., OIL	1	
7 HOSE, REAR MASTER CYLINDER OIL		7	43512-KGH-902	HOSE COMP., RR. BRAKE MASTER CYLINDER	1	
CUP	0.4	8	43513-KBP-882	CAP, MASTER CYLINDER	1	
10 PISTON SET, REAR BRAKE MASTER	0.7	9	43514-KS6-701	CLAMP, MASTER CYLINDER OIL HOSE	2	
.INCLUDES: Bleed brakes		10	43520-MJ6-315	PISTON SET, MASTER CYLINDER	1	
12 DIAPHRAGM, REAR BRAKE MASTER		11	43530-KBA-922	ROD COMP., PUSH	1	
CYLINDER	0.2	12	45520-GW0-912	DIAPHRAGM	1	
		13	45521-GW0-911	PLATE, DIAPHRAGM	1	
		14	46182-MEL-D21	CIRCLIP	1	
		15	46504-KV6-703	JOINT, BRAKE ROD	1	
		16	90102-KGH-900	BOLT, FLANGE, 6X10	1	
		17	90145-KM3-751	BOLT, OIL, 10X22	2	
		18	90545-300-000	WASHER, OIL BOLT	4	
		19	91212-422-006	O-RING, 14.8X2.4	1	
		20	93600-04045-1G	SCREW, FLAT, 4X45	2	

F - 11


RR. Brake Master Cylinder

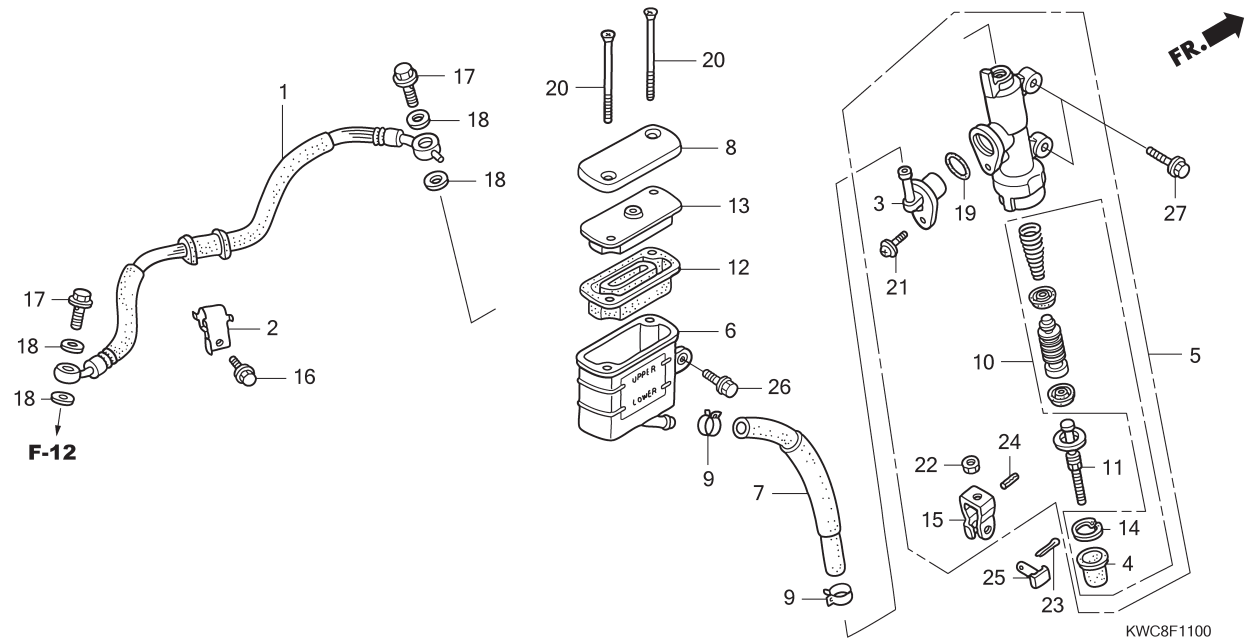

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		21	93893-04012-18	SCREW-WASHER, 4X12	1	
		22	94002-08000-0S	NUT, HEX., 8MM	1	
		23	94201-20121	PIN, SPLIT, 2.0X12	1	
		24	94305-20103	PIN, SPRING, 2X10	1	
		25	95015-54001	PIN D, JOINT	1	
		26	95701-06012-00	BOLT, FLANGE, 6X12	1	
		27	95701-06020-00	BOLT, FLANGE, 6X20	2	

F - 12

Rear Brake Caliper

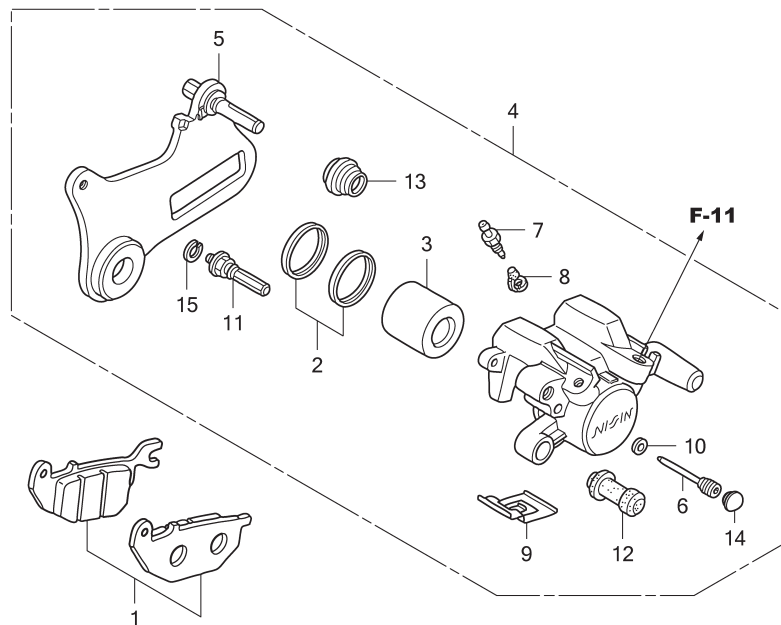


KWC8F1200

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 SHOE(PAD) SET, BRAKE :REAR.....	0.1	1	06435-KWC-901	PAD SET, RR.	1	
3 (2) PISTON, REAR BRAKE CALIPER...	0.7	2	06451-MA7-405	SEAL SET, PISTON	1	
.INCLUDES: Bleed brakes		3	43107-MA7-007	PISTON	1	
4 CALIPER, REAR BRAKE.....	0.6	4	43150-KWC-901	CALIPER SUB ASSY., RR. BRAKE	1	
.INCLUDES: Bleed brakes		5	43190-KWC-901	BRACKET SUB ASSY., RR. CALIPER	1	
5 BRACKET, REAR CALIPER	0.4	6	43215-KGH-902	PIN, HANGER	1	
		7	43352-568-004	SCREW, BLEEDER	1	
		8	43353-461-772	CAP, BLEEDER	1	
		9	45108-ML7-923	SPRING, PAD	1	
		10	45111-MAJ-G42	RING, STOPPER	1	
		11	45131-GZ0-007	BOLT, PIN	1	
		12	45132-166-017	BOOT, PIN BUSH	1	
		13	45133-MA3-007	BOOT B	1	
		14	45203-MCC-007	PLUG, PIN	1	
		15	45216-166-007	WASHER, WAVE	1	

F - 13

Rear Wheel

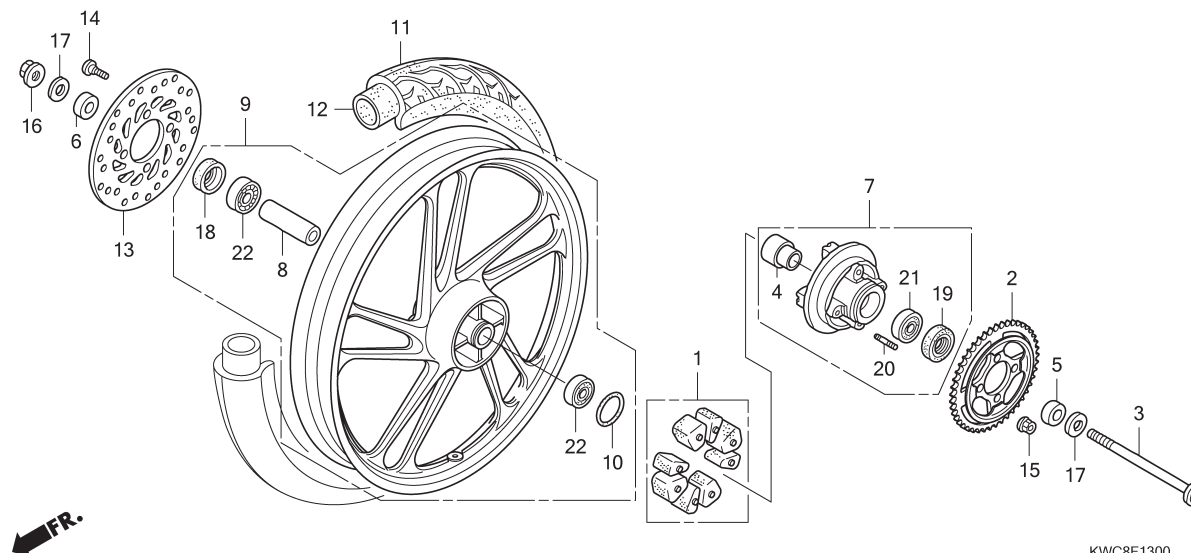


KWC8F1300

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 DAMPER, REAR WHEEL	0.3	1	06410-GCR-000	DAMPER SET, WHEEL	1	
2 SPROCKET, FINAL DRIVEN	0.4	2	41200-KWC-90Z	SPROCKET COMP., FINAL DRIVEN (42T)	1	
3 AXLE, REAR WHEEL.....	0.3	3	42301-KGH-901	AXLE, RR. WHEEL	1	
		4	42303-KBA-901	SLEEVE, RR. WHEEL	1	
7 FLANGE ASSY., FINAL DRIVEN	0.4	5	42304-KBA-921	COLLAR, L. RR. WHEEL SIDE	1	
9 REAR WHEEL.....	0.9					
		6	42313-KGH-901	COLLAR, RR. WHEEL SIDE	1	
11 REAR TIRE(ONE)	0.8	7	42615-KWC-900	FLANGE SUB ASSY., DRIVEN	1	
12 TUBE, REAR TIRE(ONE).....	0.8	8	42620-KW7-881	COLLAR, RR. AXLE DISTANCE	1	
13 DISC, REAR BRAKE.....	0.4	9	42601-KWC-901	WHEEL , RR. *NH303M* MAT AXIS GRAY METALLIC	1	
		10	42653-001-004	O-RING, 40.5X3	1	
21 BEARING, FINAL DRIVEN FLANGE ..	0.5	11	42711-KWC-901	TIRE, RR. (80/90-17M/C 44P)	1	
22 (8)BEARING, REAR WHEEL(ONE)....	0.5	12	27517-0000-00000	TUBE, TIRE (80/90-17)	1	
.Replace 1 bearing add	0.1	13	43351-KTM-N31	DISK, RR. BRAKE	1	
		14	90105-KGH-900	BOLT, BRAKE DISK, 8X24	4	
		15	90304-KGH-901	NUT, U, 10MM	4	

PC KWCA 03-08

F - 13

Rear Wheel

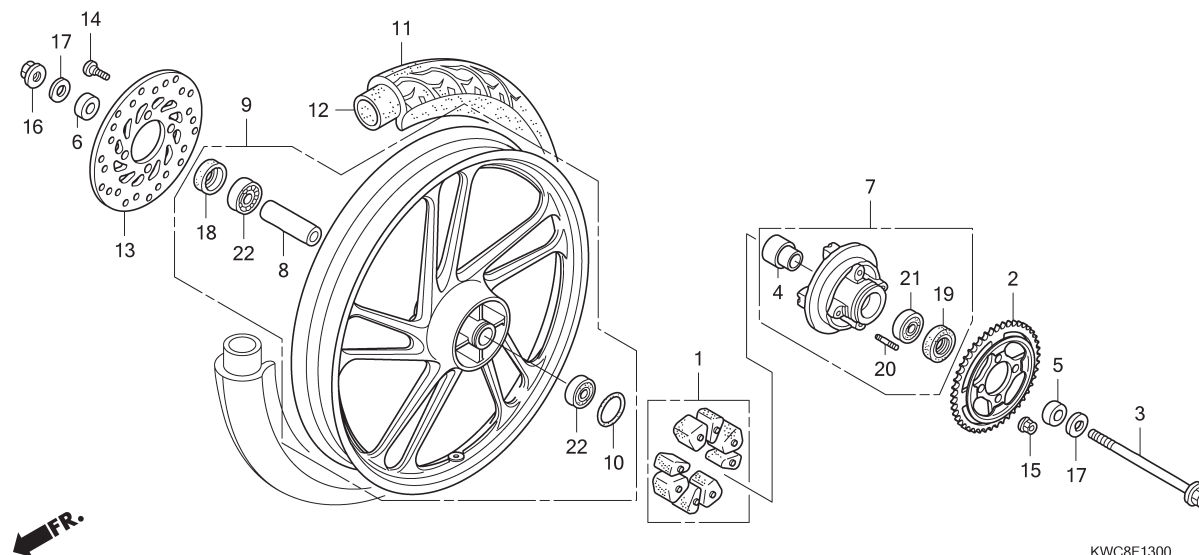

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		16	90306-KGH-901	NUT, U, 12MM	1	
		17	90504-KW7-900	WASHER, RR. AXLE	2	
		18	90753-051-003	OIL SEAL, 26X37X6	1	
			90753-051-005	OIL SEAL, 26X37X6	1	
		19	91251-KPH-881	DUST SEAL, 27X40X4.5	1	
		20	92915-10028-0E	BOLT, STUD, 10X28	4	
		21	96140-62030-10	BEARING, RADIAL BALL, 6203U	1	
		22	96150-63010-10	BEARING, RADIAL BALL, 6301UU	2	


Fuel Tank



3

F - 15


Seat / Grab Rail

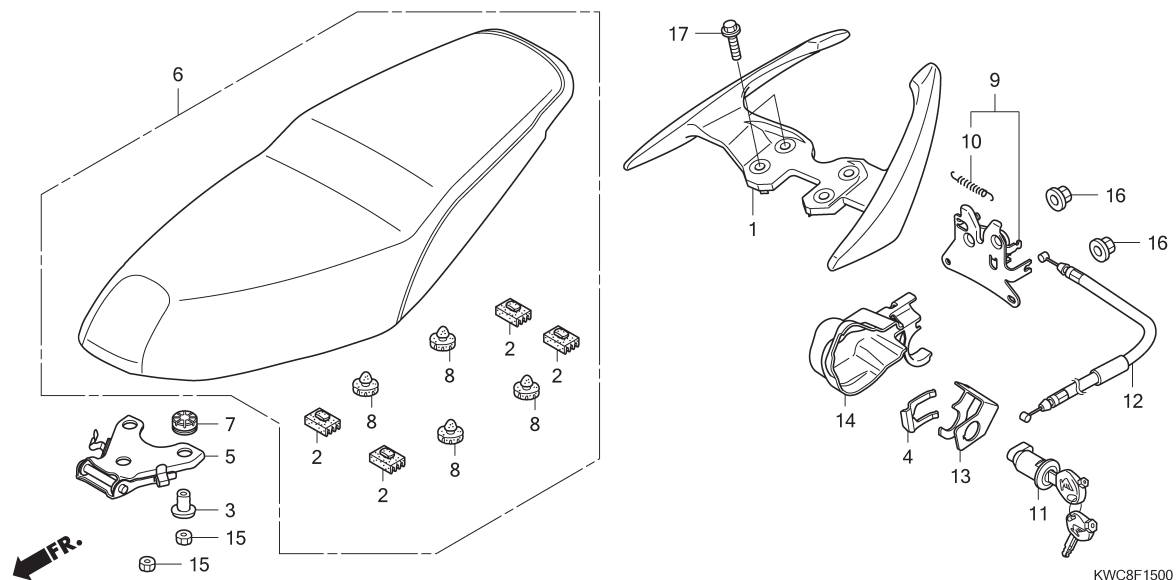

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 RAIL, GRAB :REAR.....	0.1	1	50400-KWC-900	RAIL, RR. GRAB		
5 HINGE, SEAT	0.1	2	50524-001-000	*NH303M* MAT AXIS GRAY METALLIC	1	
6 SEAT :DOUBLE	0.1	3	61104-428-000	RUBBER, MAIN STAND STOPPER	4	
9 LOCK, SEAT	0.6	4	75581-GN8-920	COLLAR, FR. FENDER	3	
11 KEY, SEAT LOCK	0.4	5	77110-KWC-900	SPRING, LOCK KEY SETTING	1	
12 CABLE, SEAT LOCK	0.4	6	77200-KWC-900	HINGE COMP., SEAT	1	
		7	77208-KW7-961	SEAT COMP., DOUBLE	1	
		8	77215-KW7-901	RUBBER B, SEAT MOUNTING	3	
		9	77230-KWC-900	RUBBER C, SEAT SETTING	4	
		10	77234-GN2-000	CATCH COMP., SEAT	1	
		11	77239-KVB-900	SPRING, SEAT LOCK	1	
		12	77240-KWC-900	KEY, SEAT LOCK	1	
		13	77242-KWC-900	CABLE, SEAT LOCK	1	
		14	77243-KWC-900	STAY, SEAT LOCK CABLE	1	
		15	94001-06000-0S	COVER, SEAT LOCK CABLE	1	
		16	94050-06000	NUT, HEX., 6MM	3	
		17	95701-08025-00	NUT, FLANGE, 6MM	2	
				BOLT, FLANGE, 8X25	4	

F - 16

Side Cowl

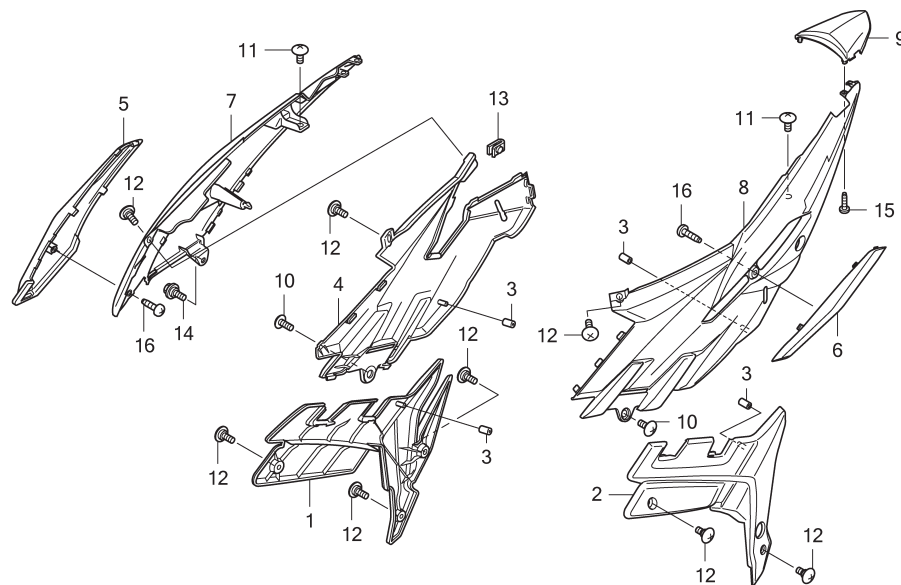


KWC8F1600

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 COVER, PIVOT PLATE :RIGHT	0.1	1	50605-KWC-900ZA	COVER, R. PIVOT		
COVER, PIVOT PLATE :BOTH.....	0.1			*NH255M* SHIMMER SILVER METALLIC	1	
2 COVER, PIVOT PLATE :LEFT	0.1	2	50705-KWC-900ZA	COVER, L. PIVOT		
COVER, PIVOT PLATE :BOTH.....	0.1			*NH255M SHIMMER SILVER METALLIC	1	
4 COVER, SIDE :RIGHT	0.2	3	61312-KBP-900	BOOT, HEADLIGHT BRACKET	4	
		4	64410-KWC-900	COWL, R. FR. SIDE	1	
		5	64480-KWC-900	GARNISH, R. SIDE	1	
7 (5) COVER, BODY :RIGHT.....	0.4					
COVER, BODY :BOTH	0.5	6	64490-KWC-900	GARNISH, L. SIDE	1	
8 (6) COVER, BODY :LEFT	0.4	7	64430-KWC-900DSM	COWL, R. RR. SIDE		
COVER, BODY :BOTH	0.5			*NHA30M* DIGITAL SILVER METALLIC	1	
9 COVER, BODY :REAR	0.4		64430-KWC-900CSR	*R333C* CANDY SCARLET RED	(1)	
			64430-KWC-900AFB	*NHB12M* AFFINITY BLACK METALLIC	(1)	
			64430-KWC-900DGM	*YR293M* DIABLO GOLD METALLIC	(1)	
		8	64420-KWC-900DSM	COWL, L. SIDE		
				NHA30M DIGITAL SILVER METALLIC	1	
			64420-KWC-900CSR	*R333C* CANDY SCARLET RED	(1)	
			64420-KWC-900AFB	*NHB12M* AFFINITY BLACK METALLIC	(1)	
			64420-KWC-900DGM	*YR293M* DIABLO GOLD METALLIC	(1)	

F - 16

Side Cowl

FR.

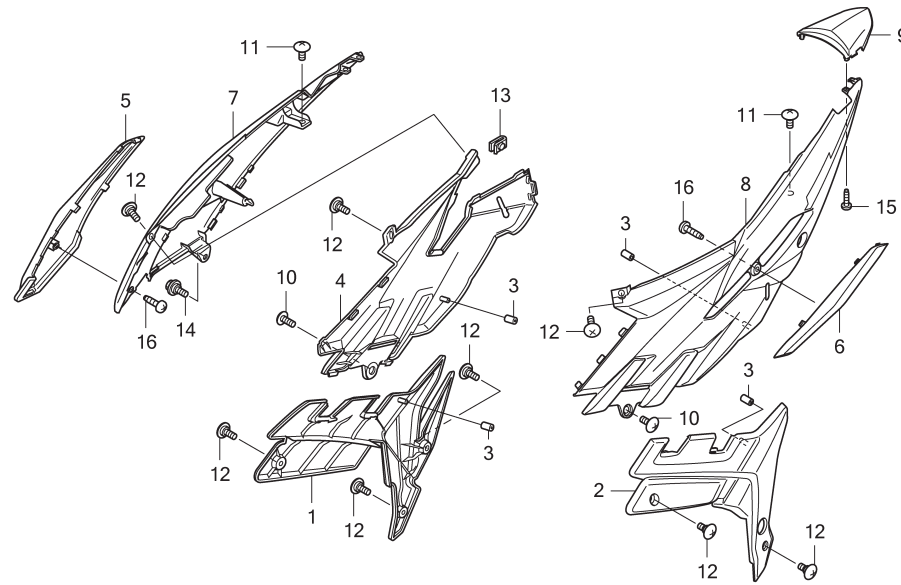

KWC8F1600


3

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		9	83510-KWC-900DSM	COWL, RR. CENTER		
				NHA30M..... DIGITAL SILVER METALLIC	1	
			83510-KWC-900CSR	*R333C*..... CANDY SCARLET RED	(1)	
			83510-KWC-900AFB	*NHB12M*..... AFFINITY BLACK METALLIC	(1)	
			83510-KWC-900DGM	*YR293M*..... DIABLO GOLD METALLIC	(1)	
		10	90107-KWC-900	BOLT, BODY COVER SETTING	2	
		11	90107-KW7-931	BOLT, COWL SETTING	2	
		12	90115-KW7-900	SCREW, VISOR SPECIAL SETTING	8	
		13	90677-KAN-T00	NUT, CLIP, 5MM	1	
		14	91509-GE2-760	SCREW, PAN, 5X11.5	1	
		15	93903-34220	SCREW, TAPPING, 4X10	4	
		16	93903-35220	SCREW, TAPPING, 5X12	2	

PC KWCA 03-08

F - 17

Air Cleaner

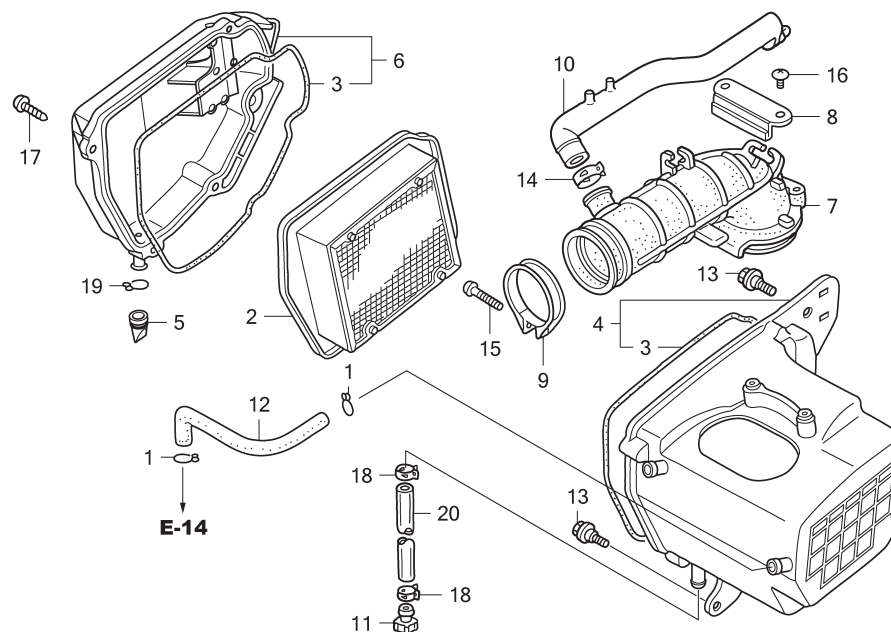


KWC8F1700

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
2 ELEMENT, AIR CLEANER	0.2	1	15771-KV6-000	CLIP, OIL DRAIN TUBE	2	
4 CASE, AIR CLEANER	0.9	2	17210-KWC-900	ELEMENT COMP., AIR CLEANER	1	
		3	17213-KGH-901	SEAL, AIR CLEANER	2	
6 COVER, AIR CLEANER CASE	0.2	4	1725A-KWC-900	CASE, SUB AIR CLEANER ASSY	1	
7 TUBE, AIR CLEANER CONNECTING ..	0.8	5	17234-KCW-871	TUBE, AIR CLEANER DRAIN	1	
		6	17235-KWC-900	COVER, SUB AIR CLEANER	1	
		7	17253-KGH-901	TUBE, AIR CLEANER CONNECTING	1	
		8	17254-KGH-901	PLATE, AIR CLEANER CONNECTING TUBE	1	
		9	17255-371-001	BAND, INTAKE MANIFOLD	1	
		10	17311-KGH-901	RESONATOR	1	
		11	17370-419-701	PLUG, BREATHER TUBE	1	
		12	17639-KGH-901	TUBE, MISSION BREATHER	1	
		13	90111-162-000	BOLT, FLANGE, 6MM	2	
		14	91405-KGH-901	CLAMP, TUBE (D29)	1	
		15	93500-05030-0G	SCREW, PAN, 5X30	1	
		16	93903-25210	SCREW, TAPPING, 5X12	2	
		17	93903-25581	SCREW, TAPPING, 5X25	5	
		18	95002-41050-09	CLAMP, TUBE (D10.5)	2	
		19	95002-80001	CLIP, TUBE (C12)	1	
		20	95003-23032-31	TUBE, VINYL, 8X12X320	1	

PC KWCA 03-08

F - 17 - 1

Sub Air Cleaner

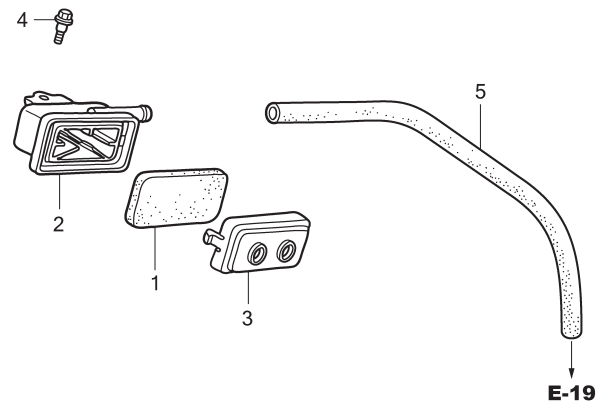


KWC8F1701

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 ELEMENT, SUB AIR CLEANER.....	0.5	1	17254-KAZ-001	FILTER, SUB AIR CLEANER	1	
2 CASE, SUB AIR CLEANER	0.5	2	17256-KGH-901	CASE, SUB AIR CLEANER	1	
		3	17257-KGH-901	COVER, SUB AIR CLEANER	1	
		4	90111-162-000	BOLT, FLANGE, 6MM	1	
		5	95005-80180-30	TUBE, 8X180	1	

F - 18

Air Injection Control Valve

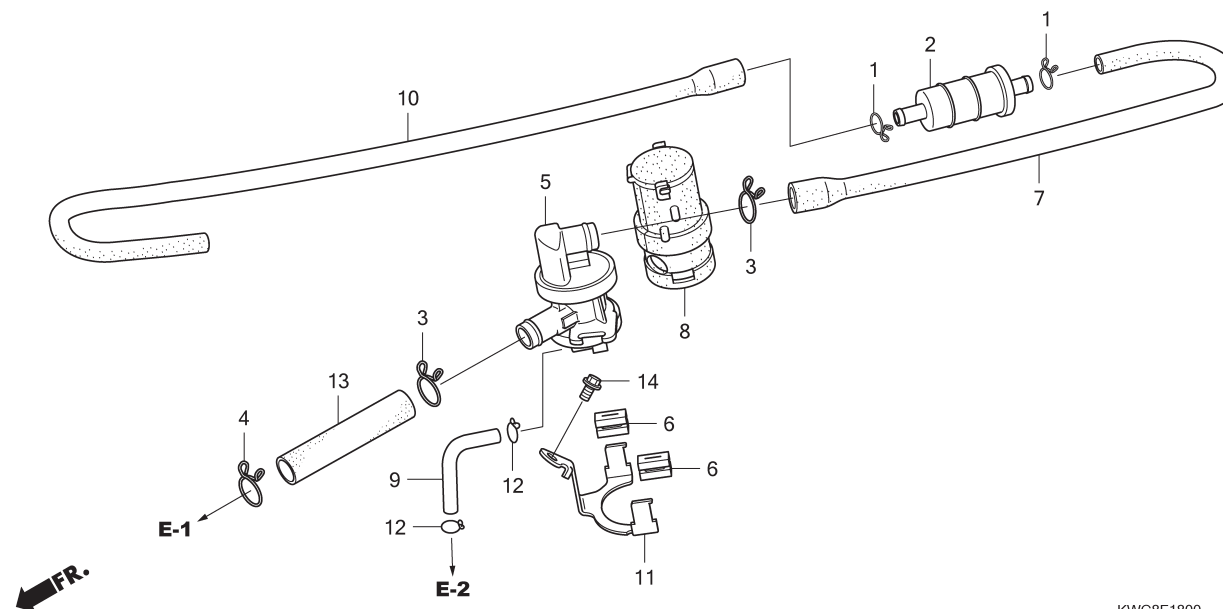


KWC8F1800

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
2 FILTER, SECONDARY AIR SUPPLY	0.4	1	15771-KV6-000	CLIP, OIL DRAIN TUBE	2	
5 VALVE, SECONDARY AIR CONTROL	0.7	2	17260-KRS-T01	FILTER COMP., AIR	1	
		3	17316-611-000	CLIP, BREATHER TUBE	2	
		4	17724-102-701	CLIP, SUB TANK HOSE	1	
		5	18650-KGH-902	VALVE ASSY., AIR INJECTION CONTROL	1	
		6	18651-KGH-902	RUBBER, AIR INJECTION CONTROL VALVE	2	
		7	18652-KWC-900	TUBE A, AIR INJECTION CONTROL VALVE	1	
		8	18653-KGH-902	COVER, AIR INJECTION CONTROL VALVE	1	
		9	18654-KGH-901	TUBE, AICV PB	1	
		10	18657-KWC-900	TUBE B, AIR INJECTION CONTROL VALVE	1	
		11	18660-KGH-902	STAY, AIR INJECTION CONTROL VALVE	1	
		12	95002-02070	CLIP, TUBE (B7)	2	
		13	95005-12100-20	TUBE, 12X100	1	
		14	96001-06010-01	BOLT, FLANGE, 6X10	1	

F - 19

Exhaust Muffler

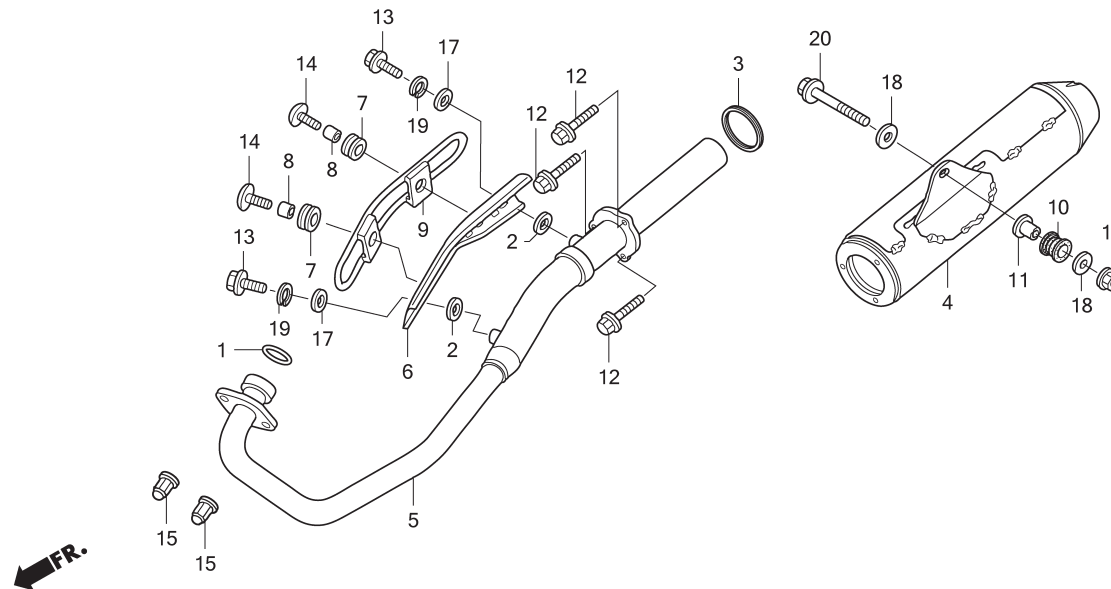


KWC8F1900

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 GASKET, EXHAUST PIPE	0.2	1	18291-MN5-651	GASKET, EX. PIPE	1	
4 MUFFLER.....	0.1	2	18292-KGH-600	PACKING, PROTECTOR	2	
5 PIPE, EXHAUST	0.2	3	18292-KGH-902	GASKET, EX. PIPE	1	
6 (9) COVER, EXHAUST PIPE	0.1	4	18310-KWC-900	MUFFLER COMP.	1	
		5	18320-KWC-900	PIPE COMP., EX.	1	
		6	18321-KGH-600	COVER, EX. PIPE	1	
		7	18345-KGH-600	RUBBER, PROTECTOR MOUNTING	2	
		8	18346-KGH-600	COLLAR, MUFFLER GUARD	2	
		9	18361-KGH-600	GUARD, EX. PIPE	1	
		10	18421-KE8-001	RUBBER, MUFFLER MOUNTING	1	
		11	18422-KGC-901	COLLAR, MUFFLER MOUNTING	1	
		12	90105-KPP-900	BOLT, SPECIAL, 6X20	3	
		13	90106-KPP-900	BOLT, SPECIAL, 6X10	2	
		14	90107-KGH-600	SCREW, 6X12	2	
		15	90304-KPH-900	NUT, HEX. CAP, 8MM	2	
		16	94050-08000	NUT, FLANGE, 8MM	1	
		17	94101-06700	WASHER, PLAIN, 6MM	2	
		18	94103-08000	WASHER, PLAIN, 8MM	2	
		19	94111-06700	WASHER, SPRING, 6MM	2	
		20	95701-08040-01	BOLT, FLANGE, 8X40	1	

F - 20


Pedal / Kick Starter Arm

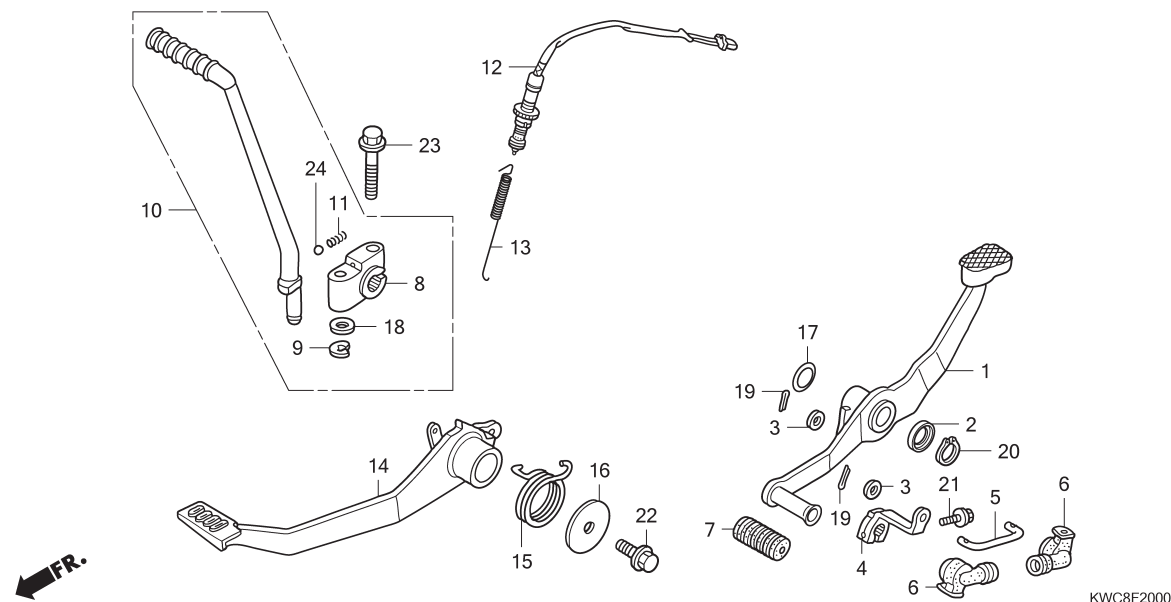

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 PEDAL, GEAR CHANGE	0.2	1	24701-KGH-901	PEDAL, GEAR CHANGE	1	
8 JOINT, KICK STARTER ARM	0.2	2	24703-KGH-901	WASHER, CHANGE PEDAL	1	
10 ARM, KICK STARTER	0.1	3	24703-KW6-841	WASHER, NYLON, 7MM	2	
		4	24711-KWC-900	ARM COMP., GEAR CHANGE	1	
12 SWITCH, REAR STOP :PEDAL SIDE	0.5	5	24720-KGH-901	ROD, TIE	1	
14 PEDAL, REAR BRAKE	0.2	6	24721-KW6-961	COVER, CHANGE PEDAL	2	
		7	24781-449-001	RUBBER, GEAR CHANGE	1	
		8	28241-KET-901	JOINT, KICK ARM	1	
		9	28293-333-000	CLIP, KICK STARTER ARM	1	
		10	28300-KGH-600	ARM ASSY., KICK STARTER	1	
		11	28333-KAN-T41	SPRING, KICK STARTER STOPPER	1	
		12	35350-KGH-731	SWITCH ASSY., RR. STOP	1	
		13	35357-GBG-851	SPRING, STOP SWITCH	1	
		14	46500-KGH-901	PEDAL COMP., RR. BRAKE	1	
		15	46514-KAN-941	SPRING, BRAKE PEDAL	1	
		16	46515-KGH-901	PLATE, SPRING SETTING	1	
		17	90405-ZA8-800	WASHER, WAVE, 15MM	1	
		18	90505-116-671	WASHER, 13X20	1	
		19	94201-20150	PIN, SPLIT, 2.0X15	2	
		20	94510-15000	CIRCLIP, EXTERNAL, 15MM	1	

PC KWCA 03-08


F - 20

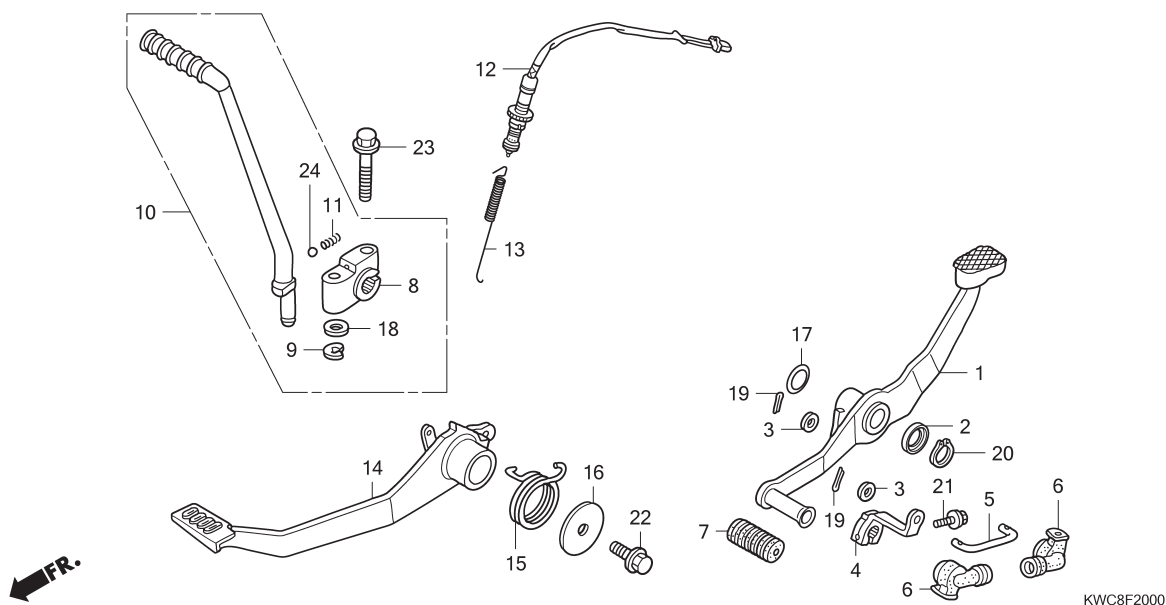Pedal / Kick
Starter Arm

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		21	95701-06020-07	BOLT, FLANGE, 6X20	1	
		22	95701-08012-00	BOLT, FLANGE, 8X12	1	
		23	95701-08032-07	BOLT, FLANGE, 8X32	1	
		24	96211-08000	BALL, STEEL, #8 (1/4)	1	

F - 21

Step

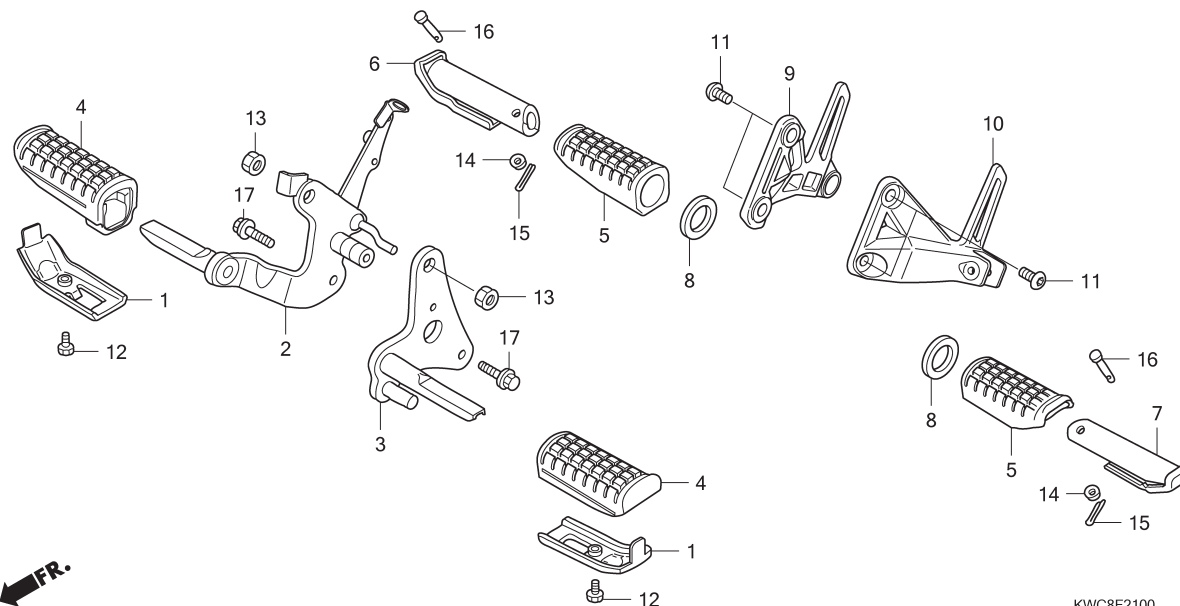

KWC8F2100

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
2 HOLDER, STEP :RIGHT	0.3	1	50619-KGH-901	PLATE, MAIN STEP LOWER	2	
HOLDER, STEP :BOTH	0.5	2	50650-KGH-600	HOLDER, R. MAIN STEP	1	
3 HOLDER, STEP :LEFT	0.2	3	50660-KGH-600	HOLDER, L. MAIN STEP	1	
HOLDER, STEP :BOTH	0.5	4	50661-KW7-901	RUBBER, MAIN STEP	2	
4 RUBBER, STEP :LEFT	0.1	5	50710-KET-601	RUBBER, PILLION STEP	2	
RUBBER, STEP :RIGHT	0.1	6	50711-KET-601	BAR, R. PILLION STEP	1	
RUBBER, STEP :BOTH	0.1	7	50712-KET-601	BAR, L. PILLION STEP	1	
6 BAR, PILLION STEP :RIGHT	0.1	8	50715-KE8-001	PLATE, PILLION STEP SIDE	2	
BAR, PILLION STEP :BOTH	0.2	9	50715-KWC-900	HOLDER, R. PILLION STEP	1	
7 BAR, PILLION STEP :LEFT	0.1	10	50716-KWC-900	HOLDER, L. PILLION STEP	1	
BAR, PILLION STEP :BOTH	0.2	11	90128-KET-900	BOLT, SOCKET, 8X22	4	
9 BRACKET, PILLION STEP :RIGHT	0.1	12	92101-06012-0A	BOLT, HEX., 6X12	2	
BRACKET, PILLION STEP :BOTH	0.2	13	94002-12000-0S	NUT, HEX., 12MM	2	
10 BRACKET, PILLION STEP :LEFT	0.1	14	94101-06000	WASHER, PLAIN, 6MM	2	
BRACKET, PILLION STEP :BOTH	0.2	15	94201-16150	PIN, SPLIT, 1.6X15	2	
		16	95015-83000	PIN C, PILLION STEP	2	
		17	95701-08020-07	BOLT, FLANGE, 8X20	2	


PC KWCA 03-08

3

F - 22

Stand

FR.

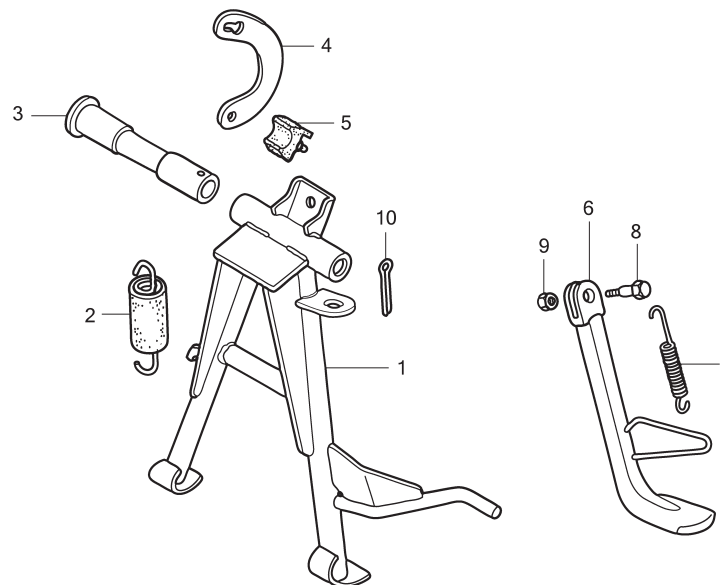


KWC8F2200

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 (3) STAND, MAIN.....	0.5	1	50500-KGH-600	STAND COMP., MAIN	1	
2 (4) SPRING, MAIN STAND.....	0.1	2	50502-KGH-901	SPRING ASSY., MAIN STAND	1	
		3	50512-KAN-961	PIPE, MAIN STAND PIVOT	1	
6 BAR, SIDE STAND	0.2	4	50523-KGH-600	HOOKE, MAIN STAND SPRING	1	
7 SPRING, SIDE STAND.....	0.1	5	50524-KBP-901	RUBBER, STAND STOPPER	1	
		6	50530-KWC-900	BAR COMP., SIDE STAND	1	
		7	50535-KW7-901	SPRING, SIDE STAND	1	
		8	90108-223-000	SCREW, SIDE STAND PIVOT	1	
		9	94030-10001	NUT, HEX., 10MM	1	
		10	94201-30251	PIN, SPLIT, 3.0X25	1	

F - 23

Swingarm

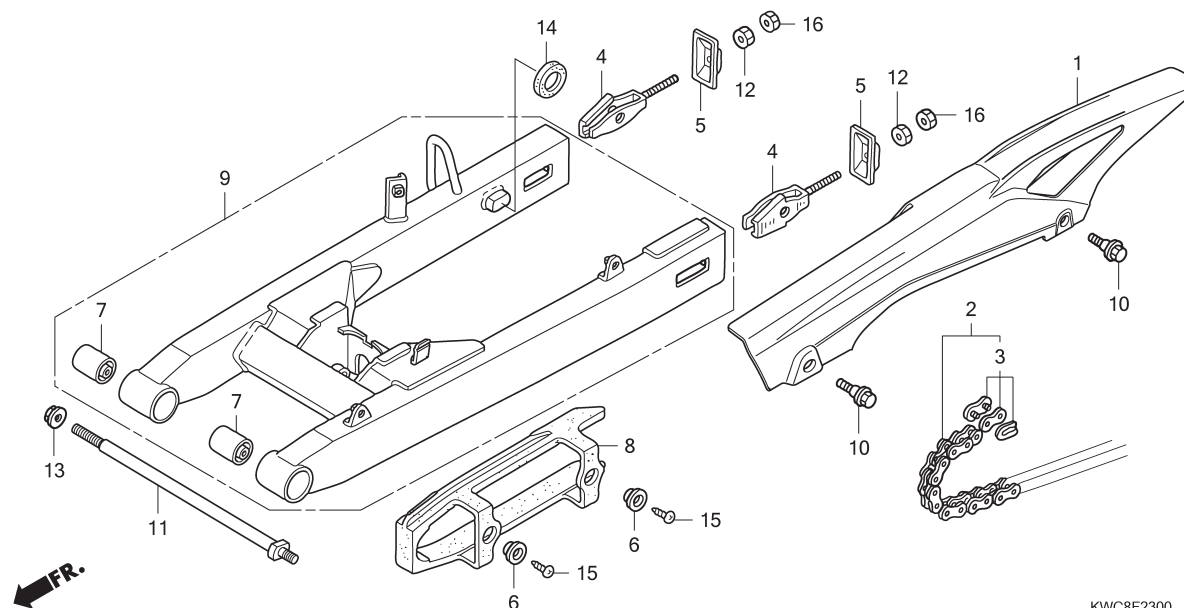


KWC8F2300

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 CASE, DRIVE CHAIN.....	0.1	1	40510-KWC-900	CASE, DRIVE CHAIN	1	
2 CHAIN, DRIVE	0.2	2	40530-KWC-900	CHAIN, DRIVE (428-116)	1	
7 BUSH, SWINGARM PIVOT.....	1.0	3	40531-KGH-901	JOINT, DRIVE CHAIN	1	
.Replace 1 swingarm pivot bush add.....	0.1	4	40543-KBA-901	ADJUSTER, CHAIN	2	
8 SLIDER, CHAIN	0.6	5	40546-KBA-901	CAP, RR. FORK END	2	
9 SWINGARM ASSEMBLY.....	0.9	6	52108-KW6-901	COLLAR, CHAIN SLIDER	2	
		7	52147-KGH-901	RUBBER BUSH, SWINGARM PIVOT	2	
		8	52170-KGH-600	SLIDER, CHAIN	1	
		9	5210A-KWC-900	SWINGARM ASSY, RR		
				NH303M..... MAT AXIS GRAY METALLIC	1	
		10	90111-187-000	BOLT, FLANGE, 6MM	2	
		11	90121-KGH-901	BOLT, SWINGARM PIVOT	1	
		12	90302-KBP-900	NUT, SPECIAL, 6MM	2	
		13	90302-KGH-900	NUT, SPECIAL FLANGE, 12MM	1	
		14	90502-KGH-900	SPACER, RR. CALIPER	1	
		15	93901-26180	SCREW, TAPPING, 6X12	2	
		16	94001-06000-0S	NUT, HEX., 6MM	2	

PC KWCA 03-08

F - 24

Rear Cushion

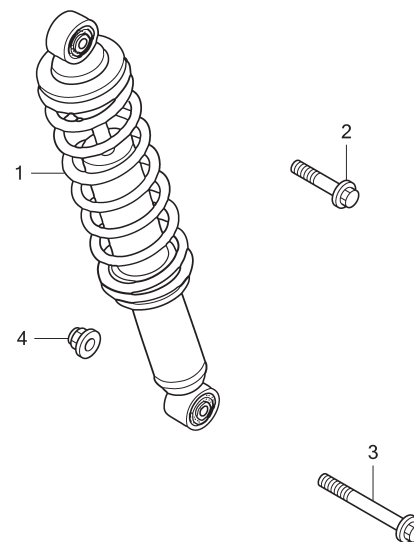


KWC8F2400

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 CUSHION ASSY., REAR.....	0.7	1	52400-KWC-901	CUSHION ASSY., RR.	1	
		2	90103-KE8-004	BOLT, FLANGE, 10X46	1	
		3	90106-HB3-001	BOLT, FLANGE, 10X85	1	
		4	90304-KGH-901	NUT, U, 10MM	1	

F - 25

Rear Fender

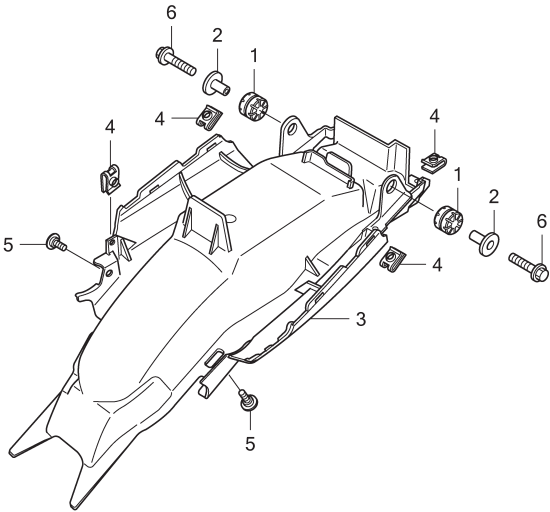


KWC8F2500

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
3 FENDER, INNER :REAR.....	0.6	1	33705-KW7-900	RUBBER A, TAILLIGHT MOUNTING	2	
		2	33706-KAN-961	COLLAR, TAILLIGHT MOUNTING	2	
		3	80101-KWC-900	FENDER, RR. INNER	1	
		4	90677-KAN-T00	NUT, CLIP, 5MM	5	
		5	91509-GE2-760	SCREW, PAN, 5X11.5	2	
		6	95701-06025-00	BOLT, FLANGE, 6X25	2	
PC KWCA 03-08						

F - 26


Front Winker

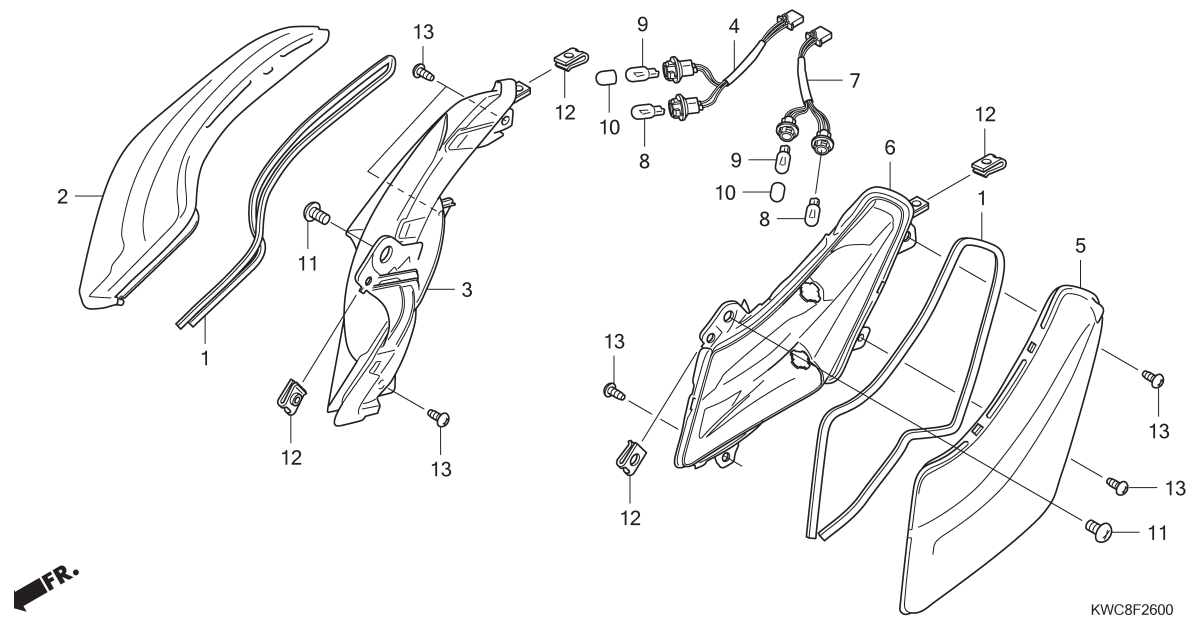

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
2 (1)		1	32404-KWC-901	GASKET	2	
LENS, FRONT WINKER :RIGHT	0.5	2	33402-KWC-901	LENS, R. FR. WINKER	1	
LENS, FRONT WINKER :BOTH	0.6	3	33403-KWC-901	BASE, R. WINKER	1	
3 BASE, WINKER :RIGHT FRONT	0.5	4	33407-KWC-901	SOCKET COMP., R. WINKER	1	
BASE, WINKER :BOTH FRONT	0.6	5	33452-KWC-901	LENS, L. FR. WINKER	1	
4 SOCKET, WINKER :RIGHT FRONT	0.2	6	33453-KWC-901	BASE, L. WINKER	1	
SOCKET, WINKER :BOTH FRONT	0.2	7	33457-KWC-901	SOCKET COMP., L. WINKER	1	
5 (1)		8	34905-KAN-W01	BULB, WINKER (12V 10W)	2	
LENS, FRONT WINKER :LEFT	0.5	9	34908-GA7-701	BULB, WEDGE BASE (T10) (12V 3.4W)	2	
LENS, FRONT WINKER :BOTH	0.6	10	37224-KVL-N01	CAP, WEDGE BASE BULB	2	
6 BASE, WINKER :LEFT FRONT	0.5	11	90107-KWC-900	BOLT, BODY COVER SETTING	2	
BASE, WINKER :BOTH FRONT	0.6	12	90677-KAN-T00	NUT, CLIP, 5MM	4	
7 SOCKET, WINKER :LEFT FRONT	0.2	13	93903-34320	SCREW, TAPPING, 4X12	6	
SOCKET, WINKER :BOTH FRONT	0.2					
8 BULB, WINKER :FRONT	0.2					
.NOTE: Same time for two units						
BULB, WINKER :FOR 1 VEHICLE.....	0.3					
9 BULB, POSITION LIGHT	0.2					
.NOTE: Same time for two units						
PC KWCA 03-08						

F - 27

Rear Combination Light

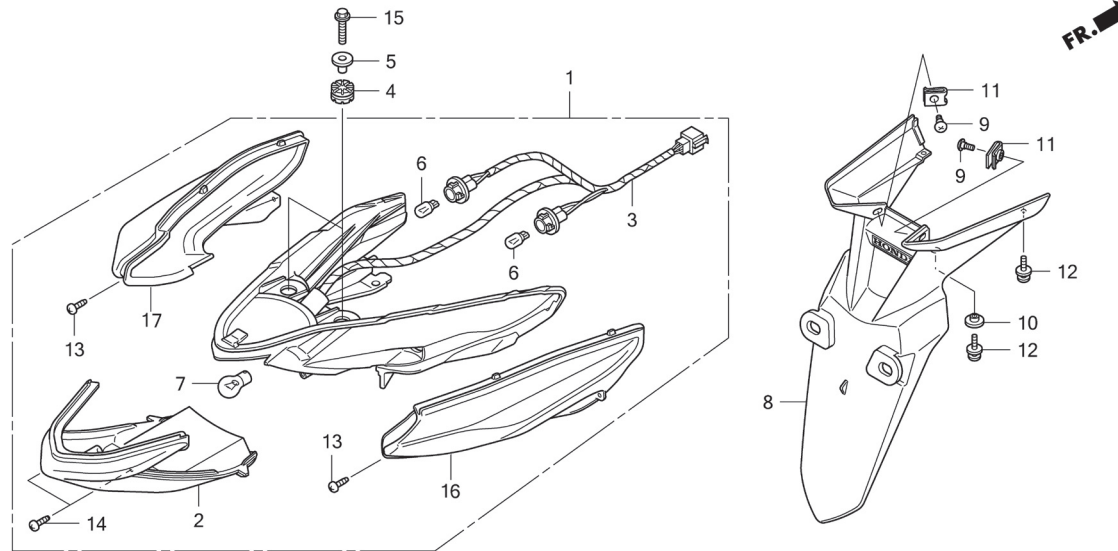


KWC8F2700

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 TAILLIGHT ASSEMBLY.....	0.5	1	3370A-KWC-900	LIGHT ASSY., RR. COMBINATION (12V 18/5W)	1	
2 LENS, TAILLIGHT	0.1	2	33701-KWC-901	LENS, RR. COMBINATION LIGHT	1	
3 BASE, TAILLIGHT	0.5	3	33704-KWC-901	BASE COMP., TAILLIGHT	1	
		4	33705-KW7-900	RUBBER A, TAILLIGHT MOUNTING	2	
		5	33706-KAN-961	COLLAR, TAILLIGHT MOUNTING	2	
6 BULB, WINKER :REAR.....	0.1	6	34905-KAN-W01	BULB, WINKER (12V 10W)	2	
.NOTE: Same time for two units		7	34906-GB6-921	BULB, TAILLIGHT (12V 18/5W)	1	
BULB, WINKER :FOR 1 VEHICLE.....	0.3	8	83500-KWC-900ZA	FENDER SET, RR. (WL)	1	
7 BULB, TAILLIGHT	0.1	9	90150-GBT-000	SCREW, PAN, 5X13	2	
8 FENDER, REAR.....	0.1	10	90502-KWC-900	COLLAR, 5X2.0	2	
		11	90677-KAN-T00	NUT, CLIP, 5MM	2	
		12	93891-05016-08	SCREW-WASHER, 5X16	4	
		13	93901-24310	SCREW, TAPPING, 4X12	2	
		14	93901-24580	SCREW, TAPPING, 4X20	2	
		15	95701-06022-00	BOLT, FLANGE, 6X22	2	
		16	33702-KWC-901	LENS, WINKER R, RR	1	
		17	33752-KWC-901	LENS, WINKER L, RR	1	

PC KWCA 03-08

F - 28

Battery

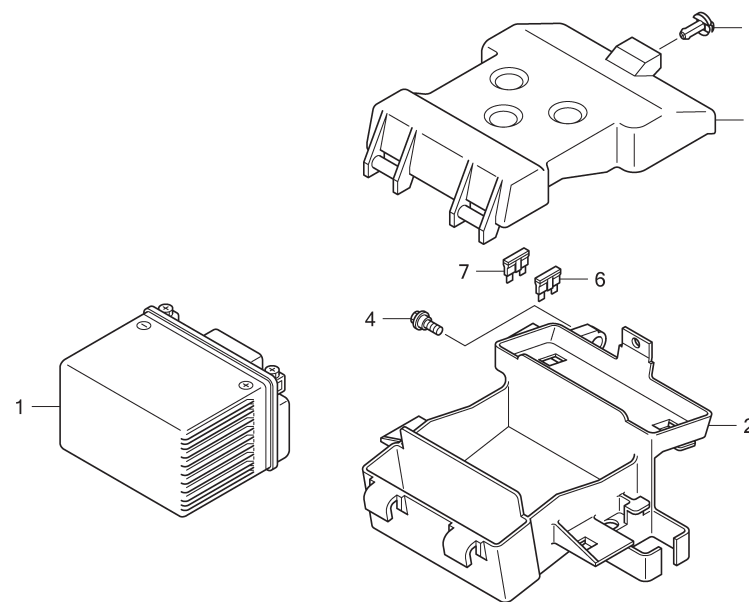


KWC8F2800

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 BATTERY	0.2	1	31500-KPH-881	BATTERY ASSY.	1	
2 BOX, BATTERY	0.5	2	50380-KWC-900	CASE, BATTERY	1	
3 COVER, BATTERY	0.1	3	50381-KWC-900	COVER, BATTERY	1	
		4	90111-162-000	BOLT, FLANGE, 6MM	1	
		5	90683-GAZ-003	CLIP, TRIM	1	
		6	98200-31000	FUSE, BLADE (10A)	1	
		7	98200-31500	FUSE, BLADE (15A)	1	

F - 29

Wire Harness

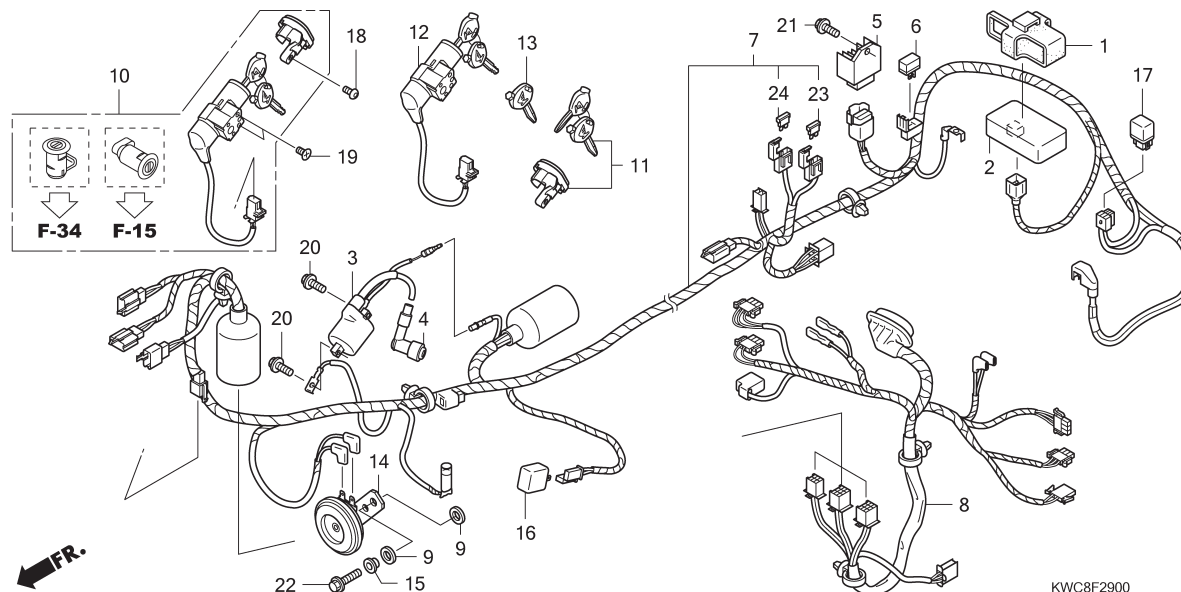


Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
2 IGNITION CONTROL MODULE	0.6	1	30401-KWC-901	CUSHION, C.D.I. UNIT	1	
3 COIL, IGNITION	0.7	2	30410-KWC-901	C.D.I. UNIT	1	
5 RECTIFIER, REGULATE.....	0.6	3	30500-KWC-900	COIL ASSY., IGNITION	1	
		4	30700-KPH-881	CAP ASSY., NOISE SUPPRESSOR	1	
7 HARNESS, WIRE	1.0	5	31600-KGH-731	RECTIFIER COMP., REGULATE	1	
8 SUB HARNESS, METER	0.8	6	31700-124-008	RECTIFIER ASSY., SILICON	1	
10 KEY SET	2.1	7	32100-KWC-900	HARNESS, WIRE	1	
11 KEY, SHUTTER	0.2	8	32101-KWC-900	SUB HARNESS, SPEEDOMETER	1	
EXCLUDES: Key cutting		9	33714-KL3-620	RUBBER, TAILLIGHT BRACKET	2	
12 SWITCH, COMBINATION & LOCK	1.7	10	35010-KWC-900	KEY SET	1	
14 HORN(S)	0.1	11	35011-KVB-930	SHUTTER SET, KEY (93KEYTOP1REPORDE)	1	
16 RELAY, WINKER	0.5	12	35100-KWC-901	SWITCH ASSY., COMBINATION & LOCK	1	
17 RELAY, STARTER	0.5	13	35121-KVB-900	KEY, BLANK (90KEYTOP2REPORDE)	(1)	
		14	38110-KTM-851	HORN COMP.(HIGH)	1	
		15	38117-KPH-880	COLLAR, HORN SETTING	1	
		16	38301-KPH-881	RELAY COMP., WINKER	1	
		17	38501-KG8-003	RELAY COMP., STARTER	1	
			38501-KVB-901	RELAY COMP., STARTER	1	
		18	90106-KTM-780	BOLT, SOCKET, 6X10	1	
		19	90164-028-000	SCREW, U-LOCK FLAT, 6X12	2	
		20	93301-05016-0A	BOLT, HEX., 5X16	2	

PC KWCA 03-08

F - 29


Wire Harness

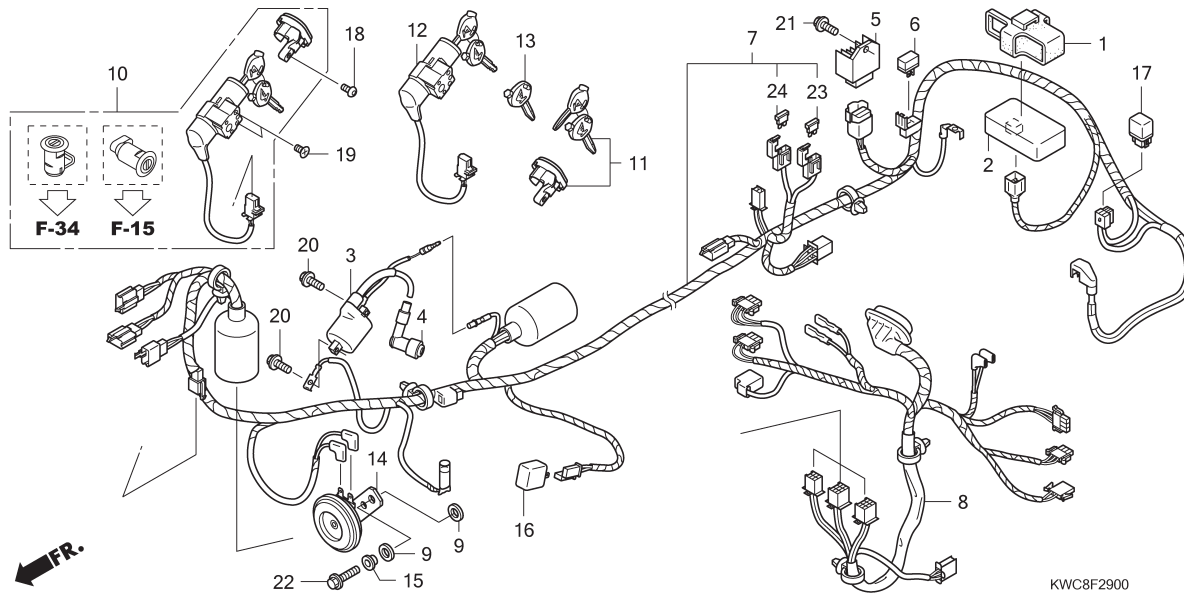

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		21	95701-06012-00	BOLT, FLANGE, 6X12	1	
		22	95701-06020-00	BOLT, FLANGE, 6X20	1	
		23	98200-31001	FUSE, BLADE (10A)	1	
		24	98200-31500	FUSE, BLADE (15A)	1	

F - 30

Frame Body

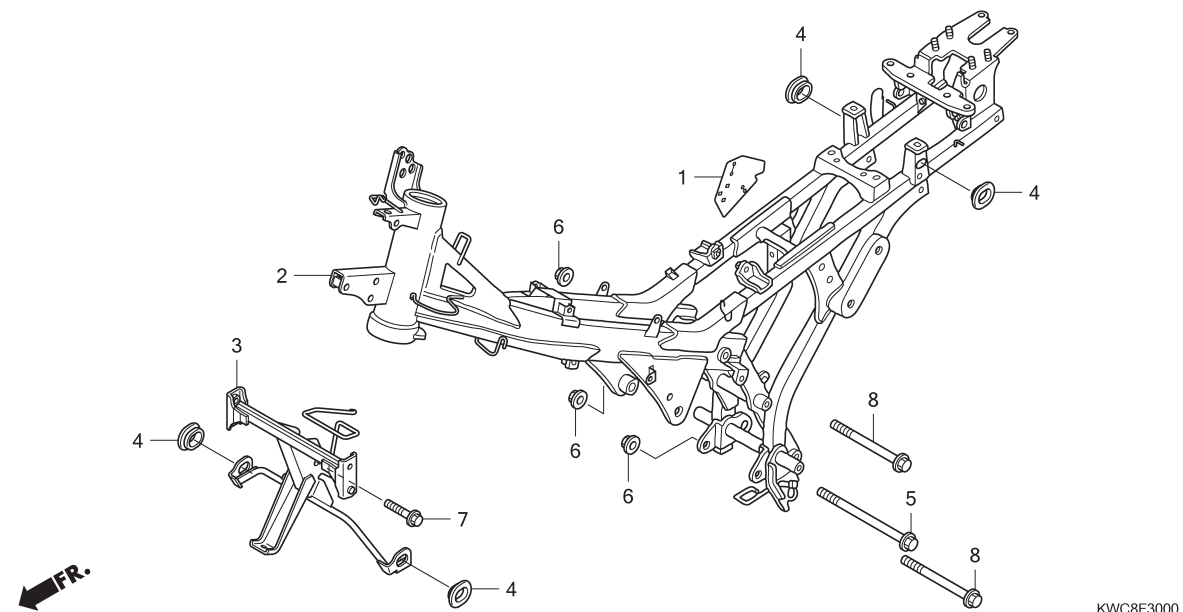


KWC8F3000

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
2 BODY, FRAME.....	5.7	1	17270-KWC-900	RUBBER, AIR CLEANER WATER GUARD	1	
.INCLUDES: Engine removal and installation		2	50100-KWC-900	BODY COMP., FRAME	1	
3 STAY, HEADLIGHT	0.4	3	64221-KWC-900	STAY COMP., HEADLIGHT	1	
		4	83551-GE2-000	GROMMET, AIR CLEANER CASE	4	
		5	90103-KGH-900	BOLT, ENGINE HANGER	1	
		6	94050-10000	NUT, FLANGE, 10MM	3	
		7	95701-08032-00	BOLT, FLANGE, 8X32	2	
		8	95701-10120-08	BOLT, FLANGE, 10X120	2	

F - 31

Radiator

FR.

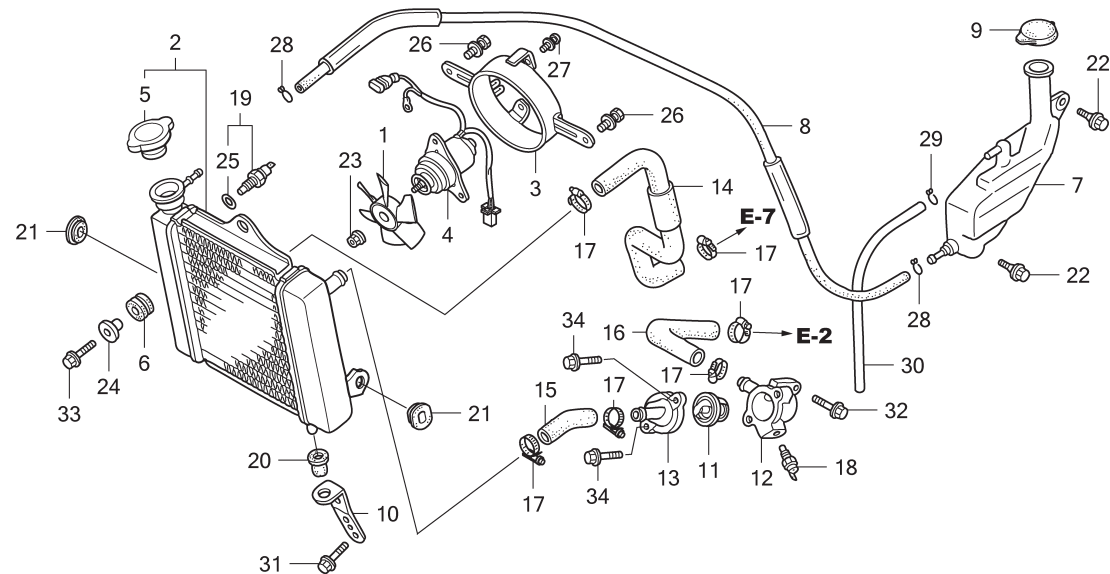


KWC8F3100

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 FAN, COOLING.....	0.6	1	19009-KGH-902	FAN COMP., COOLING	1	
2 RADIATOR.....	0.9	2	19010-KWC-901	RADIATOR COMP.	1	
3 SHROUD, RADIATOR.....	0.6	3	19015-KGH-600	SHROUD COMP.	1	
4 MOTOR, FAN.....	0.7	4	19030-KGH-601	MOTOR ASSY., COOLING FAN	1	
5		5	19045-KVG-951	CAP COMP., RADIATOR	1	
7 TANK, RADIATOR RESERVE.....	0.4	6	19051-KGB-611	RUBBER, RADIATOR MOUNTING	1	
11 THERMOSTAT.....	0.8	7	19101-KGH-901	TANK, RESERVE	1	
12 CASE, THERMOSTAT.....	0.7	8	9108-KWC-900	HOSE, RESERVE TANK	1	
13 COVER, THERMOSTAT.....	0.7	9	19109-KWC-900	CAP, RESERVE TANK	1	
14 HOSE, RADIATOR :LOWER.....	0.7	10	19115-KGH-901	STAY, RADIATOR LOWER	1	
15 HOSE, RADIATOR :UPPER.....	0.7	11	19300-KE1-004	THERMOSTAT ASSY.	1	
16 HOSE, THERMOBODY.....	0.7	12	19311-KGH-901	CASE, THERMOSTAT	1	
18 SENSOR, THERMO.....	0.6	13	19315-KGH-901	COVER, THERMOSTAT	1	
19 SWITCH, FAN MOTOR.....	0.7	14	19503-KWC-900	HOSE A, RADIATOR	1	
		15	19504-KWC-900	HOSE B, RADIATOR	1	
		16	19505-KGH-901	HOSE C, RADIATOR	1	
		17	19506-KGH-900	CLAMP, WATER HOSE	6	
		18	37750-MAZ-004	THERMO UNIT	1	
		19	37760-MT2-004	SWITCH ASSY., THERMO	1	
		20	64415-KGH-901	BOOTS, BODY COVER	1	

PC KWCA 03-08

F - 31

Radiator

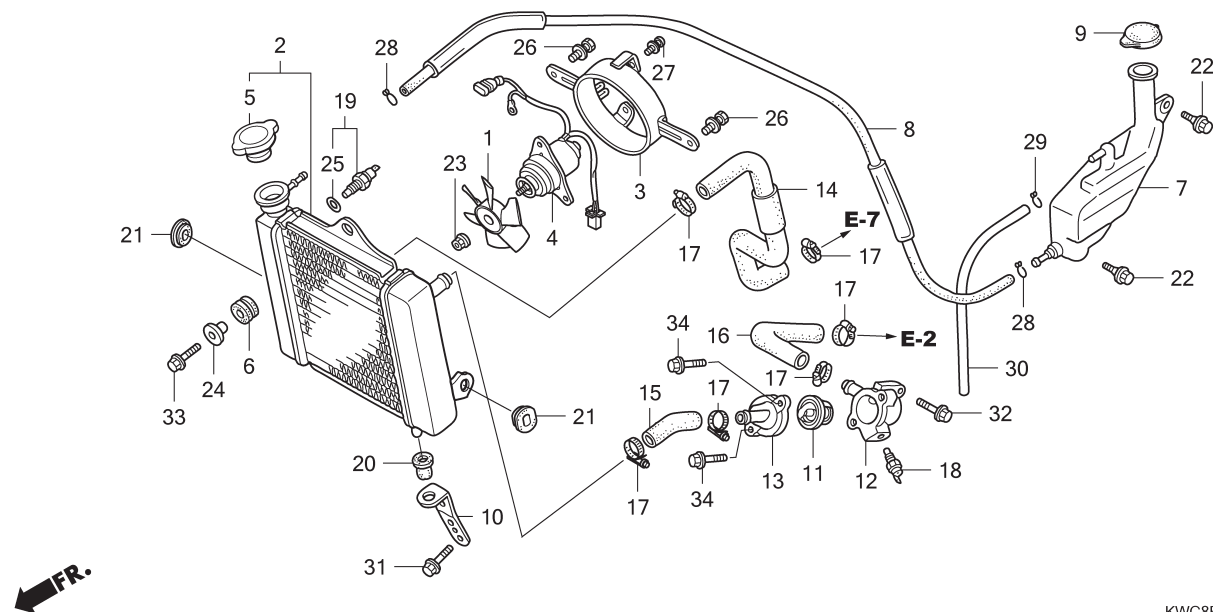


KWC8F3100

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		21	83551-300-000	GROMMET, AIR CLEANER CASE	2	
		22	90111-162-000	BOLT, FLANGE, 6MM	2	
		23	90308-KM3-004	NUT, TOOTHED, 3MM	1	
		24	90501-MA3-770	COLLAR, 6.2X12	1	
		25	91307-611-001	O-RING, 13.5X1.4	1	
		26	93401-06012-08	BOLT-WASHER, 6X12	2	
		27	93891-04012-07	SCREW-WASHER, 4X12	3	
		28	95002-02109	CLIP, TUBE (B10)	2	
		29	95002-70001	CLIP, TUBE (C11)	1	
		30	95003-19065-20	TUBE, VINYL, 7X11X650	1	
		31	95701-06012-00	BOLT, FLANGE, 6X12	1	
		32	95701-06016-00	BOLT, FLANGE, 6X16	1	
		33	95701-06022-07	BOLT, FLANGE, 6X22	1	
		34	96001-06025-00	BOLT, FLANGE, 6X25	2	

F - 32

Tools

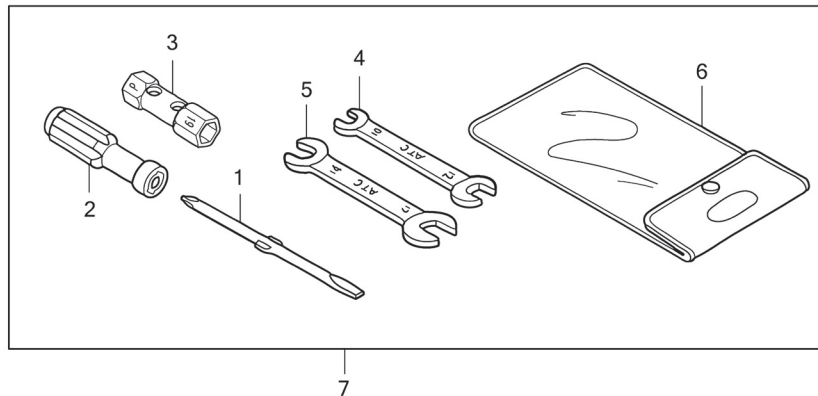


KWC8F3200

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		1	89102-538-001	DRIVER, SCREW (NO.2 + -)	1	
		2	89103-538-001	GRIP	1	
		3	89216-KWC-900	WRENCH, SPARK PLUG	1	
		4	99001-10120	SPANNER, 10X12	1	
		5	99001-14170	SPANNER, 14X17	1	
		6	99008-01600	BAG, TOOL, 160MM	1	
		7	8901A-KWC-900	SET TOOL & BAG	1	

F - 33

Front Cowl

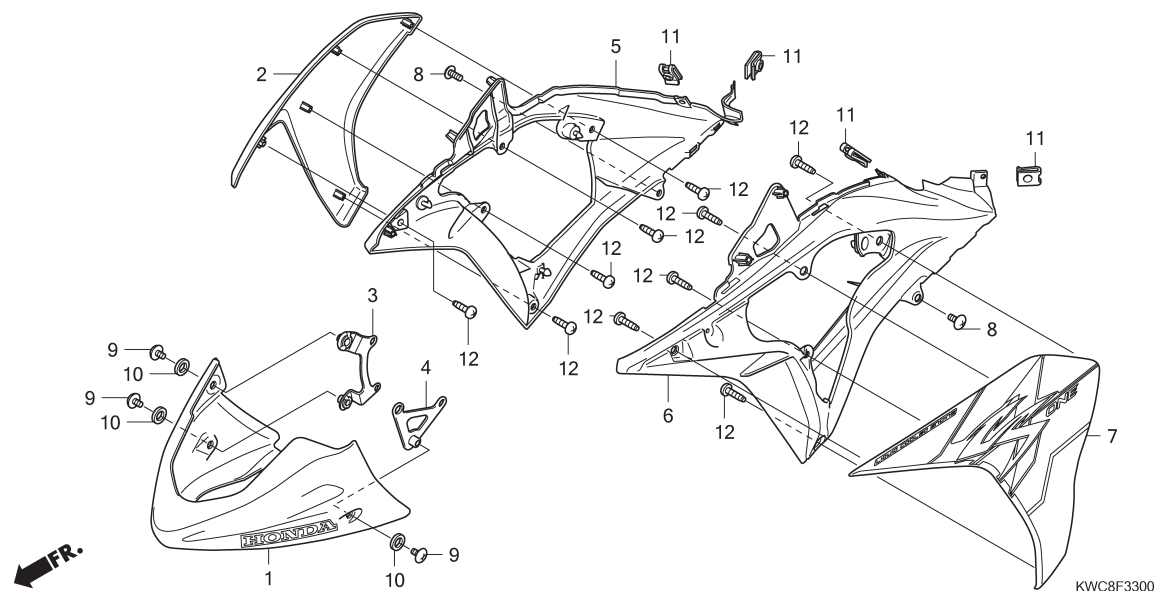


Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 COWL :UNDER	0.1	1	64340-KWC-900DSM	COWL, UNDER	1	
5 (2)			*NHA30M*	DIGITAL SILVER METALLIC	1	
COWL, MIDDLE :RIGHT	0.5		64340-KWC-900CSR	*R333C*	(1)	CANDY SCARLET RED
COWL, MIDDLE :BOTH	0.6		64340-KWC-900AFB	*NHB12M*	(1)	AFFINITY BLACK METALLIC
			64340-KWC-900DGM	*YR293M*	(1)	DIABLO GOLD METALLIC
6 (7)		2	64375-KWC-900DSM	COWL, R. MIDDLE	1	
			NHA30M	DIGITAL SILVER METALLIC	1	
COWL, MIDDLE :LEFT	0.5		64375-KWC-900CSR	*R333C*	(1)	CANDY SCARLET RED
COWL, MIDDLE :BOTH	0.6		64375-KWC-900AFB	*NHB12M*	(1)	AFFINITY BLACK METALLIC
			64375-KWC-900DGM	*YR293M*	(1)	DIABLO GOLD METALLIC
		3	64341-KWC-900	STAY, R. UNDER COWL	1	
		4	64342-KWC-900	STAY, L. UNDER COWL	1	
		5	64350-KWC-900	SHROUD, R. RADIATOR	1	
		6	64360-KWC-900	SHROUD, L. RADIATOR	1	
		7	64385-KWC-900DSM	COWL, L. MIDDLE	1	
			NHA30M	DIGITAL SILVER METALLIC	1	
			64385-KWC-900CSR	*R333C*	(1)	CANDY SCARLET RED
			64385-KWC-900AFB	*NHB12M*	(1)	AFFINITY BLACK METALLIC
			64385-KWC-900DGM	*YR293M*	(1)	DIABLO GOLD METALLIC
		8	90107-KWC-900	BOLT, BODY COVER SETTING	2	
		9	90108-KTL-740	BOLT, BODY COVER SETTING	3	
		10	90501-KWC-900	RUBBER, COWL SETTING	3	
		11	90677-KAN-T00	NUT, CLIP, 5MM	4	
		12	93903-34320	SCREW, TAPPING, 4X12	10	

PC KWCA 03-08

F - 34

Body Cover

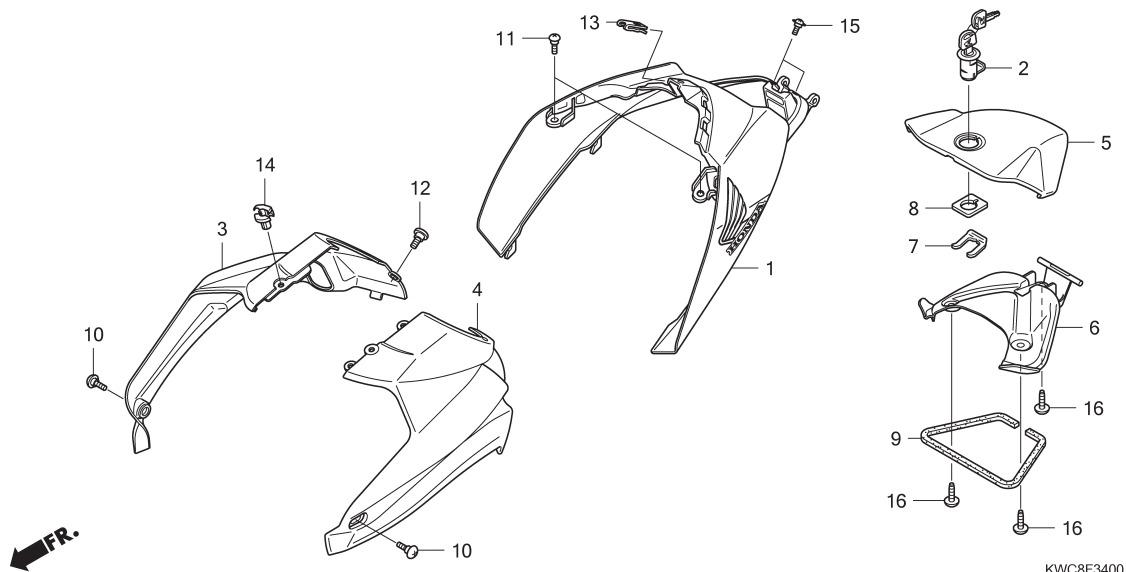


KWC8F3400

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 COVER, BODY :CENTER	0.4	1	64310-KWC-900DSM	COVER SET, BODY CENTER		
2 LOCK, UTILITY BOX	0.1			*NHA30M*..... DIGITAL SILVER METALLIC	1	
3 COVER, UPPER COWL :RIGHT	0.1		64310-KWC-900CSR	*R333C*..... CANDY SCARLET RED	(1)	
COVER, UPPER COWL :BOTH	0.1		64310-KWC-900AFB	*NHB12M* AFFINITY BLACK METALLIC	(1)	
4 COVER, UPPER COWL :LEFT	0.1		64310-KWC-900DGM	*YR293M*..... DIABLO GOLD METALLIC	(1)	
COVER, UPPER COWL :BOTH	0.1	2	64228-KWC-900	LOCK, UTILITY BOX	1	
5 COVER, UTILITY BOX	0.5	3	64370-KWC-900	COWL, R. FR. UPPER	1	
		4	64380-KWC-900	COWL, L. FR. UPPER	1	
		5	64395-KWC-900DSM	LID, UTILITY BOX COVER		
				NHA30M..... DIGITAL SILVER METALLIC	1	
			64395-KWC-900CSR	*R333C*..... CANDY SCARLET RED	(1)	
			64395-KWC-900AFB	*NHB12M* AFFINITY BLACK METALLIC	(1)	
			64395-KWC-900DGM	*YR293M*..... DIABLO GOLD METALLIC	(1)	
		6	64396-KWC-900	HINGE, UTILITY BOX	1	
		7	75581-GN8-920	SPRING, LOCK KEY SETTING	1	
		8	77236-GW0-000	WASHER, SEAT LOCK	1	
		9	81253-KWC-900	SEAL, UTILITY BOX	1	
		10	90103-KWC-900	SCREW, SPECIAL, 5MM	2	
		11	90115-KW7-900	SCREW, VISOR SPECIAL SETTING	2	
		12	90164-KWC-900	SCREW, SPECIAL, 6MM	1	
		13	90344-KEV-900	NUT C, CLIP, 6MM	1	
		14	90683-GAZ-003	CLIP, TRIM	1	
		15	91509-GE2-760	SCREW, PAN, 5X11.5	2	
		16	93903-34380	SCREW, TAPPING, 4X12	3	

PC KWCA 03-08

F - 35 Utility Box

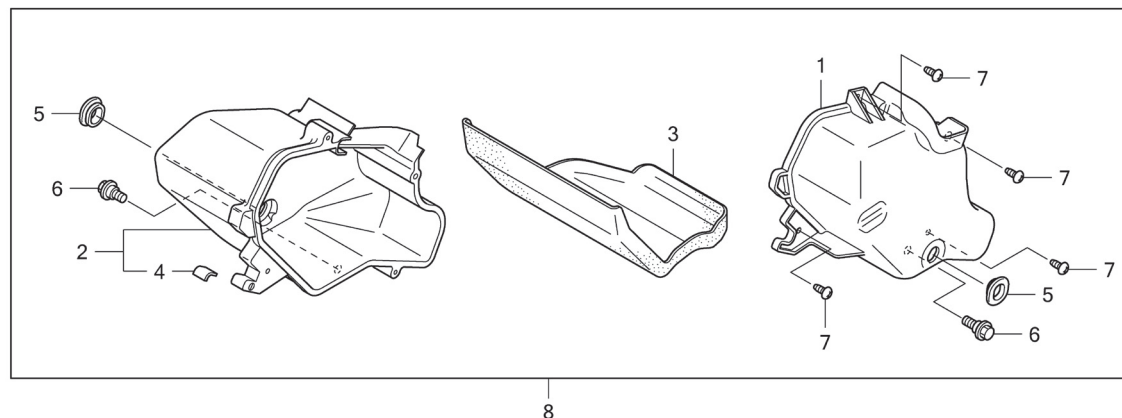


FR.

KWC8F3500

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 (2) BOX, UTILITY.....	0.5	1	81252-KWC-900	BOX, L. UTILITY	1	
		2	81251-KWC-900	BOX, R. UTILITY	1	
		3	81256-KWC-900	MAT, UTILITY BOX	1	
		4	81257-KWC-900	RUBBER, PROTECTOR	1	
		5	83551-GE2-000	GROMMET, AIR CLEANER CASE	2	
		6	90111-162-000	BOLT, FLANGE, 6MM	2	
		7	93903-34320	SCREW, TAPPING, 4X12	4	
		8	8125A-KWC-900	BOX, UTILITY SET	1	

F - 36

Caution Label

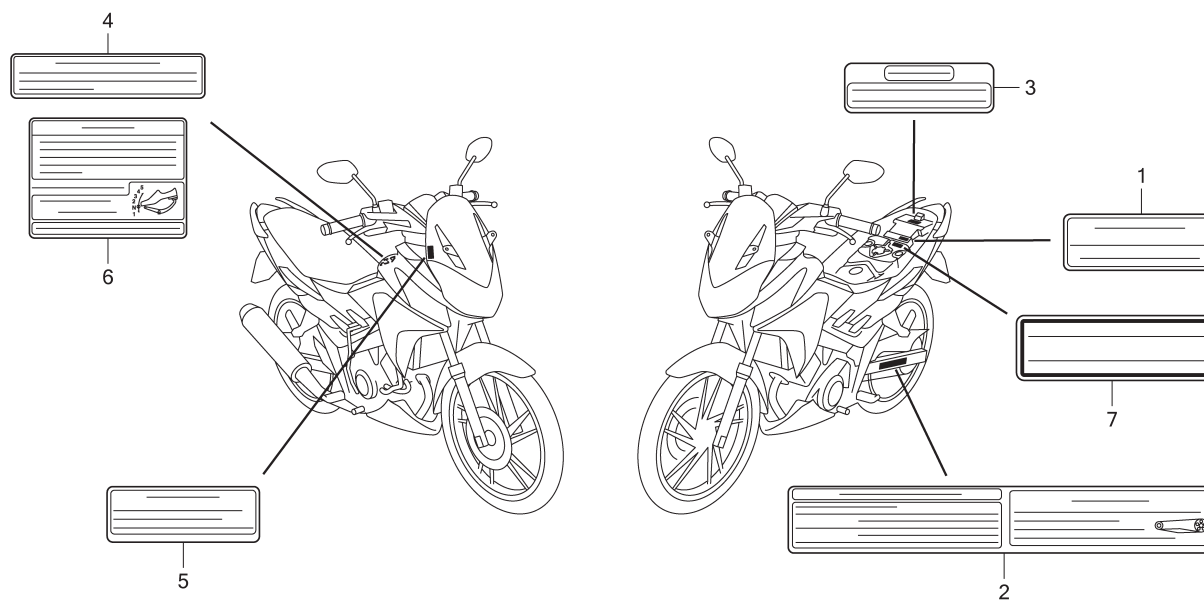


KWC8F3600

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		1	87503-KVB-930	LABEL, COOLANT INFORMATION	1	
		2	87505-KWC-900	LABEL, TIRE & DRIVE CHAIN	1	
		3	87506-KPH-880	MARK, BATTERY CAUTION	1	
		4	87513-KWC-900	LABEL, ENGINE STARTER *TBLACK*... BLACK	1	
		5	87522-KCJ-660	LABEL, VISOR CAUTION	1	
		6	87560-KWC-900	LABEL, DRIVE CAUTION *TBLACK* BLACK	1	
		7	87586-KVB-930	LABEL, FUEL	1	

F - 37

Mark/Stripe

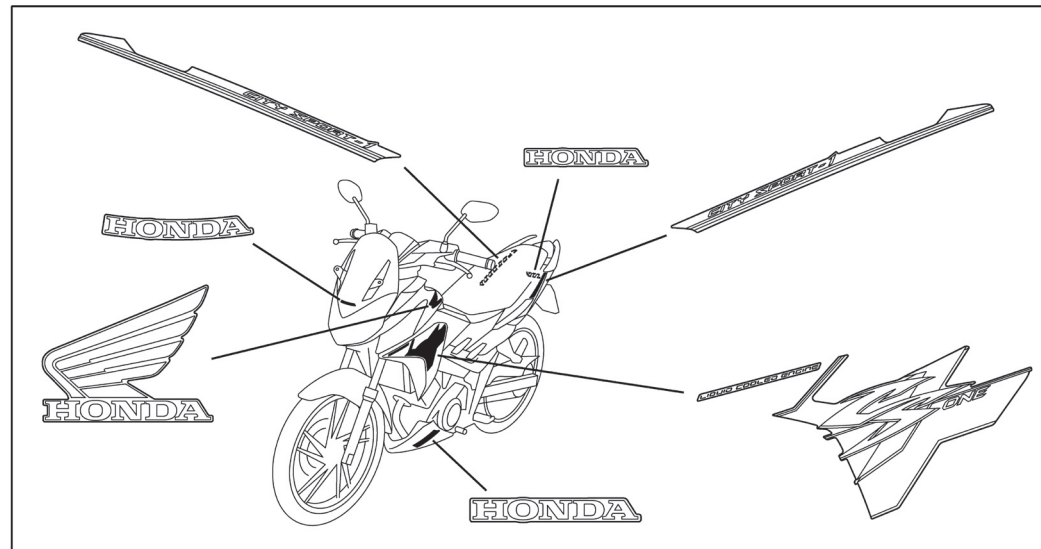

1

KWC8F3700

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
		1	871X0-KWC-900ZA	STRIPE SET COSMIC BLACK	1	
			871X0-KWC-900ZB	STRIPE SET LIGHTING SILVER	(1)	
			871X0-KWC-900ZC	STRIPE SET BURNING RED	(1)	
			871X0-KWC-900ZD	STRIPE SET HORNET GOLD	(1)	

INDEXS PART NUMBER

Part Number	Block No.								
(06000)									
06410-GCR-000	F13	13425-KGH-900	E15	16046-KGH-901	E19	17639-KGH-900	F17	19300-KE1-003	F31
06435-KWC-901	F12	13427-KPP-860	E15	16048-KGH-901	E19	17724-102-700	F18	19311-KGH-900	F31
06451-GE2-406	F9	13538-KGH-900	E15	16050-KGH-601	E19	17910-KWC-900	F3	19315-KGH-900	F31
06451-MA7-405	F12			16075-GHB-640	E19	17950-KWC-900	F3	19502-KGH-900	E6
06455-KWC-901	F9	(14000)		16100-KWC-901	E19	17961-KGH-600	F5	19503-KWC-900	F31
		14100-KGH-900	E3	16107-KGH-901	E19	17962-KWC-900	F5	19504-KWC-900	F31
(11000)		14125-KGH-900	E2	16111-KWC-901	E19			19505-KGH-900	F31
11100-KWC-900	E14	14126-KGH-900	E2	16119-KWC-901	E19	(18000)		19506-KGH-900	E6
11200-KWC-900	E14	14321-KGH-900	E4	16140-KGH-901	E19	18291-MN5-650	F19	19506-KGH-900	F31
11330-KWC-900	E6	14401-KVB-901	E4	16143-KGH-901	E19	18292-KGH-600	F19		
11333-KGH-900	E6	14431-KGH-900	E3	16151-KWC-901	E19	18292-KGH-901	F19	(22000)	
11334-KGH-900	E6	14451-KGH-900	E3	16155-KJ9-751	E19	18310-KWC-900	F19	22100-KTY-D30	E9
11341-KWC-900	E11	14510-KGH-900	E4	16163-KGF-911	E19	18320-KWC-900	F19	22105-KWC-900	E9
11360-KWC-900	E11	14515-KGH-900	E4	16166-KGH-971	E19	18321-KGH-600	F19	22120-KGH-600	E9
11393-KGH-900	E6	14520-KSS-901	E5	16180-KGH-971	E19	18345-KGH-600	F19	22201-KGH-600	E9
11395-KGH-900	E11	14560-KGH-900	E5	16199-KGH-901	E19	18346-KGH-600	F19	22321-KGH-600	E9
		14610-KGH-900	E4	16211-KGH-901	E2	18361-KGH-600	F19	22355-KGH-600	E9
(12000)		14711-KGH-900	E3	16219-KW6-840	E2	18421-KE8-000	F19	22361-KGH-600	E9
12100-KGH-900	E5	14721-KWC-900	E3	16423-KGH-901	E19	18422-KGC-900	F19	22401-KW7-930	E9
12191-KGH-900	E5	14751-KWC-900	E3	16950-KJ9-752	F14	18601-KGB-611	E1	22517-250-170000	F10
12200-KWC-900	E2	14761-KWC-900	E3	16952-KJ9-752	F14	18612-KGH-900	E1	22810-KGH-900	E6
12204-KGH-305	E2	14771-KM3-000	E3	16958-397-771	F14	18650-KGH-902	F18	22815-KW7-930	E6
12209-KGH-901	E3	14777-KGH-900	E3			18651-KGH-901	F18	22849-KGH-900	E9
12210-KGH-900	E2	14781-MA6-000	E3	(17000)		18652-KWC-900	F18	22870-KWC-900	F3
12251-KTY-D30	E2			17210-KWC-900	F17	18653-KGH-900	F18		
12310-KGH-900	E1	(15000)		17213-KGH-900	F17	18654-KGH-900	F18	(23000)	
12391-KWC-900	E1	15100-KWC-900	E8	17234-KCW-871	F17	18657-KWC-900	F18	23121-KGH-900	E9
		15133-KGH-900	E8	17235-KWC-900	F17	18660-KGH-900	F18	23122-KGH-900	E9
(13000)		15331-436-000	E8	17253-KGH-900	F17			23123-KGH-900	E9
13000-KGH-901	E15	15332-436-000	E8	17254-KAZ-000	F17-1	(19000)		23211-KGH-900	E16
13011-KGH-405	E15	15421-035-010	E14	17254-KGH-900	F17	19009-KGH-901	F31	23221-KGH-900	E16
13012-KGH-405	E15	15517-KGH-900	E14	17255-371-000	F17	19010-KWC-901	F31	23415-HB3-000	E16
13013-KGH-405	E15	15651-KGH-900	E6	17256-KGH-900	F17-1	19015-KGH-600	F31	23421-KGH-900	E16
13015-KGH-405	E15	15771-KV6-000	F17	17257-KGH-900	F17-1	19030-KGH-601	F31	23431-KGH-900	E16
13101-KWC-900	E15	15771-KV6-000	F18	1725A-KWC-900	F17	19045-KVG-951	F31	23441-KGH-900	E16
13102-KWC-305	E15			17260-KRS-T00	F18	19051-KGB-610	F31	23451-KGH-900	E16
13103-KWC-305	E15	(16000)		17270-KWC-900	F30	19101-KGH-900	F31	23461-KGH-900	E16
13104-KWC-305	E15	16010-KGF-911	E19	17311-KGH-900	F17	19109-KWC-900	F31	23471-KGH-900	E16
13105-KWC-305	E15	16013-KEH-900	E19	17316-611-000	F18	19115-KGH-900	F31	23481-KGH-900	E16
13111-KGH-901	E15	16015-KGF-911	E19	17370-419-700	F17	19215-KGH-900	E7	23491-KGH-900	E16
13115-GN5-910	E15	16016-KWC-901	E19	17510-KWC-900	F14	19217-P72-013	E7	23501-KGH-900	E16
13420-KPP-860	E15	16026-MR1-004	E19	17620-KGH-600	F14	19221-KWC-900	E7	23511-KGH-900	E16
13422-KPP-860	E15	16028-KPP-901	E19	17630-KWC-900	F14	19226-KGH-900	E7	23801-KCT-690	E16
		16037-KPP-861	E19	17631-KEV-900	F14	19241-KGH-900	E7	23811-KPS-900	E16
		16038-HN2-003	E19	17635-KWC-900	F14	19242-KGH-900	E7		

INDEXS PART NUMBER

Part Number	Block No.								
(24000)		(30000)							
24211-KGH-900	E17	30401-KWC-901	F29	33706-KAN-960	F27	38117-KPH-880	F29	43514-KS6-701	F11
24212-KGH-900	E17	30410-KWC-901	F29	3370A-KWC-900	F27	38301-KPH-881	F29	43520-MJ6-315	F11
24213-KGH-900	E17	30500-KWC-900	F29	33714-KL3-620	F29	38501-KG8-003	F29	43530-KBA-921	F11
24241-KGH-900	E17	30700-KPH-881	F29	33752-KWC-901	F27	38501-KVB-901	F29		
24301-KWC-900	E17			(34000)		(40000)		(44000)	
24320-KWC-900	E17	(31000)		34901-KRS-901	F1	40510-KWC-900	F23	44301-KAN-T40	F10
24322-KWC-900	E14	31110-KWC-901	E12	34905-KAN-W01	F26	40530-KWC-900	F23	44311-046-000	F10
24410-KGH-900	E17	31120-KWC-901	E12	34905-KAN-W01	F27	40531-KGH-901	F23	44601-KWC-901	F10
24430-KGH-901	E17	31201-KPW-901	E13	34906-GB6-921	F27	40543-KBA-900	F23	44620-400-000	F10
24436-KTY-D30	E17	31204-KG8-004	E13	34908-GA7-701	F26	40546-KBA-900	F23	44711-KWC-901	F10
24610-KGH-900	E17	31205-KPW-901	E13					44800-KWC-901	F10
24641-KBP-900	E17	31206-KPW-901	E13	(35000)		(41000)		44815-KWC-900	F10
24651-KGH-900	E17	31207-MBE-008	E13	35010-KWC-900	F29	41200-KWC-90Z	F13	44817-KWC-900	F10
24652-035-000	E17	3120A-KWC-900	E13	35011-KVB-930	F29			44819-KWC-900	F10
24701-KGH-900	F20	31500-KPH-881	F28	35100-KWC-901	F29	(42000)			
24703-KGH-900	F20	31600-KGH-731	F29	35121-KVB-900	F29	42301-KGH-900	F13	45107-MN5-006	F9
24703-KW6-840	F20	31700-124-008	F29	35150-KPH-880	F5	42303-KBA-900	F13	45108-ML4-006	F9
24711-KWC-900	F20			35160-KPH-881	F5	42304-KBA-920	F13	45108-ML7-922	F12
24720-KGH-900	F20	(32000)		35170-KPH-651	F5	42313-KGH-900	F13	45111-MAJ-G41	F12
24721-KW6-960	F20	32100-KWC-900	F29	35180-KPH-881	F5	42601-KWC-901	F13	45126-KWC-900	F4
24781-449-000	F20	32101-KWC-900	F29	35200-KVB-900	F5	42615-KWC-900	F13	45131-GZ0-006	F9
		32111-KWC-900	E12	35330-413-003	F5	42620-KW7-880	F13	45131-GZ0-006	F12
(27000)		32112-KGH-910	E6	35340-MA5-671	F4	42653-001-004	F13	45132-166-016	F9
27517-0000-00000	F13	32404-KWC-901	F26	35350-KGH-731	F20	42711-KWC-901	F13	45132-166-016	F12
		32410-KWC-900	E13	35357-GBG-850	F20			45133-MA3-006	F9
(28000)				35759-KWC-901	E14	(43000)		45133-MA3-006	F12
28110-KWC-900	E10	(33000)		35761-KGH-900	E14	43107-MA7-006	F12	45156-KWC-900	F4
28120-KRM-851	E10	33110-KWC-901	F1			43150-KWC-901	F12	45157-KAN-850	F4
28131-KPP-900	E10	33113-MAT-611	F1	(37000)		43190-KWC-901	F12	45203-MCC-006	F12
28132-KGH-910	E10	33116-KWC-900	F1	37100-KWC-901	F2	43215-KGH-901	F12	45203-MG3-016	F9
28133-KGH-910	E10	33130-KWC-901	F1	37210-KWC-901	F2	43310-KGH-731	F11	45215-KA3-732	F9
28211-KGH-900	E18	33402-KWC-901	F26	37211-KWC-901	F2	43351-KTM-N31	F13	45216-166-006	F9
28215-KGH-900	E18	33403-KWC-901	F26	37212-KWC-901	F2	43352-568-003	F9	45216-166-006	F12
28221-KGH-900	E18	33407-KWC-901	F26	37213-KWC-901	F2	43352-568-003	F12	45250-KWC-901	F9
28223-KM7-701	E18	33452-KWC-901	F26	37224-KVL-N01	F26	43353-461-771	F9	45251-KTM-N01	F10
28241-KET-900	F20	33453-KWC-901	F26	37750-MAZ-003	F31	43353-461-771	F12	45290-KWC-901	F9
28251-KGH-900	E18	33457-KWC-901	F26	37760-MT2-003	F31	43432-KW6-960	F11	45500-KPH-880	F4
28254-437-000	E18	33701-KWC-901	F27	37800-KWC-900	F14	43503-MR7-006	F11	45504-410-003	F4
28261-KGH-900	E18	33702-KWC-901	F27	37801-GA7-700	F14	43504-MB2-006	F11	45512-MA6-006	F4
28282-KGH-900	E18	33704-KWC-901	F27	37802-GA7-700	F14	43510-KGH-902	F11	45513-GW0-911	F4
28293-333-000	F20	33705-KW7-900	F25			43511-KW7-881	F11	45517-GW0-751	F4
28300-KGH-600	F20	33705-KW7-900	F27	(38000)		43512-KGH-901	F11	45520-GW0-911	F4
28333-KAN-T40	F20	33706-KAN-960	F25	38110-KTM-851	F29	43513-KBP-881	F11	45520-GW0-912	F11

INDEXS PART NUMBER

Part Number	Block No.								
45521-GW0-911	F4	51412-GN5-901	F8	(61000)	77240-KWC-900	F15	89103-538-000	F32	
45521-GW0-911	F11	51420-KWC-901	F8	61100-KWC-900	F7	77242-KWC-900	F15	89216-KWC-900	F32
45530-471-832	F4	51425-GN5-901	F8	61101-KWC-900	F7	77243-KWC-900	F15		
(46000)		51432-KGH-901	F8	61104-428-000	F15	(80000)		(90000)	
46182-MEL-D21	F11	51437-KGH-901	F8	61106-KW6-840	F1	80101-KWC-900	F25	90002-KGH-900	E1
46500-KGH-900	F20	51454-KEV-881	F8	61312-KBP-900	F16			90002-KGH-900	F1
46504-KV6-702	F11	51456-KPH-901	F8	61315-KWC-900	F1			90005-KGH-900	E5
46514-KAN-940	F20	51466-065-901	F8	(64000)		(81000)		90005-ZM3-000	E3
46515-KGH-900	F20	51470-KWC-901	F8	64221-KWC-900	F30	81251-KWC-900	F35	90008-KT7-000	E9
(50000)		51490-KGH-902	F8	64228-KWC-900	F34	81252-KWC-900	F35	90012-KGF-910	E3
50100-KWC-900	F30	51500-KWC-901	F8	64310-KWC-900	F34	81253-KWC-900	F34	90017-KGH-900	E1
50301-KPH-720	F6	51520-KWC-901	F8	64340-KWC-900	F33	81256-KWC-900	F35	90022-MG8-000	E17
50302-KPH-720	F6	(52000)		64341-KWC-900	F33	81257-KWC-900	F35	90031-KGH-900	E14
50306-GN5-900	F6	52108-KW6-900	F23	64342-KWC-900	F33	81312-KW7-900	F7	90071-MB0-000	E13
50380-KWC-900	F28	5210A-KWC-900	F23	64350-KWC-900	F33	(83000)		90083-GB6-911	E4
50381-KWC-900	F28	52147-KGH-900	F23	64360-KWC-900	F33	83500-KWC-900ZA	F27	90084-041-000	E16
50400-KWC-900	F15	52170-KGH-600	F23	64370-KWC-900	F34	83510-KWC-900	F16	90084-428-000	E11
50500-KGH-600	F22	52400-KWC-901	F24	64375-KWC-900	F33	83551-300-000	F31	90085-KWC-740	E10
50502-KGH-900	F22	(53000)		64380-KWC-900	F34	83551-GE2-000	F30	90087-KGH-900	E11
50512-KAN-960	F22	53100-KWC-900	F5	64385-KWC-900	F33	83551-GE2-000	F35	90101-KY6-008	F2
50523-KGH-600	F22	53104-KPH-720	F5	64395-KWC-900	F34	83642-171-000	F32	90102-KGH-900	F11
50524-001-000	F15	53105-KTM-N00	F5	64396-KWC-900	F34	86150-KPG-901	F2	90103-KE8-003	F24
50524-KBP-900	F22	53106-KR3-000	F5	64410-KWC-900	F16	(87000)		90103-KGH-900	F30
50530-KWC-900	F22	53108-KR3-770	F5	64415-KGH-900	F31	871X0-KWC-900ZA	F37	90103-KWC-900	F34
50535-KW7-900	F22	53140-KWC-900	F3	64420-KWC-900	F16	871X0-KWC-900ZB	F37	90103-KWC-900	F1
50605-KWC-900	F16	53166-KWC-900	F3	64430-KWC-900	F16	871X0-KWC-900ZC	F37	90105-KGH-900	F10
50619-KGH-900	F21	53167-KFM-900	F3	64470-KWC-900	F1	871X0-KWC-900ZD	F37	90105-KGH-900	F13
50650-KGH-600	F21	53168-KFM-900	F3	64480-KWC-900	F16	87503-KVB-930	F36	90105-KPP-900	F19
50660-KGH-600	F21	53175-KET-921	F4	64490-KWC-900	F16	87505-KWC-900	F36	90106-GN5-900	F5
50661-KW7-900	F21	53178-KWC-900	F3	(75000)		87506-KPH-880	F36	90106-HB3-000	F24
50705-KWC-900	F16	53205-KWC-900	F5	75581-GN8-920	F15	87513-KWC-900	F36	90106-KPP-900	F19
50710-KET-600	F21	53206-KWC-900	F5	75581-GN8-920	F34	87522-KCJ-660	F36	90106-KTM-780	F29
50711-KET-600	F21	53207-KWC-900	F1	(77000)		87560-KWC-900	F36	90107-KGH-600	F19
50712-KET-600	F21	53208-KWC-900	F1	77110-KWC-900	F15	87586-KVB-930	F36	90107-KW7-930	F16
50715-KE8-000	F21	5320A-KWC-900	F6	77200-KWC-900	F15	(88000)		90107-KW7-930	F16
50715-KWC-900	F21	5320B-KWC-900	F1	77208-KW7-960	F15	88110-KWC-900	F3	90107-KWC-900	F16
50716-KWC-900	F21	53211-KPH-720	F6	77215-KW7-900	F15	88113-KET-900	F3	90107-KWC-900	F26
(51000)		53212-KPH-720	F6	77230-KWC-900	F15	88120-KWC-900	F3	90107-KWC-900	F33
51400-KWC-901	F8	53214-GN5-900	F6	77234-GN2-000	F15			90108-223-000	F22
51401-KWC-901	F8	53215-KWC-900	F6	77236-GW0-000	F34	(89000)		90108-KTL-740	F33
51410-KWC-901	F8	53216-GN5-830	F6	77239-KVB-900	F15	89102-538-000	F32	90111-162-000	F17
		53220-GN5-900	F6					90111-162-000	F17-1
								90111-162-000	F28
								90111-162-000	F31

INDEXS PART NUMBER							
Part Number	Block No.						
90111-162-000	F35	90451-KGH-900	E18	9108-KWC-900	F31	93500-05012-1H	E19
90111-187-000	F23	90452-KGH-901	E16	91105-KTM-970	E7	93500-05025-0G	F3
90114-KGH-900	F3	90454-107-000	E16	91105-KTM-970	E8	93500-05030-0G	F17
90114-KGH-900	F4	90455-KR1-760	E16	91203-750-003	E6	93600-04012-1G	F4
90115-KW7-900	F16	90461-115-000	E16	91204-MC7-003	E6	93600-04045-1G	F11
90115-KW7-900	F34	90478-700-000	E7	91205-KF0-003	E6	93891-04012-07	F31
90116-KV3-701	F8	90483-028-000	E2	91205-KF0-003	E7	93891-05016-08	F27
90121-KGH-900	F23	90488-425-000	E14	91209-KWC-901	E17	93892-05012-18	E19
90128-KET-900	F21	90501-GBL-730	E9	91212-422-006	F11	93893-04012-17	F4
90131-KPH-880	F9	90501-KPH-880	F5	91216-KGH-901	E16	93893-04012-17	F11
90145-KM3-751	F4	90501-KWC-900	F33	91251-KPH-881	F13	93901-24310	F27
90145-KM3-751	F11	90501-MA3-770	F31	91252-KGH-901	F10	93901-24580	F27
90150-GBT-000	F27	90502-KGH-900	F23	91303-377-000	E11	93901-25420	F1
90164-028-000	F29	90502-KWC-900	F27	91305-KK4-003	E14	93901-26180	F23
90164-KWC-900	F34	90504-KW7-900	F13	91306-MG3-001	E5	93903-25210	F17
90191-KPP-900	F5	90505-116-670	F20	91307-035-000	E6	93903-25310	F2
90206-001-000	E3	90505-KPH-880	F5	91307-611-000	F31	93903-25580	F17
90231-KM7-702	E9	90543-MV9-670	E1	91309-425-003	E13	93903-34220	F16
90302-GW3-980	F1	90544-283-000	F8	91310-KE8-003	E14	93903-34320	F26
90302-KBP-900	F23	90545-300-000	F4	91320-MB0-008	E13	93903-34320	F33
90302-KGH-900	F23	90545-300-000	F11	91356-GM0-003	F8	93903-34320	F35
90304-KGH-901	F5	90601-001-000	E16	91356-KGH-901	E11	93903-34380	F1
90304-KGH-901	F13	90605-200-000	E16	91405-KGH-900	F17	93903-34380	F5
90304-KGH-901	F24	90608-072-000	E7	91422-KVB-900	F1	93903-34380	F34
90304-KPH-900	F19	90651-MA5-671	F4	91422-KVB-900	F5	93903-34420	F5
90306-KGH-901	F10	90677-KAN-T00	F16	91509-GE2-760	F16	93903-34680	F5
90306-KGH-901	F13	90677-KAN-T00	F25	91509-GE2-760	F1	93903-35220	F16
90308-KM3-003	F31	90677-KAN-T00	F26	91509-GE2-760	F25		
90314-KVR-600	F3	90677-KAN-T00	F27	91509-GE2-760	F34		
90344-KEV-900	F1	90677-KAN-T00	F33			(94000)	
90344-KEV-900	F34	90683-GAZ-003	F28			94001-06000-0S	F14
90401-KPP-900	E15	90683-GAZ-003	F34	(92000)		94001-06000-0S	F15
90401-KY4-901	E9	90702-KFM-900	E8	92101-06012-0A	F21	94001-06000-0S	F23
90402-KW7-900	E17	90702-KFM-900	E11	92800-12000	E14	94002-08000-0S	F3
90405-ZA8-800	F20	90702-KFM-900	E14	92900-08032-0E	E2	94002-08000-0S	F11
90407-259-000	E14	90702-KFM-900	E6	92915-10028-0E	F13	94002-10070-0S	F3
90412-187-000	E16	90741-KFB-000	E15			94002-12000-0S	F21
90423-KW6-900	E7	90741-KGH-900	E15	(93			

INDEXS PART NUMBER

Part Number	Block No.		
95701-06016-00	F31	96001-06065-00	E14
95701-06020-00	F11	96001-06075-00	E14
95701-06020-00	F29	96100-62030-00	E16
95701-06020-07	F20	96100-62040-00	E16
95701-06020-08	F7	96100-63010-00	E15
95701-06022-00	F27	96140-62010-00	E16
95701-06022-07	F4	96140-62020-00	E16
95701-06022-07	F31	96140-62030-10	F13
95701-06025-00	E13	96150-63010-10	F10
95701-06025-00	E14	96150-63010-10	F13
95701-06025-00	F25	96211-06000	F6
95701-06035-00	E8	96211-06000	F6
95701-06035-00	E14	96211-08000	F20
95701-06065-00	E14	96220-30085	E17
95701-06105-00	E2	96600-06012-00	E17
95701-08012-00	F14	96600-06020-00	E12
95701-08012-00	F20		
95701-08020-07	F21	(98000)	
95701-08025-00	F15	98059-58816	E2
95701-08032-00	F30	98059-58826	E2
95701-08032-07	F20	98200-31000	F28
95701-08040-00	F19	98200-31000	F29
95701-10120-08	F30	98200-31500	F28
95801-10045-07	F6	98200-31500	F29
		(99000)	
(96000)		99001-10120	F32
96001-06010-00	F18	99001-14170	F32
96001-06012-07	F4	99008-01600	F32
96001-06012-07	F6	99101-ZH7-1080	E19
96001-06012-07	F10		
96001-06014-00	E4		
96001-06014-00	E14		
96001-06016-00	E12		
96001-06022-00	E5		
96001-06022-00	E7		
96001-06022-00	E11		
96001-06025-00	F31		
96001-06030-00	E6		
96001-06030-00	E11		
96001-06040-00	E6		
96001-06040-00	E11		
96001-06040-00	E14		
96001-06055-00	E14		
96001-06065-00	E7		

INDEXS DESCRIPTION

Description	Block No.	Description	Block No.	Description	Block No.
(A)					
ADJUSTER, CHAIN	F23	BOLT, CYLINDER STUD	E14	BOLT, FLANGE, 6X22	E7
ADJUSTER, HEADLIGHT	F1	BOLT, DRAIN PLUG, 12MM	E14	BOLT, FLANGE, 6X22	E11
ARM ASSY., KICK STARTER	F20	BOLT, DRIVE SPROCKET FIXING	E16	BOLT, FLANGE, 6X22	F27
ARM COMP., GEAR CHANGE	F20	BOLT, ENGINE HANGER	F30	BOLT, FLANGE, 6X25	F31
ARM, VALVE ROCKER	E3	BOLT, FLANGE, 10X120	F30	BOLT, FLANGE, 6X25	E9
AXLE, FR. WHEEL	F10	BOLT, FLANGE, 10X45	F6	BOLT, FLANGE, 6X25	E13
AXLE, RR. WHEEL	F13	BOLT, FLANGE, 10X46	F24	BOLT, FLANGE, 6X25	E14
		BOLT, FLANGE, 10X50	F5	BOLT, FLANGE, 6X25	F25
(B)		BOLT, FLANGE, 10X85	F24	BOLT, FLANGE, 6X30	E11
BAG, OWNERS MANUAL	F32	BOLT, FLANGE, 5X14	E1	BOLT, FLANGE, 6X30	E6
BAG, TOOL, 160MM	F32	BOLT, FLANGE, 5X14	F1	BOLT, FLANGE, 6X35	E14
BALL, STEEL, #6MM	F6	BOLT, FLANGE, 5X18	E3	BOLT, FLANGE, 6X35	E8
BALL, STEEL, #6MM	F6	BOLT, FLANGE, 6MM	F31	BOLT, FLANGE, 6X40	E14
BALL, STEEL, #8 (1/4)	F20	BOLT, FLANGE, 6MM	F17	BOLT, FLANGE, 6X40	E6
BAND, INSULATOR	E2	BOLT, FLANGE, 6MM	F17-1	BOLT, FLANGE, 6X40	E11
BAND, INTAKE MANIFOLD	F17	BOLT, FLANGE, 6MM	F23	BOLT, FLANGE, 6X55	E14
BAR COMP., SIDE STAND	F22	BOLT, FLANGE, 6MM	F35	BOLT, FLANGE, 6X65	E7
BAR, L. PILLION STEP	F21	BOLT, FLANGE, 6MM	F28	BOLT, FLANGE, 6X65	E14
BAR, R. PILLION STEP	F21	BOLT, FLANGE, 6X10	F18	BOLT, FLANGE, 6X65	E14
BASE COMP., TAILLIGHT	F27	BOLT, FLANGE, 6X10	F11	BOLT, FLANGE, 6X75	E14
BASE, L. WINKER	F26	BOLT, FLANGE, 6X105	E2	BOLT, FLANGE, 8X12	F20
BASE, R. WINKER	F26	BOLT, FLANGE, 6X12	F29	BOLT, FLANGE, 8X12	F14
BATTERY ASSY.	F28	BOLT, FLANGE, 6X12	F31	BOLT, FLANGE, 8X20	F21
BEARING, RADIAL BALL, 6201U	E16	BOLT, FLANGE, 6X12	F1	BOLT, FLANGE, 8X25	F15
BEARING, RADIAL BALL, 6202U	E16	BOLT, FLANGE, 6X12	F4	BOLT, FLANGE, 8X32	F20
BEARING, RADIAL BALL, 6203	E16	BOLT, FLANGE, 6X12	F6	BOLT, FLANGE, 8X32	F30
BEARING, RADIAL BALL, 6203U	F13	BOLT, FLANGE, 6X12	F10	BOLT, FLANGE, 8X40	F19
BEARING, RADIAL BALL, 6204	E16	BOLT, FLANGE, 6X12	F11	BOLT, HANDLE LEVER PIVOT	F4
BEARING, RADIAL BALL, 6207	E15	BOLT, FLANGE, 6X12	F14	BOLT, HANDLE LEVER PIVOT	F3
BEARING, RADIAL BALL, 6207	E15	BOLT, FLANGE, 6X14	E14	BOLT, HEAD COVER	E1
BEARING, RADIAL BALL, 6301	E15	BOLT, FLANGE, 6X14	E16	BOLT, HEX., 5X12	E8
BEARING, RADIAL BALL, 6301UU	F10	BOLT, FLANGE, 6X14	E4	BOLT, HEX., 5X16	F29
BEARING, RADIAL BALL, 6301UU	F13	BOLT, FLANGE, 6X14	E6	BOLT, HEX., 6X12	F21
BEARING, RADIAL BALL, 6903	E9	BOLT, FLANGE, 6X16	E18	BOLT, KNOCK, 5MM	E4
BODY COMP., BYSTARTER	E19	BOLT, FLANGE, 6X16	F31	BOLT, OIL, 10X22	F4
BODY COMP., FRAME	F30	BOLT, FLANGE, 6X16	E17	BOLT, OIL, 10X22	F11
BOLT, BODY COVER SETTING	F33	BOLT, FLANGE, 6X16	E12	BOLT, PIN	F9
BOLT, BODY COVER SETTING	F16	BOLT, FLANGE, 6X20	F20	BOLT, PIN	F12
BOLT, BODY COVER SETTING	F33	BOLT, FLANGE, 6X20	F29	BOLT, SETTING	E13
BOLT, BODY COVER SETTING	F26	BOLT, FLANGE, 6X20	F7	BOLT, SOCKET, 6X10	F29
BOLT, BRAKE DISK, 8X24	F10	BOLT, FLANGE, 6X20	F11	BOLT, SOCKET, 6X12	E17
BOLT, BRAKE DISK, 8X24	F13	BOLT, FLANGE, 6X22	F4	BOLT, SOCKET, 6X14	E10
BOLT, COWL SETTING	F16	BOLT, FLANGE, 6X22	F31	BOLT, SOCKET, 6X20	E12
BOLT, COWL SETTING	F1	BOLT, FLANGE, 6X22	E5	BOLT, SOCKET, 8MM	F8

INDEXS DESCRIPTION

Description	Block No.	Description	Block No.	Description	Block No.
BOLT, SOCKET, 8X22	F21	CAP, LOCK NUT	F3	CLIP, SWITCH CORD	E14
BOLT, SPECIAL, 6X10	F19	CAP, MASTER CYLINDER	F11	CLIP, TRIM	F28
BOLT, SPECIAL, 6X20	F19	CAP, MASTER CYLINDER	F4	CLIP, TRIM	F34
BOLT, STUD, 10X28	F13	CAP, RESERVE TANK	F31	CLIP, TUBE (B10)	F31
BOLT, STUD, 8X32	E2	CAP, RR. FORK END	F23	CLIP, TUBE (B7)	F18
BOLT, SWINGARM PIVOT	F23	CAP, WEDGE BASE BULB	F26	CLIP, TUBE (B7)	F14
BOLT, TORX, 8X25	F9	CARBURETOR ASSY. (AVK5AD A)	E19	CLIP, TUBE (B8)	F14
BOLT-WASHER, 6X12	F31	CASE ASSY., UNDER	F2	CLIP, TUBE (C11)	F31
BOOT B	F12	CASE, BATTERY	F28	CLIP, TUBE (C12)	F17
BOOT B	F9	CASE, DRIVE CHAIN	F23	CLIP, TUBE (C9)	F14
BOOT COMP.	F4	CASE, L. FR. BOTTOM	F8	COCK ASSY., FUEL AUTO	F14
BOOT COMP.	F11	CASE, R. FR. BOTTOM	F8	COIL ASSY., IGNITION	F29
BOOT, HEADLIGHT BRACKET	F16	CASE, SUB AIR CLEANER	F17-1	COLLAR A, HANDLE SETTING	F5
BOOT, PIN BUSH	F12	CASE, SUB AIR CLEANER ASSY	F17	COLLAR B, HANDLE SETTING	F5
BOOT, PIN BUSH	F9	CASE, THERMOSTAT	F31	COLLAR, 5X2.0	F27
BOOTS, BODY COVER	F31	CATCH COMP., SEAT	F15	COLLAR, 6.2X12	F31
BOX, L. UTILITY	F35	CENTER COMP., CLUTCH	E9	COLLAR, CHAIN SLIDER	F23
BOX, R. UTILITY	F35	CHAIN, CAM (90L)	E4	COLLAR, CHANGE SWITCH	E14
BRACKET SUB ASSY., FR.	F9	CHAIN, DRIVE (428-116)	F23	COLLAR, FR. AXLE DISTANCE	F10
BRACKET SUB ASSY., RR. CALIPER	F12	CHAMBER SET, FLOAT	E19	COLLAR, FR. FENDER	F7
BULB, HEADLIGHT (12V 35/35W)	F1	CIRCLIP	F4	COLLAR, FR. FENDER	F15
BULB, TAILLIGHT (12V 18/5W)	F27	CIRCLIP	F11	COLLAR, FR. WHEEL SIDE	F10
BULB, WEDGE BASE (T10) (12V 3.4W)	F26	CIRCLIP, EXTERNAL, 15MM	F20	COLLAR, HORN SETTING	F29
BULB, WINKER (12V 10W)	F27	CIRCLIP, EXTERNAL, 17MM	E16	COLLAR, KICK SPRING	E18
BULB, WINKER (12V 10W)	F26	CIRCLIP, EXTERNAL, 28MM	E15	COLLAR, L. RR. WHEEL SIDE	F13
BUSH, 15MM	E16	CIRCLIP, INTERNAL, 22MM	E6	COLLAR, MUFFLER GUARD	F19
BUSH, 20MM	E16	CIRCLIP, INTERNAL, 35MM	E2	COLLAR, MUFFLER MOUNTING	F19
(C)		CLAMP, MASTER CYLINDER OIL HOSE	F11	COLLAR, RR. AXLE DISTANCE	F13
C.D.I. UNIT	F29	CLAMP, TUBE (D10.5)	F17	COLLAR, RR. WHEEL SIDE	F13
CABLE COMP., CHOKE	F3	CLAMP, TUBE (D29)	F17	COLLAR, STARTER REDUCTION	E10
CABLE COMP., CLUTCH	F3	CLAMP, WATER HOSE	E6	COLLAR, TAILLIGHT MOUNTING	F25
CABLE COMP., THROTTLE	F3	CLAMP, WATER HOSE	F31	COLLAR, TAILLIGHT MOUNTING	F27
CABLE, SEAT LOCK	F15	CLAMPER A, SPEEDOMETER CORD	F10	CONNECTOR	F11
CABLE, STARTER MOTOR	E13	CLAMPER B, BRAKE HOSE	F4	CONTACT ASSY., CHANGE SWITCH	E14
CALIPER SUB ASSY., R. FR.	F9	CLAMPER B, SPEEDOMETER CORD	F10	COTTER, VALVE	E3
CALIPER SUB ASSY., RR. BRAKE	F12	CLAMPER, A.C. GENERATOR CORD	E12	COUNTERSHAFT	E16
CAMSHAFT COMP.	E3	CLAMPER, BRAKE HOSE	F4	COVER ASSY., CYLINDER HEAD	E1
CAP ASSY., NOISE SUPPRESSOR	F29	CLAMPER, RR. BRAKE HOSE	F11	COVER COMP., R. CRANKCASE	E6
CAP COMP., RADIATOR	F31	CLAMPER, WIRE	E6	COVER SET, BODY CENTER	F34
CAP, 30MM	E11	CLIP, BREATHING TUBE	F18	COVER, AIR INJECTION CONTROL VALVE	F18
CAP, A.C. GENERATOR	E11	CLIP, KICK STARTER ARM	F20	COVER, BATTERY	F28
CAP, BLEEDER	F12	CLIP, OIL DRAIN TUBE	F17	COVER, CHANGE PEDAL	F20
CAP, BLEEDER	F9	CLIP, OIL DRAIN TUBE	F18	COVER, COMP L REAR	E11
CAP, FUEL FILLER	F14	CLIP, PISTON PIN, 13MM	E15	COVER, EX. PIPE	F19
		CLIP, SUB TANK HOSE	F18	COVER, HANDLE LOWER	F5

INDEXS DESCRIPTION

Description	Block No.	Description	Block No.	Description	Block No.
COVER, HANDLE UPPER	F5	DOWEL PIN, 8X16	E6	GASKET, R. COVER	E6
COVER, HEADLIGHT UPPER	F1	DRIVER, SCREW (NO.2 + -)	F32	GASKET, TENSIONER LIFTER	E5
COVER, L. CRANKCASE	E11	DRUM, GEARSHIFT	E17	GASKET, WATER PUMP COVER	E7
COVER, L. PIVOT	F16	DUST SEAL	F8	GAUGE, OIL LEVEL	E6
COVER, L. VISOR	F1	DUST SEAL, 23X37X7	F10	GEAR A, B, C, BALANCER DRIVEN (43T)	E15
COVER, R. PIVOT	F16	DUST SEAL, 27X40X4.5	F13	GEAR A, PRIMARY DRIVE (20T) (WHITE)	E9
COVER, R. VISOR	F1	DUST SEAL, STEERING HEAD	F6	GEAR B, PRIMARY DRIVE (20T) (BLUE)	E9
COVER, REED VALVE	E1			GEAR C, PRIMARY DRIVE (20T) (YELLOW)	E9
COVER, SEAT LOCK CABLE	F15	(E)		GEAR COMP., STARTING DRIVEN (53T)	E10
COVER, SUB AIR CLEANER	F17	ELEMENT COMP., AIR CLEANER	F17	GEAR, COUNTERSHAFT FIFTH (24T)	E16
COVER, SUB AIR CLEANER	F17-1	EMBLEM, PRODUCT	F2	GEAR, COUNTERSHAFT FOURTH (23T)	E16
COVER, THERMOSTAT	F31	E-RING, 6MM	E8	GEAR, COUNTERSHAFT LOW (37T)	E16
COVER, WATER PUMP	E7			GEAR, COUNTERSHAFT SECOND (32T)	E16
COWL, L. FR. UPPER	F34	(F)		GEAR, COUNTERSHAFT THIRD (25T)	E16
COWL, L. MIDDLE	F33	FAN COMP., COOLING	F31	GEAR, MAINSHAFT FIFTH (26T)	E16
COWL, L. SIDE	F16	FENDER SET, RR. (WL) *TYPE1*	F27	GEAR, MAINSHAFT FOURTH (21T)	E16
COWL, R. FR. SIDE	F16	FENDER, FR.	F7	GEAR, MAINSHAFT SECOND (17T)	E16
COWL, R. FR. UPPER	F34	FENDER, RR. INNER	F25	GEAR, MAINSHAFT THIRD (18T)	E16
COWL, R. MIDDLE	F33	FILTER COMP., AIR	F18	GEAR, OIL PUMP DRIVEN (23T)	E8
COWL, R. RR. SIDE	F16	FILTER, SUB AIR CLEANER	F17-1	GEAR, STARTER REDUCTION (13T/5)	E10
COWL, RR. CENTER	F16	FLANGE SUB ASSY., DRIVEN	F13	GEAR, WATER PUMP DRIVEN (23T)	E7
COWL, UNDER	F33	FLOAT SET	E19	GRIP	F32
CRANKCASE COMP., L.	E14	FLYWHEEL COMP.	E12	GRIP COMP., THROTTLE	F3
CRANKCASE COMP., R.	E14	FORK ASSY., L. FR.	F8	GRIP, L. HANDLE	F3
CRANKSHAFT COMP.	E15	FORK ASSY., R. FR.	F8	GROMMET, AIR CLEANER CASE	F31
CUP COMP., OIL	F11	FORK, CENTER GEARSHIFT	E17	GROMMET, AIR CLEANER CASE	F30
CUSHION ASSY., RR.	F24	FORK, L. GEARSHIFT	E17	GROMMET, AIR CLEANER CASE	F35
CUSHION, C.D.I. UNIT	F29	FORK, R. GEARSHIFT	E17	GUARD, EX. PIPE	F19
CYLINDER COMP.	E5	FUEL UNIT	F14	GUIDE, CAM CHAIN	E4
CYLINDER SET, MASTER	F4	FUSE, BLADE (10A)	F29	GUIDE, CLUTCH OUTER	E9
CYLINDER SUB ASSY., RR. BRAKE MASTER	F11	FUSE, BLADE (10A)	F28	GUIDE, EX. VALVE (O.S.)	E2
		FUSE, BLADE (15A)	F29		
		FUSE, BLADE (15A)	F28		
(D)		(G)		(H)	
DAMPER SET, WHEEL	F13	GARNISH, L. SIDE	F16	HARNESS, WIRE	F29
DIAPHRAGM	F4	GARNISH, R. SIDE	F16	HEAD COMP., CYLINDER	E2
DIAPHRAGM	F11	GASKET	F26	HEADLIGHT UNIT	F1
DISK, CLUTCH FRICTION	E9	GASKET SET	E19	HINGE COMP., SEAT	F15
DISK, FR. BRAKE	F10	GASKET, BYSTARTER	E19	HINGE, UTILITY BOX	F34
DISK, RR. BRAKE	F13	GASKET, CYLINDER	E5	HOLDER COMP., CAMSHAFT	E2
DOWEL PIN, 10X12	E1	GASKET, CYLINDER HEAD	E2	HOLDER SET, BRUSH	E13
DOWEL PIN, 10X12	E2	GASKET, EX. PIPE	F19	HOLDER, L. MAIN STEP	F21
DOWEL PIN, 10X12	E5	GASKET, EX. PIPE	F19	HOLDER, L. PILLION STEP	F21
DOWEL PIN, 8X12	E11	GASKET, EX. PIPE	F19	HOLDER, MASTER CYLINDER	F4
DOWEL PIN, 8X12	E8	GASKET, FLOAT CHAMBER	E19	HOLDER, R. MAIN STEP	F21
DOWEL PIN, 8X12	E14	GASKET, HEAD COVER	E1	HOLDER, R. PILLION STEP	F21
		GASKET, L. COVER	E11		

INDEX DESCRIPTION

Description	Block No.	Description	Block No.	Description	Block No.
HOOK, MAIN STAND SPRING	F22	LEVER, CHOKE	F5	NUT, LOCK	F3
HORN COMP.(HIGH)	F29	LEVER, L. STEERING HANDLE	F3	NUT, LOCK, 14MM	E9
HOSE A, RADIATOR	F31	LEVER, R. STEERING HANDLE	F4	NUT, SPECIAL FLANGE, 12MM	F23
HOSE B, RADIATOR	F31	LID, UTILITY BOX COVER	F34	NUT, SPECIAL, 6MM	F23
HOSE C, RADIATOR	F31	LIFTER ASSY., TENSIONER	E5	NUT, SPRING, 4MM	F1
HOSE COMP., FR. BRAKE	F4	LIGHT ASSY., RR. COMBINATION (12V 18/5W)	F27	NUT, STEERING STEM LOCK	F6
HOSE COMP., RR. BRAKE	F11	LOCK, UTILITY BOX	F34	NUT, TAPPET ADJUSTING	E3
HOSE COMP., RR. BRAKE MASTER CYLINDER	F11	(M)		NUT, TOOTHED, 3MM	F31
HOSE, RESERVE TANK	F31	MAINSHAFT, TRANSMISSION (12T)	E16	NUT, U, 10MM	F24
HOSE, WATER	E6	MARK, BATTERY CAUTION	F36	NUT, U, 10MM	F5
HOUSING, UNDER THROTTLE	F3	MASTER CYLINDER ASSY., FR.	F4	NUT, U, 10MM	F13
HOUSING, UPPER THROTTLE	F3	MAT, UTILITY BOX	F35	NUT, U, 12MM	F10
(I)		METER COMP., COMBINATION	F2	NUT, U, 12MM	F13
IMPELLER, WATER PUMP	E7	MIRROR ASSY. L. BACK	F3	NUT-WASHER, 6MM	E13
INSULATOR, CARBURETOR	E2	MIRROR ASSY. R. BACK	F3	(O)	
(J)		MOTOR ASSY., COOLING FAN	F31	OIL SEAL, 12X18X4	E6
JET, MAIN, #108	E19	MOTOR ASSY., STARTING	E13	OIL SEAL, 12X20X5	E7
JET, NEEDLE	E19	MUFFLER COMP.	F19	OIL SEAL, 12X20X5	E6
JET, SLOW, #35	E19	(N)		OIL SEAL, 12X22X7	E17
JOINT SET	E19	NEEDLE COMP., JET	E19	OIL SEAL, 16X28X7	E6
JOINT, BRAKE ROD	F11	NUT C, CLIP, 6MM	F1	OIL SEAL, 20X34X7	E16
JOINT, DRIVE CHAIN	F23	NUT C, CLIP, 6MM	F34	OIL SEAL, 26X37X6	F13
JOINT, KICK ARM	F20	NUT, CLIP, 5MM	F33	ORIFICE, 1.8	E14
(K)		NUT, CLIP, 5MM	F25	O-RING	F8
KEY SET	F29	NUT, CLIP, 5MM	F16	O-RING	F14
KEY, BLANK (90KEYTOP2REPODER)	F29	NUT, CLIP, 5MM	F26	O-RING	E13
KEY, SEAT LOCK	F15	NUT, CLIP, 5MM	F27	O-RING, 1.3X4.3	E19
KEY, WOODRUFF, 4MM	E15	NUT, FLANGE, 10MM	F30	O-RING, 1.5X9.5	E5
KEY, WOODRUFF, 4MM	E15	NUT, FLANGE, 12MM	E12	O-RING, 13.5X1.4	F31
(L)		NUT, FLANGE, 6MM	F4	O-RING, 13.8X2.5	E11
LABEL, COOLANT INFORMATION	F36	NUT, FLANGE, 6MM	F15	O-RING, 14.8X2.4	F11
LABEL, DRIVE CAUTION	F36	NUT, FLANGE, 6MM	F3	O-RING, 16.5X2.5	E14
LABEL, ENGINE STARTER	F36	NUT, FLANGE, 8MM	F19	O-RING, 18X3	E6
LABEL, FUEL	F36	NUT, HEX. CAP, 8MM	F19	O-RING, 21.5X2	E14
LABEL, TIRE & DRIVE CHAIN	F36	NUT, HEX., 10MM	F22	O-RING, 24.4X3.1	E13
LABEL, VISOR CAUTION	F36	NUT, HEX., 10MM	F3	O-RING, 30MM	E11
LENS	F2	NUT, HEX., 12MM	F21	O-RING, 40.5X3	F13
LENS, L. FR. WINKER	F26	NUT, HEX., 6MM	F14	OUTER COMP., CLUTCH	E9
LENS, R. FR. WINKER	F26	NUT, HEX., 6MM	F15	OUTER COMP., STARTING CLUTCH	E10
LENS, RR. COMBINATION LIGHT	F27	NUT, HEX., 6MM	F23	(P)	
LENS, WINKER L, RR	F27	NUT, HEX., 8MM	E2	PACKING, BASE	F14
LENS, WINKER R, RR	F27	NUT, HEX., 8MM	F3	PACKING, DRAIN COCK, 12.5X20	E14
LEVER COMP., CLUTCH	E6	NUT, HEX., 8MM	F3	PACKING, FUEL FILLER CAP	F14
		NUT, HEX., 8MM	F11	PACKING, PROTECTOR	F19

INDEXS DESCRIPTION

Description	Block No.	Description	Block No.	Description	Block No.
PAD SET, FR.	F9	PLATE, DIAPHRAGM	F11	ROD, TIE	F20
PAD SET, RR.	F12	PLATE, KICK STOPPER	E18	ROLLER, 3X8.5	E17
PEDAL COMP., RR. BRAKE	F20	PLATE, MAIN STEP LOWER	F21	ROLLER, 4X23.8	E7
PEDAL, GEAR CHANGE	F20	PLATE, PILLION STEP SIDE	F21	ROLLER, 4X23.8	E8
PIECE, CHANGE SWITCH DRIVE	E17	PLATE, R. COVER	E6	ROTOR, OIL PUMP INNER	E8
PIECE, OIL LOCK	F8	PLATE, SPRING SETTING	F20	ROTOR, OIL PUMP OUTER	E8
PIN C, PILLION STEP	F21	PLATE, TENSIONER SETTING	E4	RUBBER A, HANDLE WEIGHT	F5
PIN D, JOINT	F11	PLUG, BREATHER TUBE	F17	RUBBER A, TAILLIGHT MOUNTING	F25
PIN, HANGER	F12	PLUG, PIN	F9	RUBBER A, TAILLIGHT MOUNTING	F27
PIN, HANGER	F9	PLUG, PIN	F12	RUBBER B, MOUNTING	F1
PIN, PISTON	E15	PLUG, SPARK (CR8E)	E2	RUBBER B, SEAT MOUNTING	F15
PIN, SHIFT RETURN SPRING	E17	PLUG, SPARK (U24ESR-N)	E2	RUBBER BUSH, SWINGARM PIVOT	F23
PIN, SPLIT, 1.6X15	F21	PLUNGER, CAM SETTING	E2	RUBBER C, SEAT SETTING	F15
PIN, SPLIT, 2.0X12	F11	PROTECTOR	F4	RUBBER, AIR CLEANER WATER GUARD	F30
PIN, SPLIT, 2.0X15	F20	PUMP ASSY., OIL	E8	RUBBER, AIR INJECTION CONTROL VALVE	F18
PIN, SPLIT, 3.0X25	F22			RUBBER, BALANCER DUMPER	E15
PIN, SPRING, 2X10	F11	(R)		RUBBER, COWL SETTING	F33
PINION, KICK STARTER (22T)	E18	RACE, STEERING BOTTOM BALL	F6	RUBBER, GEAR CHANGE	F20
PIPE COMP., EX.	F19	RACE, STEERING BOTTOM CONE	F6	RUBBER, MAIN STAND STOPPER	F15
PIPE COMP., FR. FORK	F8	RACE, STEERING TOP BALL	F6	RUBBER, MAIN STEP	F21
PIPE COMP., STEERING HANDLE	F5	RACE, STEERING TOP CONE	F6	RUBBER, MOUNTING	E1
PIPE, CP	F1	RADIATOR COMP.	F31	RUBBER, MUFFLER MOUNTING	F19
PIPE, MAIN STAND PIVOT	F22	RAIL, RR. GRAB	F15	RUBBER, PILLION STEP	F21
PIPE, SEAT	F8	RATCHET, KICK STARTER	E18	RUBBER, PROTECTOR	F35
PISTON	E15	RECTIFIER ASSY., SILICON	F29	RUBBER, PROTECTOR MOUNTING	F19
PISTON	F12	RECTIFIER COMP., REGULATE	F29	RUBBER, R. COVER	E6
PISTON (0.25)	E15	RELAY COMP., STARTER	F29	RUBBER, RADIATOR MOUNTING	F31
PISTON (0.50)	E15	RELAY COMP., STARTER	F29	RUBBER, STAND STOPPER	F22
PISTON (0.75)	E15	RELAY COMP., WINKER	F29	RUBBER, TAILLIGHT BRACKET	F29
PISTON (1.00)	E15	RESONATOR	F17		
PISTON COMP., VACUUM	E19	RETAINER, FUEL UNIT	F14	(S)	
PISTON SET, MASTER CYLINDER	F11	RETAINER, VALVE SPRING	E3	SCREEN SET, FUEL STRAINER	F14
PIVOT, SHIFT DRUM STOPPER ARM	E17	RING	E13	SCREEN, OIL FILTER	E14
PLATE A2, FIXING	E16	RING SET, PISTON (0.25)	E15	SCREW SET A	E19
PLATE ASSY., REFLECTING	F2	RING SET, PISTON (0.50)	E15	SCREW SET B	E19
PLATE COMP., GEARSHIFT DRUM STOPPER	E17	RING SET, PISTON (0.75)	E15	SCREW, 6X12	F19
PLATE SET, STAY	E19	RING SET, PISTON (1.00)	E15	SCREW, BLEEDER	F12
PLATE SET, VALVE	E19	RING SET, PISTON (STD.)	E15	SCREW, BLEEDER	F9
PLATE, AIR CLEANER CONNECTING TUBE	F17	RING, HANDLE WEIGHT SNAP	F5	SCREW, FLAT, 4X12	F4
PLATE, BEARING HOLDER	E16	RING, OIL SEAL STOPPER	F8	SCREW, FLAT, 4X45	F11
PLATE, CLUTCH	E9	RING, PISTON	F8	SCREW, OVAL, 6X50	F5
PLATE, CLUTCH LIFTER	E9	RING, STOPPER	F8	SCREW, PAN, 4X10	E19
PLATE, CLUTCH PRESSURE	E9	RING, STOPPER	F12	SCREW, PAN, 4X12	E19
PLATE, DIAPHRAGM	F4	ROD COMP., PUSH	F11	SCREW, PAN, 4X8	E19
		ROD, CLUTCH LIFTER	E9	SCREW, PAN, 5X10	F5

INDEX DESCRIPTION

Description	Block No.	Description	Block No.	Description	Block No.
SCREW, PAN, 5X11.5	F25	SEAL SET, PISTON	F12	SPRING, LOCK KEY SETTING	F15
SCREW, PAN, 5X11.5	F16	SEAL, AIR CLEANER	F17	SPRING, PAD	F12
SCREW, PAN, 5X11.5	F1	SEAL, MECHANICAL	E7	SPRING, PAD	F9
SCREW, PAN, 5X11.5	F34	SEAL, UTILITY BOX	F34	SPRING, PLUNGER	E2
SCREW, PAN, 5X12	E19	SEAL, VALVE STEM	E3	SPRING, RATCHET	E18
SCREW, PAN, 5X13	F27	SEAT B, SPRING	F8	SPRING, REBOUND	F8
SCREW, PAN, 5X25	F3	SEAT COMP., DOUBLE	F15	SPRING, SEAT LOCK	F15
SCREW, PAN, 5X30	F17	SEAT, RATCHET SPRING	E18	SPRING, SIDE STAND	F22
SCREW, PAN, 6X6	E5	SEAT, VALVE SPRING	E3	SPRING, STOP SWITCH	F20
SCREW, SIDE STAND PIVOT	F22	SENSOR ASSY., SPEEDOMETER	F10	SPRING, THRUST	E15
SCREW, SPECIAL PAN, 5MM	F1	SET RING, 20MM	E16	SPRING, VALVE INNER	E3
SCREW, SPECIAL PAN, 5MM	F5	SHAFT, GEARSHIFT FORK	E17	SPRING, VALVE OUTER	E3
SCREW, SPECIAL, 5MM	F1	SHAFT, REDUCTION GEAR	E10	SPROCKET COMP., FINAL DRIVEN (42T)	F13
SCREW, SPECIAL, 5MM	F34	SHAFT, ROCKER ARM	E3	SPROCKET, CAM (34T)	E4
SCREW, SPECIAL, 6MM	F34	SHAFT, WATER PUMP	E7	SPROCKET, DRIVE (14T)	E16
SCREW, TAPPET ADJUSTING	E3	SHROUD COMP.	F31	STAND COMP., MAIN	F22
SCREW, TAPPING, 3X14	F2	SHROUD, L. RADIATOR	F33	STATOR COMP.	E12
SCREW, TAPPING, 4X10	F16	SHROUD, R. RADIATOR	F33	STAY COMP., HEADLIGHT	F30
SCREW, TAPPING, 4X12	F34	SHUTTER SET, KEY (93KEYTOP1REORDER)	F29	STAY, AIR INJECTION CONTROL VALVE	F18
SCREW, TAPPING, 4X12	F33	SLEEVE, RR. WHEEL	F13	STAY, FR. FENDER	F7
SCREW, TAPPING, 4X12	F1	SLIDER, CHAIN	F23	STAY, HORN	F6
SCREW, TAPPING, 4X12	F5	SOCKET COMP., HEADLIGHT	F1	STAY, L. UNDER COWL	F33
SCREW, TAPPING, 4X12	F26	SOCKET COMP., L. WINKER	F26	STAY, R. UNDER COWL	F33
SCREW, TAPPING, 4X12	F27	SOCKET COMP., R. WINKER	F26	STAY, RADIATOR LOWER	F31
SCREW, TAPPING, 4X12	F35	SPACER, RR. CALIPER	F23	STAY, SEAT LOCK CABLE	F15
SCREW, TAPPING, 4X12	F5	SPANNER, 10X12	F32	STAY, SPEEDOMETER CORD	F10
SCREW, TAPPING, 4X16	F27	SPANNER, 14X17	F32	STAY, VISOR	F1
SCREW, TAPPING, 4X20	F5	SPEEDOMETER ASSY. (KPH)	F2	STAY, WIRE	E19
SCREW, TAPPING, 4X25	F17	SPINDLE COMP., GEARSHIFT	E17	STEM SUB ASSY., STEERING	F6
SCREW, TAPPING, 5X12	F16	SPINDLE, KICK STARTER	E18	STOPPER COMP., GEARSHIFT DRUM	E17
SCREW, TAPPING, 5X12	F2	SPRING ASSY., MAIN STAND	F22	STOPPER, CABLE	F5
SCREW, TAPPING, 5X16	F1	SPRING, BALANCER GEAR	E15	STRIPE SET BURNING RED	F37
SCREW, TAPPING, 5X20	F17	SPRING, BRAKE PEDAL	F20	STRIPE SET COSMIC BLACK	F37
SCREW, TAPPING, 5X25	F23	SPRING, CARBON BRUSH	E13	STRIPE SET HORNET GOLD	F37
SCREW, TAPPING, 6X12	F29	SPRING, CLUTCH	E9	STRIPE SET LIGHTING SILVER	F37
SCREW, U-LOCK FLAT, 6X12	F34	SPRING, CLUTCH LEVER	E6	SUB HARNESS, SPEEDOMETER	F29
SCREW, VISOR SPECIAL SETTING	F16	SPRING, COMPRESSION COIL	E19	SWINGARM ASSY, RR	F23
SCREW, VISOR SPECIAL SETTING	F31	SPRING, FR. FORK	F8	SWITCH ASSY., COMBINATION & LOCK	F29
SCREW-WASHER, 4X12	F11	SPRING, GEARSHIFT ARM	E17	SWITCH ASSY., FR. STOP	F4
SCREW-WASHER, 4X12	F4	SPRING, GEARSHIFT DRUM STOPPER	E17	SWITCH ASSY., RR. STOP	F20
SCREW-WASHER, 5X12	E19	SPRING, GEARSHIFT RETURN	E17	SWITCH ASSY., THERMO	F31
SCREW-WASHER, 5X16	F27	SPRING, KICK RETURN	E18	SWITCH ASSY., WINKER	F5
SEAL SET, FR. FORK	F8	SPRING, KICK STARTER STOPPER	F20	SWITCH COMP., FR. LEVER	F5
SEAL SET, PISTON	F9	SPRING, LOCK KEY SETTING	F34	SWITCH UNIT, DIMMER	F5

INDEX DESCRIPTION

Description	Block No.	Description	Block No.	Description	Block No.
SWITCH UNIT, HORN	F5	WASHER, 14MM	E9		
SWITCH UNIT, LIGHTING	F5	WASHER, 20MM	E9		
SWITCH UNIT, STARTING	F5	WASHER, 28.2X45X1.0	E15		
(T)		WASHER, 6.1MM	E17		
TANK COMP., FUEL	F14	WASHER, 7X13X1.2	E7		
TANK, RESERVE	F31	WASHER, 8MM	E2		
TENSIONER, CAM CHAIN	E4	WASHER, CHANGE PEDAL	F20		
TERMINAL SET, BRUSH	E13	WASHER, NYLON, 7MM	F20		
THERMO UNIT	F31	WASHER, OIL BOLT	F11		
THERMOSTAT ASSY.	F31	WASHER, OIL BOLT	F4		
THREAD COMP., STEERING HEAD TOP	F6	WASHER, PLAIN	F5		
TIRE, RR. (70/90 17M/C 38P)	F10	WASHER, PLAIN, 17MM	E9		
TIRE, RR. (80/90-17M/C 44P)	F13	WASHER, PLAIN, 6MM	F19		
TOP	E19	WASHER, PLAIN, 6MM	F21		
TUBE A, AIR INJECTION CONTROL VALVE	F18	WASHER, PLAIN, 8MM	F19		
TUBE B, AIR INJECTION CONTROL VALVE	F18	WASHER, RR. AXLE	F13		
TUBE COMP., AIR VENT	E19	WASHER, SEALING, 6MM	E14		
TUBE, 12X100	F18	WASHER, SEAT LOCK	F34		
TUBE, 4.5X450	E19	WASHER, SPECIAL, 12MM	E16		
TUBE, 5X150	E6	WASHER, SPECIAL, 14MM	E18		
TUBE, 8X180	F17-1	WASHER, SPECIAL, 24X12X2.3	E12		
TUBE, AICV PB	F18	WASHER, SPECIAL, 8MM	F8		
TUBE, AIR CLEANER CONNECTING	F17	WASHER, SPLINE, 17MM	E16		
TUBE, AIR CLEANER DRAIN	F17	WASHER, SPLINE, 20MM	E16		
TUBE, FUEL	F14	WASHER, SPRING, 6MM	F19		
TUBE, MISSION BREATHER	F17	WASHER, STEERING STEM NUT	F6		
TUBE, PRESSURE	F14	WASHER, THRUST, 15MM	E16		
TUBE, TIRE (70/90-17)	F10	WASHER, THRUST, 20MM	E16		
TUBE, TIRE (80/90-17)	F13	WASHER, THRUST, 6MM	E17		
TUBE, VINYL, 7X11X650	F31	WASHER, WAVE	F9		
TUBE, VINYL, 8X12X320	F17	WASHER, WAVE	F12		
(V)		WASHER, WAVE	F5		
VALVE ASSY., AIR INJECTION CONTROL	F18	WASHER, WAVE, 15MM	F20		
VALVE COMP., FLOAT	E19	WEIGHT A, STEERING HANDLE	F5		
VALVE COMP., REED	E1	WEIGHT B, STEERING HANDLE	F5		
VALVE SET, AIR CUT	E19	WEIGHT COMP., BALANCER	E15		
VALVE SET, STARTER	E19	WHEEL, RR.	F13		
VALVE, EX.	E3	WHEEL SUB ASSY., FR.	F10		
VALVE, IN.	E3	WRENCH, SPARK PLUG	F32		
VISOR SET, FR.	F1				
(W)					
WASHER A, 6MM	E7				
WASHER, 12MM	E7				
WASHER, 13X20	F20				